



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE GLEQ2170KS. You'll find the answers to all your questions on the FRIGIDAIRE GLEQ2170KS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FRIGIDAIRE GLEQ2170KS**  
**User guide FRIGIDAIRE GLEQ2170KS**  
**Operating instructions FRIGIDAIRE GLEQ2170KS**  
**Instructions for use FRIGIDAIRE GLEQ2170KS**  
**Instruction manual FRIGIDAIRE GLEQ2170KS**


---

## **Use & Care Guide**

Gas & Electric Dryer

## **Guia de Uso y Cuidado**

Secadora a Gas y Eléctrica

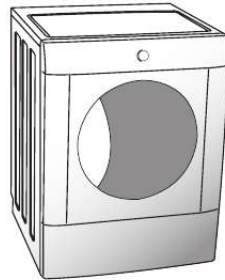

www.frigidaire.com

PAI 137118100A (0901)



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2170KS user guide](http://yourpdfguides.com/dref/2936246)  
<http://yourpdfguides.com/dref/2936246>

**Manual abstract:**

*frigidaire.com P/N 137118100A (0901) Table of Contents Product Registration.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*...2 Important Safety Instructions .....*

.....  
.....  
.....

.....  
.....

*.. 2-4 Drying Procedures ...*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..4 Features .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....

*..5 Care and Cleaning ...*

.....  
.....  
.....  
.....  
.....

*.. 5-6 Common Drying Problems ...*

.....  
.....  
.....  
.....  
.....

*....6 Avoid Service checklist .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

..7 Warranty .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

8 Español .....

.....  
.....  
.....

.....  
.....  
.....

.....16 Product Record Read and Save These Instructions Record Your Model and Serial Numbers The model and serial numbers of your dryer are found on the dryer serial plate located of the left side of the door opening.

Record and retain these numbers. Read all instructions before using this appliance. This book contains valuable information about: · Operation · Care · Service Keep it in a safe place. This Use and Care Guide provides general operating instructions for your dryer. It also contains information about features for several other models.

Your dryer may not have every feature included. Use the dryer only as instructed in this Use & Care Guide and the Operating Instructions included with your dryer. Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_

Important Safety Instructions Recognize safety symbols, words and labels Safety items throughout this manual are labeled with a WARNING or CAUTION based on the risk type as described below: This symbol alerts you to situations that may cause serious body harm, death or property damage. This symbol alerts you to situations that may cause bodily injury or property damage. For your safety the following information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. WHAT TO DO IF YOU SMELL GAS: ·Do not try to light any appliance. ·Do not touch any electrical switch; do not use any phone in your building. ·Clear the room, building or area of all occupants.

·@@Follow the gas supplier's instructions. ·@@@@@Failure to follow this warning can cause serious injury, fire or death. To reduce the risk of fire, electrical shock, or injury to persons when using this dryer, comply with the basic warnings listed below. Failure to comply with these warnings could result in serious personal injuries. You can be killed or seriously injured if you don't follow these Important Safety Instructions: PREVENT FIRE ·Do not dry items that have been previously cleaned in, soaked in, or spotted with gasoline, cleaning solvents, kerosene, waxes, etc. Do not store these items on or near the dryer.

These substances give off vapors that could ignite or explode. ·Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. ·Do not dry articles containing rubber, plastic or similar materials such as bras, galoshes, bath mats, rugs, bibs, baby pants, plastic bags and pillows that may melt or burn. Some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion. ·Clean the lint screen before or after each load. The interior of the dryer, lint screen housing and exhaust duct should be cleaned approximately every 18 months by qualified service personnel. An excessive amount of lint build-up in these areas could result in inefficient drying and possible fire. See Care and Cleaning. ·Do not operate the dryer if the lint screen is blocked, damaged or missing.

Fire hazard, overheating and damage to fabrics can occur. - FIRE HAZARD - A clothes dryer produces combustible lint. The dryer must be connected to an outdoors exhaust. ·@· Do not obstruct the flow of ventilating air. Do not stack or place laundry or throw rugs against the front or back of the dryer. ·Do not spray any type of aerosol into, on or near dryer at any time. ·Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product. ·Failure to comply with these warnings could result in fire, explosion, serious bodily injury and/or damage to the rubber or plastic parts of the dryer. PROTECT CHILDREN ·Do not allow children to play on or in the dryer. Close supervision of children is necessary when the dryer is used near children.

As children grow, teach them the proper, safe use of all appliances. ·Destroy the carton, plastic bag and other packing materials after the dryer is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads or plastic sheets can become airtight chambers. ·Keep laundry products out of children's reach. To prevent personal injury, observe all warnings on product labels. ·Before the dryer is removed from service or discarded, remove the dryer door to prevent accidental entrapment. ·Failure to comply with these warnings could result in serious personal injuries. 3 Important Safety Instructions, can't PREVENT INJURY ·To prevent shock hazard and assure stability during operation, the dryer must be installed and electrically grounded by a qualified service person in accordance with local codes. Installation instructions are packed in the dryer for the installer's reference.

*Refer to INSTALLATION INSTRUCTIONS for detailed grounding procedures. If the dryer is moved to a new location, have it checked and reinstalled by a qualified service person. · To prevent personal injury or damage to the dryer, the electrical power cord of a gas dryer must be plugged into a properly grounded and polarized 3-prong outlet. The third grounding prong must never be removed. Never ground the dryer to a gas pipe. Do not use an extension cord or an adaptor plug. · ALWAYS disconnect the dryer from the electrical supply before attempting any service or cleaning. Failure to do so can result in electrical shock or injury. · Do not use any type spray cleanser when cleaning dryer interior. Hazardous fumes or electrical shock could occur. · To prevent injury, do not reach into the dryer if the drum is moving. Wait until the dryer has stopped completely before reaching into the drum. PREVENT INJURY AND DAMAGE TO THE DRYER · All repairs and servicing must be performed by an authorized servicer unless specifically recommended in this Owner's Guide. Use only authorized factory parts. · Do not tamper with controls. · Do not install or store the dryer where it will be exposed to the weather. · A thermal limiter switch automatically turns off the motor in the unlikely event of an overheated situation (electric dryers only). A service technician must replace the thermal limiter switch after correcting the fault. · Failure to comply with these warnings could result in serious personal injuries. 1. Prepare load for drying. · Dry items of similar fabric, weight and construction in the same load.*



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2170KS user guide](http://yourpdfguides.com/dref/2936246)  
<http://yourpdfguides.com/dref/2936246>

To reduce the risk of fire, · Separate dark items from light-colored items. Separate items that shed electric shock or injury to persons, read the lint from those that attract lint. @@Repeat and Care Guide before operating your dryer. stain removal process and wash again before drying. Dryer heat may permanently set some stains. · Place delicate or small items in a mesh bag. @@Close zippers; fasten hooks and Velcro®-like fasteners. Tie strings and sashes to prevent snagging and tangling.

2. Check that the lint filter is clean and in place. 3. Load the dryer and close the door. · Load items loosely. The average wet load will fill the drum 1/3 to 1/2 full. @@@@Fill out the load with small and medium sized items. @@4. Select the appropriate cycle and settings for each load. · See Operating Instructions for your specific model.

5. Start the cycle. @@The dryer will stop when the door is opened. Allow the drum to come to a complete stop before reaching inside. · Close the door and press Start to resume the cycle.

6. When the cycle ends, remove items immediately and hang or fold. Clean the lint filter after every load. @@@@The door can be hinged on the right or left side. @@The weight should not exceed 10 lbs (4.

5 kg). @@@@The dryer must be connected to an outdoors exhaust. @@@@The filter is located at the bottom of the door opening.

Remove by pulling straight up. Remove the occurrences that are not the result of defective workmanship or materials in this dryer. @@House fuse blown or circuit breaker tripped. SOLUTION Make sure the plug fits tightly in wall outlet. Reset circuit breaker or replace fuse. Make sure electrical line is not overloaded and the dryer is on a separate circuit. Thermal limiter tripped.

Dryer runs but won't heat. There are 2 house fuses in the dryer circuit. If 1 of the 2 fuses is blown, the drum may turn but the heater will not operate. (electric models) Gas supply valve is not open (gas models). Dryer does not have enough air supply to support the burner flame (gas models). LP gas supply tank is empty or there has been a utility interruption of natural gas (gas models). Drying cycle takes too long, outside of the dryer feels too hot or smells hot. Lint filter is clogged with lint. Exhaust duct requirements have not been met. Call authorized service person for replacement.

Replace fuse. Check to make sure supply valve is open. See INSTALLATION INSTRUCTIONS for procedure. See INSTALLATION INSTRUCTIONS. Refill or replace tank.

Dryer should heat when utility service is restored. Make sure all lint has been removed from the dryer lint filter before starting each cycle. Exhaust duct must be at least 4 inches in diameter and made of rigid or semi-rigid metal. When in place, the duct must have no more than two 90° bends and must not exceed length listed in INSTALLATION INSTRUCTIONS. Electric dryer is connected to a 208 volt circuit.

Drying procedures have not been followed. Outside exhaust hood or exhaust duct may be clogged or restricted. High humidity. Excessive wrinkling. Dryer is overloaded. Items left in dryer too long. Insufficient sorting of items. Drying temperature too high. Scratching or chipping of the drum finish. Foreign objects such as coins, pins, clips or buttons are inside the dryer.

\* Permanently attached items such as belt buckles, zippers and fasteners may be hitting the inside of the drum.\* Drying time will be 20% longer than drying on a 240 volt circuit. See "Operating Instructions." Clean out any obstruction. Use a dehumidifier near the dryer. Do not overload. See "Operating Instructions." Remove items as soon as cycle ends. See "Operating Instructions." Follow fabric care label instructions.

Always remove foreign objects from pockets before laundering. Remove objects from drum and restart dryer. It may be necessary to sew a scrap of material securely around ornaments before drying to prevent scratching and damage to the dryer. \*Drum damage caused by foreign objects or permanently attached items is not covered by the warranty. 7 Major Appliance Warranty Information Your appliance is covered by a one year limited warranty.

For one year from your original date of purchase, Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions. Exclusions This warranty does not cover the following: 1. 2. 3. 4.

5. 6. 7. 8. 9. Products with original serial numbers that have been removed, altered or cannot be readily determined. Product that has been transferred from its original owner to another party or removed outside the USA or Canada. Rust on the interior or exterior of the unit. Products purchased "as-is" are not covered by this warranty. Food loss due to any refrigerator or freezer failures.

Products used in a commercial setting. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. Service calls to correct the installation of your appliance or to instruct you how to use your appliance. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory. 10. Service calls to repair or replace appliance light bulbs, air lters, water lters, other consumables, or knobs, handles, or other cosmetic parts. 11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska. 12.

Damages to the nish of appliance or home incurred during installation, including but not limited to oors, cabinets, walls, etc. 13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, res, or acts of God. **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR.**

**ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.**



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2170KS user guide](http://yourpdfguides.com/dref/2936246)  
<http://yourpdfguides.com/dref/2936246>

*THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. If You Need Service Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below. This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. @@@@;3 formas de contactar nos! @@Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. P.O.*

*Box 212378 Augusta, GA 30917 CANADA, CANADÁ Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. 5855 Terry Fox Way Mississauga, Ontario, Canada L5R 4C2 Or, O, Ou Visit Frigidaire's Web Site at: Visite la página de Frigidaire en Internet: Visitez le site Internet de Frigidaire au: <http://www.frigidaire.com> © 2005 Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. The Electrolux Group. The world's No. 1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use combined. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approximately USD 14 billion in more than 150 countries around the world. PRINTED IN USA .*



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLEQ2170KS user guide](http://yourpdfguides.com/dref/2936246)  
<http://yourpdfguides.com/dref/2936246>