



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE GLTF2940FE. You'll find the answers to all your questions on the FRIGIDAIRE GLTF2940FE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FRIGIDAIRE GLTF2940FE
User guide FRIGIDAIRE GLTF2940FE
Operating instructions FRIGIDAIRE GLTF2940FE
Instructions for use FRIGIDAIRE GLTF2940FE
Instruction manual FRIGIDAIRE GLTF2940FE

TUMBLE ACTION WASHER

Use & Care Guide

Machine à laver par culbutage

Guide de L'utilisateur



www.frigidaire.com

P/N 134849000A (0805)



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLTF2940FE user guide](http://yourpdfguides.com/dref/3258833)
<http://yourpdfguides.com/dref/3258833>

Manual abstract:

It also contains information about features for several other models. Your washer may not have every feature. Record Your Model and Serial Numbers included here. The model and serial numbers of your washer are found on Use the washer only as instructed in this Use and Care Guide the washer serial plate located at the top, inside of the door and the Operating Instructions included with your washer. opening. Record and retain these numbers. Read all instructions before using this appliance. This book Model Number _____ contains valuable information about Serial Number _____ · Operation · Care Purchase Date _____ · Service Keep it in a safe place. Pedestal A pedestal accessory, Model No. NLPWD15 (White), NLPWD15GB (Glacier Blue), NLPWD15P (Platinum) and NLPWD15E (Black), specifically designed for this washer may be used when elevating the washer for ease of use. Failure to use accessories certified by the manufacturer could result in personal injury, property damage or damage to the washer.

WASHER SAFETY Your safety and the safety of others is very important. We have provided many important safety messages in the Use and Care Guide, Operating Instructions, Installation Instructions and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you or others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING". These words mean: DANGER You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. 2 Important Safety Instructions Read all instructions before using this washer.

SAVE THESE INSTRUCTIONS You can be killed or seriously injured if you don't follow these Important Safety Instructions: ·Failure to comply with these warnings could result in serious personal injuries. Prevent Fire ·Do not wash items that have been previously cleaned in, soaked in, or spotted with gasoline, cleaning solvents, kerosene, cooking oils, waxes, etc. Do not store these items on or near the washer. These substances give off vapors or chemical reactions that could ignite or explode. ·Do not put oily or greasy rags or clothing on top of the washer. These substances give off vapors that could ignite the materials. ·Do not add gasoline, cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode. ·Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.**

If the hot water system has not been used for such a period, before using the washer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. Hydrogen gas is flammable; do not smoke or use an open flame during this time. ·Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance. ·Failure to comply with these warnings could result in fire, explosion, serious bodily injury and/or damage to the rubber or plastic parts of the washer. Protect Children ·Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children. As children grow, teach them the proper, safe use of all appliances. ·Destroy the carton, plastic bag and other packing materials after the washer is unpacked. Children might use them for play.

Cartons covered with rugs, bedspreads or plastic sheets can become airtight chambers. ·Keep laundry products out of children's reach. To prevent personal injury, observe all warnings on product labels. ·Before the washer is removed from service or discarded, remove the washer door to prevent accidental entrapment. ·Failure to comply with these warnings could result in serious personal injuries.

Prevent Injury ·To prevent shock hazard and assure stability during operation, the washer must be installed and electrically grounded by a qualified service person in accordance with local codes. Installation instructions are packed in the washer for installer's reference. Refer to **INSTALLATION INSTRUCTIONS** for detailed grounding procedures. If the washer is moved to a new location, have it checked and reinstalled by a qualified service person. ·To prevent personal injury or damage to the washer, the electrical power cord of the washer must be plugged into a properly grounded and polarized 3-prong outlet. The third grounding prong must never be removed. Never ground the washer to a gas pipe. Do not use an extension cord or an adaptor plug. ·Follow package directions when using laundry products. Incorrect usage can produce poisonous gas--resulting in serious injury or death. ·Do not combine laundry products for use in 1 load unless specified on the label. ·Do not mix chlorine bleach with ammonia or acids such as vinegar. ·To prevent serious personal injury and damage to the washer: ·All repairs and servicing must be performed by an authorized servicer unless specifically recommended in this Owner's Guide. Use only authorized factory parts. ·Do not tamper with controls.

·Do not install or store the washer where it will be exposed to the weather. ·Do not install on carpet. Install washer on a solid floor. It may be necessary to reinforce the floor to prevent vibration or movement. ·To reduce the risk of electric shock, disconnect this appliance from the power supply before attempting any user maintenance. Turning the controls to the OFF position does not disconnect this appliance from the power supply. ·To prevent injury, do not reach into the washer while parts are moving. Before loading, unloading or adding items, push in the cycle selector knob and allow the drum to coast to a complete stop before reaching inside. ·Failure to comply with these warnings could result in serious personal injuries. ·This washer is equipped with an electrical overload protector.

The motor will stop if it becomes overheated. The washer will automatically restart after a cool down period of up to 30 minutes, if the washer has not been manually turned off during this time. 3 Printed in U.S.A.

Important Safety Instructions (continued) Avoid fire hazard or electrical shock. Do not use an adaptor plug or extension cord or remove grounding prong from electrical power cord. Failure to follow this warning can cause serious injury, fire or death. Grounding type wall receptacle Do not under any circumstances, cut, remove, or bypass the grounding prong from this plug.



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLTF2940FE user guide](http://yourpdfguides.com/dref/3258833)
<http://yourpdfguides.com/dref/3258833>

CORRECT Use this way **ONLY** Power supply cord with 3-prong grounding plug Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acid or products containing ammonia.

These mixtures can produce dangerous fumes which can cause serious injury or death. Note: The instructions appearing in this Owner's Guide are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating and maintaining any appliance. Washing Procedures . . . Follow the guidelines below for preparing the wash load. Read the Operating Instructions for operating your specific model. Always read and follow fabric care and laundry product labels. To reduce the risk of fire, electrical shock, or injury to persons, read Important Safety Instructions before operating this washer. 1. Sort laundry into loads that can be washed together. Sort items by recommended water temperatures and wash time.

· Separate white, light, and colorfast items from dark and noncolorfast items. · Separate items which shed lint from items which attract lint. Permanent press, synthetic, knit and corduroy items will pick up lint from towels, rugs and chenille bedspreads. · Separate heavily soiled items from lightly soiled items. · Separate lacy, sheer and loosely knit items from sturdy items. · Do not machine wash items containing fiberglass. Small particles of fiberglass left in the drum may stick to fabrics in other loads and cause skin irritation. 2. Prepare items for washing. · Empty pockets.

· Brush off lint and dirt. Shake out rugs and beach towels. · Close zippers, fasten hooks, tie strings and sashes, and remove nonwashable trims and ornaments. · Remove pins, decorative buttons, belt buckles, and other objects which could be damaged. This also helps protect other items in the wash load.

· Mend rips and tears to prevent further damage during washing. · Place delicate items such as bras, shoulder pads, hosiery, and belts in a mesh bag to prevent tangling during the wash cycle. · Turn knit items inside out to prevent pilling. 3. Pretreat stains and heavy soil.

See Stain Removal for details. 4. Add laundry load to washer. · Combine large and small items in a load. Load large items first. Large items should not be more than half the total wash load. · Washing single items such as a sweater, towel or jeans may cause an out-of-balance load. Add 1 or 2 similar items to help balance the load. · Single heavy items such as a bedspread can be washed separately. · The washer can be fully loaded, but the items should not be tightly packed.

The door should close easily. Add laundry load to washer. Sort laundry into loads that can be washed together. Empty pockets. Place delicate items in a mesh bag. 4 5. Add detergent, bleach and fabric softener to automatic dispenser following these steps: A. **OPENING AND CLOSING THE DISPENSER DRAWER** · Slowly open the dispenser drawer by first sliding the safety latch to the right, then pulling the drawer out until it stops. · After adding laundry products, slowly close the dispenser drawer. Closing the drawer too quickly could result in early dispensing of bleach or fabric softener.

Note: From time to time you may see water in the bleach and fabric softener comparTo reduce the risk of fire or serious injury to persons or property, comply with the basic warnings listed below: · Read and comply with all instructions on stain removal products. · Keep stain removal products in their original labeled containers and out of children's reach. · Thoroughly wash any utensil used. · Do not combine stain removal products, especially ammonia and chlorine bleach. Dangerous fumes may result.

· Never wash items which have been previously cleaned in, washed in, soaked in or spotted with gasoline, dry cleaning solvents or other flammable or explosive substances because they give off vapors that could ignite or explode. · Never use highly flammable solvents, such as gasoline, inside the home. Vapors can explode on contact with flames or sparks. For successful stain removal: · Remove stains promptly. · Determine the kind of stain, then follow the recommended treatment in the stain removal chart below.

· To pretreat stains, use a prewash product, liquid detergent, or a paste made from granular detergent and water. · Use cold water on unknown stains because hot water can set stains. · Check care label instructions for treatments to avoid on specific fabrics. · Check for colorfastness by testing stain remover on an inside seam. · Rinse and wash items after stain removal. Follow fabric care label instructions. 6 Stain Removal **STAIN Adhesive tape, chewing gum, rubber cement Baby formula, dairy products, egg Beverages (coffee, tea, soda, juice, alcoholic beverages) Blood TREATMENT Apply ice. Scrape off excess. Place stain face down on paper towels. Saturate with prewash stain remover or nonflammable dry cleaning fluid.**

Use product containing enzymes to pretreat or soak stains. Soak for 30 minutes or more. Wash. Pretreat stain. Wash using cold water and bleach safe for fabric. Rinse with cold water. Rub with bar soap. Or, pretreat or soak with product containing enzymes. Wash using bleach safe for fabric. Scrape off surface wax.

Place stain face down between paper towels. Press with warm iron until wax is absorbed. Replace paper towels frequently. Treat remaining stain with prewash stain remover or nonflammable dry cleaning fluid. Hand wash to remove solvent.

Wash using bleach safe for fabric. Pretreat or soak in warm water using product containing enzymes. Wash using bleach safe for fabric. Pretreat with prewash stain remover or rub with bar soap. Candle wax, crayon Chocolate Collar or cuff soil, cosmetics Dye transfer on white fabric Grass Grease, oil, tar (butter, fats, salad dressing, cooking oils, car grease, motor oils) Ink Use packaged color remover.

Wash using bleach safe for fabric. Pretreat or soak in warm water using product containing enzymes. Wash using bleach safe for fabric. Scrape residue from fabric. Pretreat. Wash using hottest water safe for fabric. For heavy stains and tar, apply nonflammable dry cleaning fluid to back of stain. Replace towels under stain frequently. Rinse thoroughly. Wash using hottest water safe for fabric.

Some inks may be impossible to remove. Washing may set some inks. @@ Wash with chlorine bleach if safe for fabric. Or, soak in oxygen bleach and hot water before washing. Badly mildewed fabrics may be permanently damaged. Brush off dry mud. Pretreat or soak with product containing enzymes. Pretreat with prewash stain remover. Wash using bleach safe for fabric. May be impossible to remove.

Place stain face down on paper towels. Apply nail polish remover to back of stain.



**You're reading an excerpt. Click here to read official FRIGIDAIRE
GLTF2940FE user guide
<http://yourpdfguides.com/dref/3258833>**

Repeat, replacing paper towels frequently. Do not use on acetate fabrics. WATER BASED: Rinse fabric in cool water while stain is wet. Wash. Once paint is dry, it cannot be removed. OIL BASED AND VARNISH: Use solvent recommended on can label. Rinse thoroughly before washing. Use prewash stain remover or rub with bar soap.

Rinse. Wash using nonchlorine bleach in hottest water safe for fabric. For spots, use rust remover safe for fabric. @@Do not use chlorine bleach because it may intensify discoloration. LIQUID: Pretreat with a paste of granular detergent and water. PASTE: Scrape residue from fabric. @@Rinse. Rub detergent into dampened area. Wash using bleach safe for fabric. Pretreat or soak in product containing enzymes.

@@@Soak item 1 hour. Rinse. If caused by fabric softener, rub stains with bar soap. Wash. @@Add bleach safe for fabric. Treat with prewash stain remover or liquid detergent. Increase detergent and water temperature. Rewash. @@Wash water temperature too low. @@@@Do not pour liquid fabric softener directly on fabric.

@@@@Unfastened zippers, hooks, buckles. Rips, tears and broken threads. Overloading the washer. Degradation of fabric. Incorrect sorting. Tissues left in pocket. Overloading the washer. Not enough detergent. Undissolved detergent has left a residue resembling lint. Static cling is attracting lint.

@@Check condition of items before washing. @@@@Do not overload washer. @@@@Add liquid fabric softener to final rinse. Dry load in dryer. Remove lint with lint brush or roller. @@@@Turn items inside out to reduce abrasion. @@Do not overload washer. Use liquid detergent or use nonprecipitating water conditioner with granular detergent. Residue or powder on dark items; Stiff, harsh fabrics. Undissolved detergent.

Some granular detergents can combine with hard water minerals to form a residue. Overloading the washer. Rewash load. Wrinkling Overloading the washer. Incorrect wash cycle for wash load. Reduce load size. Rinse in cold water with liquid fabric softener using the Perm Press or Delicate cycle. Do not overload washer. Remove items from washer as soon as cycle is completed. Use liquid fabric softener.

Yellow buildup of Agitation time too short. body soil on Wash water temperature too low. synthetic fabrics Not enough detergent. Soak in detergent booster or product containing enzymes. Wash in hot water using full permanent press cycle.

Increase detergent. Add bleach safe for fabric. Or, treat with color remover. Select correct wash cycle. Use correct amount of detergent.

Wash synthetics frequently using hot or warm water. Yellow or brown rust stains Iron or manganese in water supply, water pipes, or water heater. To restore discolored load of whites, use rust remover safe for fabric. Do not use chlorine bleach to remove rust stains. It may intensify discoloration. Use nonprecipitating water softener. Before washing, run hot water for a few minutes to clear lines. Drain water heater occasionally. For an ongoing problem, install an iron filter in your water supply system. 8 Care and Cleaning Figure 1 (Lock tab is visible only after drawer has been pulled out) Figure 2 Figure 3 Figure 4 Follow Winterizing Instructions for cold weather care.

TO REFRESH OR CLEAN INSIDE OF THE WASHER: IMPORTANT: Do not load garments or other items in the washer when cleaning the inside of the washer. Add a 1/2 cup of liquid bleach to the detergent compartment of the dispenser drawer and fill the bleach dispenser compartment to the Max Fill level and run WITHOUT a clothes load using the Normal Cycle setting. For other inside cleaning Remove items from the washer as soon as the cycle ends. Excess wrinkling, color transfer, and odors may develop in items left in the washer. Before cleaning the washer interior, unplug the electrical power cord to avoid electrical shock hazards. Dry around the washer door opening, flexible gasket, and door glass. These areas should always be clean to ensure a water tight seal. When extremely soiled items have been washed, a dirty residue may remain on the drum. Remove this by wiping the drum with a nonabrasive household cleanser. Rinse thoroughly with water.

Periodically, wipe dry the folds in the bottom of the flexible gasket to remove lint and other debris. The plastic drum vanes may become stained from fabric dye. Clean these parts with a nonabrasive household cleanser. This prevents dye transfer to future loads. Cleaning the Dispenser Drawer Area Detergent and fabric softener may build up in the dispenser drawer.

Residue should be removed once or twice a month. Remove the drawer by first sliding the safety latch to the right, then pulling the drawer out until it stops. (Figure 1 Reach back into the left rear corner of the drawer cavity and press down firmly on the lock tab (left rear portion of the drawer). Pull out the drawer. (Figure 2) Remove the insert from the bleach and fabric softener compartments.

(Figure 3) Rinse the drawer and inserts with hot tap water to remove traces of accumulated powders and liquids. Large amounts of fabric softener residue may indicate improper dilution or more frequent cleaning is required. To clean the drawer opening, use a small brush to clean the recess. Remove all residue from the upper and lower parts of the recess. (Figure 4) Replace the insert pressing the "X" to lock it in place. Return the dispenser drawer. Outside When washing is completed, wipe top and sides of washer with a damp cloth. Turn water faucets off to prevent pressure build-up in the hoses. As needed, clean the cabinet with mild soap and water. Never use harsh, gritty or abrasive cleansers.

If door or console becomes stained, clean with diluted chlorine bleach [1/2 cup (120 ml) in 1 quart (.95 L) water]. Rinse several times with clear water. Remove glue residue from tape or labels with a mixture of warm water and mild detergent. Or, touch residue with the sticky side of the tape or label. When cleaning chrome parts use Windex with ammonia or any of the cleaning items mentioned for cleaning the cabinet. Before moving the washer, place a strip of cardboard or thin fiberboard under the front leveling legs to prevent floor damage. Winterizing Instructions If the washer is stored in an area where freezing can occur or moved in freezing temperatures, follow these winterizing instructions to prevent damage to the washer: 1. Turn off water supply faucets. 2. Disconnect hoses from water supply and drain water from hoses.



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLTF2940FE user guide](http://yourpdfguides.com/dref/3258833)
<http://yourpdfguides.com/dref/3258833>

3. Plug electrical cord into a properly grounded electrical outlet. 4. Add 1 gallon (3.8 L) nontoxic recreational vehicle (RV) antifreeze to empty wash drum. Close door. 5. Select the Drain/Spin cycle. Press START and let the washer drain for 1 minute to drain out all the water.

Not all of the RV antifreeze will be expelled. 6. Press Pause/Cancel twice, unplug electrical power cord, dry off drum interior and close door. 7. Remove dispenser drawer. Drain any water in compartments and dry compartments. Replace drawer. 8. Store washer in an upright position. 9.

To remove antifreeze from washer after storage, run empty washer through a complete cycle using detergent. Do not add wash load. 9 Avoid Service Checklist Before calling for service, review this list. It may save both time and expense. The list includes common concerns that are not the result of defective workmanship or materials in this washer. OCCURRENCE NOISE High pitch "jet engine" noise. Rattling and clanking noise. POSSIBLE CAUSE / SOLUTION · A certain amount of motor whine is normal during the spin cycle. · Foreign objects such as coins or safety pins may be in drum or pump. Stop washer and check drum. If noise continues after washer is restarted, objects may be in pump.

Call your authorized servicer. · Belt buckles and metal fasteners are hitting wash drum. To prevent unnecessary noise and damage to drum, fasten fasteners and turn items inside out. · Washer is overloaded. Do not overload washer.

Stop washer and reduce load. · Heavy wash loads may produce a thumping sound. This is usually normal. If sound continues, washer is probably out of balance. Stop washer and redistribute wash load.

· Washer is not resting firmly on floor. Move washer so it rests firmly on floor. Adjust leveling legs and tighten lock nuts. See INSTALLATION INSTRUCTIONS for details. · Shipping bolts and foam block have not been removed during installation. See INSTALLATION INSTRUCTIONS for removing shipping bolts and foam block. · Wash load unevenly distributed in drum. Stop washer and rearrange wash load. · Electrical power cord may not be plugged in or connection may be loose. Make sure plug fits tightly in wall outlet.

· House fuse blown, circuit breaker tripped, or a power outage has occurred. Reset circuit breaker or replace fuse. Do not increase fuse capacity. If problem is a circuit overload, have it corrected by a qualified electrician. If problem is a power outage, call local electric company. · Water supply faucets are not turned on. Turn on water supply faucets. · Motor is overheated. Washer motor will stop if it becomes overheated. It will automatically restart after a cool down period of up to 30 minutes (if washer has not been manually turned off).

· Dispenser drawer is open. Close drawer. · Washer door is not completely closed. Close door completely. · Load is too small.

Add 1 or 2 similar items to help balance the load. · Dispenser drawer is open. Close drawer. · Heavily soiled items. Wipe drum with a nonabrasive household cleanser, then rinse.

Shake or brush excess dirt and sand from items before washing · This is a result of the washing action and is part of the normal operation of the washer. Squealing sound or hot rubber odor. Thumping sound. Vibrating noise. OPERATING Washer does not start. Washer won't spin. Residue left in drum. WATER Water collects in folds of the bellows at the end of the cycle. Water collects in bleach and fabric softener compartments. Wash load too wet after spin.

· This is a result of the siphoning action and is part of the normal operation of the washer. Water may be removed by removing the dispenser drawer (see Page 9, Figures 1 and 2) and draining water into the empty drum or sink. · Washer is overloaded. Do not overload washer. See Washing Procedures. · Load is too small. Add 1 or 2 similar items to help balance the load. · Load is out of balance. Rearrange load to allow proper spinning. · Drain hose is kinked. Straighten drain hose. Water does not enter washer or it enters slowly. · Water supply is not adequate in area. Check another faucet in the house. Wait until water supply and pressure increase.

· Water supply faucets are not completely open. Fully open hot and cold faucets. · Water is being used elsewhere in the house. Water pressure must be at least 30 psi (260 kPa). Avoid running water elsewhere while washer is filling.

· Water inlet hoses are kinked. Straighten hoses. Warm or hot water is not hot enough. · Hot water heater is set too low or is a distance from washer. Measure hot water temperature at nearby faucet with candy or meat thermometer. Water temperature should be at least 120°F (49°C). Adjust water heater as necessary. · Hot water is being used elsewhere in the house. Avoid using hot water elsewhere before or during washer use. There may not be enough hot water available for proper cleaning.

If problem persists, your hot water system may be unable to support more than 1 use at a time. · Drain hose is kinked or clogged. Clean and straighten the drain hose. · Maximum standpipe height is 8' (2.4 m). · House drain pipes are clogged. Unclog drain pipes. Contact plumber if necessary. · Fill hose connection is loose at faucet or washer. Check and tighten hose connections.

Install rubber sealing washers provided. · Wrong detergent. Run rinse cycle. Use a low-sudsing, high efficiency detergent. · Too much detergent. Run rinse cycle. Use less detergent in future loads · Hot and cold water hoses are connected to wrong supply faucets. Connect hot water hose to hot water faucet and cold water hose to cold water faucet. · Drain hose standpipe is incorrect height. Standpipe must be a minimum of 23.

6" (60 cm) high to prevent siphoning. See INSTALLATION INSTRUCTIONS. Water in washer does not drain or drains slowly. Water leaks. Oversudsing. Incorrect wash and rinse temperatures. @@@@2. 3. 4. 5.

6. 7. 8. 9. @@@@Rust on the interior or exterior of the unit. Products purchased "as-is" are not covered by this warranty. Food loss due to any refrigerator or freezer failures. Products used in a commercial setting. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.

Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory. 10. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts. 11.

Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[GLTF2940FE user guide](#)

<http://yourpdfguides.com/dref/3258833>

12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc. 13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. If You Need Service Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below. This warranty only applies in the USA and Canada.

In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice. USA 1.800.944.9044 Electrolux Major Appliances North America P.O.

Box 212378 Augusta, GA 30907 Canada 1.800.668.4606 Electrolux Canada Corp. 5855 Terry Fox Way Mississauga, Ontario, Canada L5V 3E4 .



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLTF2940FE user guide](http://yourpdfguides.com/dref/3258833)
<http://yourpdfguides.com/dref/3258833>