



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FRIGIDAIRE GLTF2940F. You'll find the answers to all your questions on the FRIGIDAIRE GLTF2940F in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FRIGIDAIRE GLTF2940F**  
**User guide FRIGIDAIRE GLTF2940F**  
**Operating instructions FRIGIDAIRE GLTF2940F**  
**Instructions for use FRIGIDAIRE GLTF2940F**  
**Instruction manual FRIGIDAIRE GLTF2940F**

## WASHER OPERATING INSTRUCTIONS

The diagram shows the control panel with the following controls:

- TEMP:** Auto, Cold/Cold, Warm/Cold, Warm/Warm, Hot/Cold
- SPIN:** High, Med, Low, HangDry, No Spin
- OPTIONS Select:** Delay Start, PressSaver, Extra Rinse, Extra Spin, Cycle Signal
- SOIL:** Heavy, Normal
- START/PAUSE/Cancel:** START, Pause, Cancel
- Estimated Time Display:** Shows 00:00
- Door Lock Indicators:** DoorLock, Wash, Rinse, FinalSpin, Control

### Before Operating Your Washer

Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

**WARNING** To reduce the risk of fire, electric shock or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

### Operating Steps

Read and follow "Washing Procedures" in your Owner's Guide. It provides detailed information for preparing the wash load and choosing control settings to ensure best washing results.

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add laundry load to the wash drum.
- Add laundry products to the dispenser.
  - Detergent, bleach and fabric softener will be dispensed at the proper time in the cycle.
  - Slide safety latch to the right to open the dispenser drawer.
  - Add the recommended amount of a high efficiency detergent to the detergent

- If desired, add liquid chlorine bleach and liquid fabric softener to the appropriate compartments.
- Slowly close the dispenser drawer. Closing the drawer too quickly could result in early dispensing of bleach or fabric softener.
- Any water remaining in the dispenser at the end of the cycle is a result of siphoning action and part of normal operation.
- Select the appropriate cycle and settings for the load.
- Turn the Cycle Selector knob to select the cycle. The estimated time will be displayed.
- Suitable wash and rinse water temperatures, final spin speed, options and soil level for each cycle will automatically be displayed.
- To change the settings, press the TEMP, SPIN and SOIL buttons. To provide the best care for your laundry, not every temperature, spin speed, option and soil level is available with every cycle. If a setting is not available, its indicator will not light.
- To select or delete an option, press OPTIONS, then, while the indicator is blinking, press Select. The indicator will light when the option has been selected. It will no longer be lighted when the option has been deleted.
- Adjustments to the cycle will be remembered each time that cycle is selected in the future. See the Cycle Selections chart for factory settings.

- Select Delay Start to delay the beginning of the cycle for up to 12 hours. The delay time selected will be displayed as 30, 60 or 90 minutes or 2 through 12 hrs.

### Start the washer.

- Close the door and press START. The washer will not operate with the door open. The status lights will blink, the signal will beep and "dr" will be displayed as a reminder to close the door.
- As a safety measure, the door will automatically lock during the entire wash cycle and the Door Lock indicator will be lighted.
- A forgotten item can be added to the wash drum. Press Pause/Cancel **once**. "PAU" will be displayed alternately with the estimated cycle time. Open the door, add the item, close the door and press START to resume the cycle.
- If the cycle is interrupted during spin, it will take approximately 2-3 minutes for the door lock to release. DO NOT force open the door.
- To stop the washer, press Pause/Cancel **twice**.

- A signal will sound when the Cycle Signal option is selected. Remove items from the washer when the cycle ends.

### Cycle Selection

Turn the Cycle Selector knob to the desired cycle. For best results, follow the fabric care label instructions on items to be washed. To change the selection after the cycle has begun, press Pause/Cancel **twice**. Just turning the knob to another selection will not change the cycle. The signal will beep and the status lights will flash but the original cycle will continue.

PN 134848800A (0804)



[You're reading an excerpt. Click here to read official FRIGIDAIRE GLTF2940F user guide](http://yourpdfguides.com/dref/3200366)

<http://yourpdfguides.com/dref/3200366>

**Manual abstract:**

Closing the drawer too quickly could result in early dispensing of bleach or fabric softener. Suitable wash and rinse water temperatures, final spin speed, options and soil level for each cycle will automatically be displayed. To provide the best care for your laundry, not every temperature, spin speed, option and soil level is available with every cycle. If a setting is not available, its indicator will not light. To select or delete an option, press **OPTIONS**, then, while the indicator is blinking, press **Select**. the indicator will light when the option has been selected. It will no longer be lighted when the option has been deleted.

Read and follow "Washing Procedures" in your Owner's Guide. Sort laundry into loads that can be washed together. Add laundry load to the wash drum. The washer will not operate with the door open. The status lights will blink, the signal will beep and "dr" will be displayed as a reminder to close the door. As a safety measure, the door will automatically lock during the entire wash cycle and the Door Lock indicator will be lighted. A forgotten item can be added to the wash drum. If the cycle is interrupted during spin, it will take approximately 2-3 minutes for the door lock to release.

Remove items from the washer when the cycle ends. For best results, follow the fabric care label instructions on items to be washed. Just turning the knob to another selection will not change the cycle. Two rinses and an automatic extra rinse are followed by a final spin. extra Rinse and Extra Spin are available options.

To minimize wrinkling, the Warm Rinse and Extra Spin are not available with this cycle. the Extra Rinse and Press Saver options can be selected. Quick Cycle provides 5 minutes of reversing tumble wash action for lightly soiled items that must be laundered quickly, followed by 2 rinses and a final spin. To save time, the Extra Rinse and Extra Spin options are not available with this cycle. Delicate This cycle provides 10 minutes of gentle reversing wash action for knits and delicates, followed by 2 rinses and a final spin. To protect your delicate items, a hot water wash and the Extra Spin option are not available. Ten minutes of occasional tumbling are followed by 2 rinses and a slow final spin. To protect your hand washables, a hot water wash and the Extra Spin option are not available. Six minutes of gentle reversing tumble wash action in cold water is followed by 2 rinses and an automatic Extra Rinse. Chlorine bleach will not be dispensed in this cycle.

Ten minutes of occasional tumbling are followed by 2 rinses and a slow final spin. If Warm/Warm is selected, both rinses are warm water. If Cold/Cold is selected, both rinses are cold water. Note: Washing wool or silk garments labeled "Dry Clean Only" or using chlorine bleach can result in permanent damage. Touch Up Use this cycle to refresh items that are not soiled, such as clean garments removed from luggage or storage containers, seasonal items from closets, or wet loads forgotten in the washer. use half the detergent dose to prevent oversudsing. Three minutes of regular reversing tumble action are followed by 2 rinses and a final spin. The Extra Spin option is not available with this cycle. extra Rinse and Press Saver options are available. Drain/Spin Use the Drain/Spin cycle as a follow-up to a No Spin selection or anytime you want to drain water from the washer and spin out the load.

select the spin speed appropriate to the load. Rinse/Spin Select Rinse Spin for loads that need a cold water rinse or to add fabric softener that may have been omitted in a regular cycle. Items will occasionally tumble slowly as they soak for 5 minutes. A hot water wash is not available with this cycle.

Chlorine bleach should not be used on items containing Lycra™.

The Extra Rinse and Extra Spin options are available with this cycle. A cold water rinse saves energy and reduces wrinkling. Because most detergents work best in wash water at a minimum of 65° F, select settings with the symbol for regulated wash and final rinse water temperatures. Soil Level Select Heavy SOIL to increase the wash time in some cycles. Delay Start Press Delay Start to select a wash time convenient to your schedule or during off peak energy hours.

Control Lock To avoid having someone accidentally start or stop the washer, press **OPTIONS** and **Select** at the same time and hold for about 10 seconds until the Control (Control Lock) lights up. "LOC" will be displayed alternately with the estimated cycle time. Turning the Cycle Selector knob or pressing any button will produce flashing indicator lights and/or beeping. The time may increase if water pressure is low or the load becomes unbalanced. the approximate time remaining will be displayed during the cycle. Status Lights The following will be displayed at the appropriate times during the cycle: The washer automatically adjusts the water level to the type and size of wash load. To select or delete the Press Saver, Extra Rinse, Extra Spin or Cycle Signal, press **OPTIONS** until the blinking light indicates the desired option. Then, while it is blinking, press **Select**. the indicator will light when the option has been selected. It will no longer be lighted when the option has been deleted.

To provide the best care for your laundry items, not every option is available with every cycle. Extra Rinse Use this option when additional rinsing is desired to remove excess dirt and detergent. it is recommended for heavily soiled loads or if household members have sensitive skin. this will improve water extraction and decrease drying time. Increasing spin speed will extract more water and decrease drying time. HANG DRY is available with some cycles to gently spin items that should not be machine dried. The load will be very wet. Remove items from the wash drum to drip dry or select Drain/Spin to remove excess water at a more convenient time. Cycle Selections - The following chart shows the temperatures, speeds and options available for each cycle. Available settings \*\* Estimated cycle duration is based on factory settings and does not include water fill times, out-of-balance or oversudsing conditions.



[You're reading an excerpt. Click here to read official FRIGIDAIRE](#)

[GLTF2940F user guide](#)

<http://yourpdfguides.com/dref/3200366>