



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FUJITSU SIEMENS AMILO LI2727. You'll find the answers to all your questions on the FUJITSU SIEMENS AMILO LI2727 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FUJITSU SIEMENS AMILO LI2727
User guide FUJITSU SIEMENS AMILO LI2727
Operating instructions FUJITSU SIEMENS AMILO LI2727
Instructions for use FUJITSU SIEMENS AMILO LI2727
Instruction manual FUJITSU SIEMENS AMILO LI2727

Inform

We make sure. **FUJITSU SIEMENS**

**AMILO Li2727/2732/2735
WLAN configuration
Windows Vista**

Issue: 12/03/2007
Category: Installation paper
Content: WLAN configuration
Use: External
Pages: 3

1. Activate wireless LAN adapter

- Press Fiv F1 to activate the wireless LAN adapter
- Select "On" in the launch manager and confirm
- Check in BIOS the setting for the wireless LAN adapter. If the red led next to the power led does not light up
 - Start AMILO and enter BIOS with F2
 - Go to advanced and change the value for the wireless adapter to enabled




2. Software

- Launch Manager

3. Wireless LAN configuration with Windows Vista

- Activate wireless LAN at AMILO and router
- Open Network and Sharing Center
start → Control Panel → Network and Internet → Network and Sharing Center
- Set wireless LAN connection settings
Manage wireless networks → Add → Manually create a network profile → specify network details → Connect To →

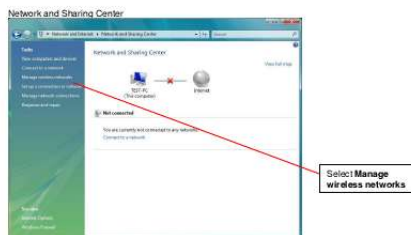

[You're reading an excerpt. Click here to read official FUJITSU SIEMENS AMILO LI2727 user guide](http://yourpdfguides.com/dref/2440696)
<http://yourpdfguides.com/dref/2440696>

