



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FUJITSU SIEMENS ESPRIMO E5720. You'll find the answers to all your questions on the FUJITSU SIEMENS ESPRIMO E5720 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FUJITSU SIEMENS ESPRIMO E5720
User guide FUJITSU SIEMENS ESPRIMO E5720
Operating instructions FUJITSU SIEMENS ESPRIMO E5720
Instructions for use FUJITSU SIEMENS ESPRIMO E5720
Instruction manual FUJITSU SIEMENS ESPRIMO E5720

Mainboard

Deutsch, English

Short Description

Mainboard D2594/D2598



[You're reading an excerpt. Click here to read official FUJITSU SIEMENS ESPRIMO E5720 user guide](http://yourpdfguides.com/dref/1248811)
<http://yourpdfguides.com/dref/1248811>

Manual abstract:

All other trademarks referenced are trademarks of their respective owners, whose protected rights are acknowledged. Offenders will be liable for damages. Special Features Independent temperature related processor and fan supervision and control Silent Fan System Guard View and adjust Silent Fan Silent Drives Recovery BIOS Desk Update Multi Boot HDD Password Noise reduction for optical and hard disk drives Restores a corrupted BIOS Simple driver update with DU CD Comfortable boot from any boot device Access protection for ATA5/ATA15 disk drives Information about boards Be sure to observe the following for boards with ESD: · You must always discharge static build up (e. g. By touching a grounded object) before working with the board. The equipment and tools you use must be free of static charge. Remove the power plug from the mains supply before inserting or removing boards. Always hold boards by their edges. Special features Your mainboard is available in different configuration levels. Depending on the configuration, your mainboard will be equipped with or provide support for certain features.

This manual describes the most important properties of this mainboard. PS/2 mouse port, green (optional) Microphone jack (mono), pink USB Universal Serial Bus, black VGA, blue Disconnect the system from the mains voltage before performing any of the tasks described below. Details are contained in the operating manual of your system. Intel® Core™2 Duo Exxx and Intel® Celeron® 4xx, with 800 / 1066 / 1333 MHz Front Side Bus in the LGA775 design A current list of the processors supported by this mainboard is available on the Internet at: "www. Even minor soiling such as grease from the skin can impair the processor's operation or destroy the processor.

Place the processor in the socket with extreme care, as the spring contacts of the socket are very delicate and must not be bent.

At least one memory module must be installed. Memory modules with different memory capacities can be combined. You may use only unbuffered 1.8 V memory modules without ECC.

System performance is maximised when the same memory size is used in Channel A and Channel B. to simplify equipping, the slots are colour coded. With a memory configuration of 8 Gbytes the visible and usable main memory can be reduced down to 7 Gbytes (depending on the system configuration). Number of memory modules inserted 2 3 x x x x Should IRQ sharing be unavoidable, then all involved devices and their drivers must support IRQ sharing. Which ISA IRQs are assigned to the PCI IRQ Lines is normally automatically specified by the BIOS (see "BIOS Setup" description).

The assignment of the PCI interrupts to the IRQ Lines is shown in the following table: On board controller PCI INT LINE UHCI USB 1. Use first PCI/PCI Express slots that have a single PCI IRQ Line (no IRQ sharing). If you must use another PCI/PCI Express slot with IRQ sharing, check whether the expansion card properly supports IRQ sharing with the other devices on this PCI IRQ Line. The drivers of all cards and components on this PCI IRQ Line must also support IRQ sharing. In addition, new BIOS functions can also be integrated.

Download the update file from our website to your PC. DeskFlash can be found on the "Drivers & Utilities" CD (under DeskUpdate).



[You're reading an excerpt. Click here to read official FUJITSU SIEMENS ESPRIMO E5720 user guide](http://yourpdfguides.com/dref/1248811)
<http://yourpdfguides.com/dref/1248811>