



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FUJITSU SIEMENS ESPRIMO P5720. You'll find the answers to all your questions on the FUJITSU SIEMENS ESPRIMO P5720 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FUJITSU SIEMENS ESPRIMO P5720**  
**User guide FUJITSU SIEMENS ESPRIMO P5720**  
**Operating instructions FUJITSU SIEMENS ESPRIMO P5720**  
**Instructions for use FUJITSU SIEMENS ESPRIMO P5720**  
**Instruction manual FUJITSU SIEMENS ESPRIMO P5720**



Contents

- Positioning and target groups
- Customer benefits
- Product description
- Technical data
- System requirements



2  
2  
2  
3



[You're reading an excerpt. Click here to read official FUJITSU SIEMENS ESPRIMO P5720 user guide](http://yourpdfguides.com/dref/1249190)  
<http://yourpdfguides.com/dref/1249190>

**Manual abstract:**

5 seconds) during wakeup is maintained over the S4 standby state (approx. 30 seconds). This is intended to increase the acceptance of the S3 powersave mode. Product description With Safe Standby, the contents of main memory are saved to hard disk when the PC switches to the standby mode (S3). If an unexpected power outage occurs, the contents of main memory are loaded from the hard disk during booting. You can find further information on the internet at [http://www.fujitsu-siemens.com/products/manageability/client\\_utilities.html](http://www.fujitsu-siemens.com/products/manageability/client_utilities.html) Technical data Support for Safe Standby is integrated and enabled in the BIOS of the new mainboards from Fujitsu Siemens Computers. This function can be used under Windows 2000 and XP in combination with a software tool of the same name.

@@The system status is stored in the file "C:\SAVETO.DSK". The size of the file is identical to the size of main memory. @@edited, moved or defragmented. @@@@5 seconds).

@@@SCSI hard disks Removable media, e.g. @@Installation requirements: You must be logged in with administrator rights in order to be able to install Safe Standby. Sufficient free (non-fragmented) storage space must be available on the hard disk to accommodate the "SAVETO.DSK" file (at least size of main memory + 34 MB).

Tip: Defragment your C hard disk before the installation Information and downloads Information: <http://www.fujitsu-siemens.com/mainboards> Downloads (manuals, drivers, BIOS): <http://download.fujitsu-siemens.com> All rights, including rights created by patent grant or registration of a utility model or design, are reserved. Delivery subject to availability; right of technical modifications reserved. All hardware and software names used are trade names or trademarks of their respective manufacturers. @@.



[You're reading an excerpt. Click here to read official FUJITSU SIEMENS ESPRIMO P5720 user guide](http://yourpdfguides.com/dref/1249190)  
<http://yourpdfguides.com/dref/1249190>