



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FUJITSU SIEMENS ESPRIMO P5925. You'll find the answers to all your questions on the FUJITSU SIEMENS ESPRIMO P5925 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FUJITSU SIEMENS ESPRIMO P5925
User guide FUJITSU SIEMENS ESPRIMO P5925
Operating instructions FUJITSU SIEMENS ESPRIMO P5925
Instructions for use FUJITSU SIEMENS ESPRIMO P5925
Instruction manual FUJITSU SIEMENS ESPRIMO P5925



Intel® Q35 Chipset (AMT 3.0) for DDR2 800 SDRAM Memory and Intel® Core™ 2 Duo Processors (1333 MHz FSB)



Chipset:
Intel® Q35 / ICH9 DD

Processors:
Intel® Core™ 2 Duo Processors
LGA775 with 1333/1066/800 MHz FSB
Intel® Pentium Dual Core E2xxx Processors
LGA775 with 800 MHz FSB
Intel® Celeron™ 4xx Processors
LGA775 with 800 MHz FSB
Compatible with Intel® 06 processors (max. 65W)

Memory:
DDR2 667 SDRAM
DDR2 800 SDRAM

Product Features:
Graphics on board
Audio on board
USB 2.0 on board
Intel GbE LAN on board
Serial ATA II RAID on board
Trusted Platform Module V1.2 onboard



[You're reading an excerpt. Click here to read official FUJITSU SIEMENS ESPRIMO P5925 user guide](http://yourpdfguides.com/dref/1249307)
<http://yourpdfguides.com/dref/1249307>

Manual abstract:

0 on board Intel GbE LAN on board Serial ATA II RAID on board Trusted Platform Modul V1.2 onboard Data Sheet Issue: October 2007 Mainboard D2584-A Page 2 / 2 Board Size Chipset μ BTX: 10,5" x 9.95" (266.7 x 264.2 mm) Intel Q35 / ICH9 DO \otimes Memory 4 DIMM Sockets (1.8V), 256MB - 8GB, Single Channel or Dual Channel DDR2 800/667SDRAM, unbuffered, no ECC (For details on recommended RAM, please refer to our website) Processors Intel \otimes Core 2 DUO Processors, LGA775, 1333/1066/800 MHz FSB Intel \otimes Pentium Dual Core E2xxx Processors, LGA775, 800 MHz FSB Intel \otimes Celeron \otimes 4xx Processors, LGA775, 800 MHz FSB (For details on supported processors, please refer to our website) Power Specification BTX12V (24 Pin) or ATX12V (20 Pin) Power Supply required Support for Soft-Off Power Supplies 5V and 3.3V Supply Voltage on PCI Slots (PCI Rev. 2.3) 3.3V Auxiliary Supply Voltage on PCI Slots (Wake-Up Function) On board CPU Voltage Regulator, 5V / 2A Auxiliary Power required for USB Wake-Up from Save-to-RAM, Save-to-Disk Power Supply (PS) Requirements for onboard components (worst case) Source Voltage PS Load 1 (min. .) + 12 V - 12 V +5V + 3.3 V +5V 0.3 A 0A 0.6A 0A 0A Graphics \otimes Intel GMA3100 Graphics Controller, shared memory (up to 256MB), DirectX 9 compliant, upgradeable with PCI Express x16 Graphics Card or ADD2 cards Audio Realtek ALC262, 2-channel, High Definition Audio LAN Intel Ethernet Controller with 10/100/1000 MBit/s via PCI Express, Wake-on-LAN (WoL) by interesting Packets, Link Status Change and Magic PacketTM, bootix \otimes PXE Support, BIOS MAC Address Display Drives - 4 Serial ATA II 300 Interfaces (up to 3Gbit/s, NCQ); RAID 0, 1, 10, 5 - Floppy Version Features Chipset Board Size VGA Stereo Audio / Multichannel Audio Buzzer / int. @@@@ subject to availability. Designations may be trademarks, the use of which by third parties for their own purposes may violate the rights of the trademark owners. .



[You're reading an excerpt. Click here to read official FUJITSU SIEMENS ESPRIMO P5925 user guide](http://yourpdfguides.com/dref/1249307)
<http://yourpdfguides.com/dref/1249307>