




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07. You'll find the answers to all your questions on the FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07**  
**User guide FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07**  
**Operating instructions FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07**  
**Instructions for use FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07**  
**Instruction manual FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07**

DATASHEET FUJITSU PRIMERGY ServerView® Installation Manager V10.10.07 ServerView Suite



## DATASHEET

### FUJITSU PRIMERGY

#### ServerView® Installation Manager V10.10.07 ServerView Suite

CONFIGURE AND INSTALL PRIMERGY SERVERS  
SERVERVIEW® INSTALLATION MANAGER IS THE TOOL TO CONFIGURE PRIMERGY SERVERS AND INSTALL OPERATING SYSTEM AND MANAGEMENT SOFTWARE. AS PART OF THE PRIMERGY SERVERVIEW SUITE THE INSTALLATION MANAGER PROVIDES FAST AND SECURE CONFIGURATION AND INSTALLATION. IT CAN INSTALL SERVERS EITHER UNATTENDED OR MENU-DRIVEN, LOCALLY OR REMOTE. IN PREPARATION FOR THE REQUIRED OPERATING SYSTEM ALL CONFIGURABLE SERVER COMPONENTS ARE IDENTIFIED AND THE NECESSARY TOOLS AND DRIVERS ARE PROVIDED AUTOMATICALLY.

---

**Installation Manager Functions**  
The Installation Manager offers two deployment modes "Typical" and "User-defined" for different cases of operation. Standard configuration parameters are preset and ServerView software components are also automatically installed in the typical installation. User-defined deployment makes it possible to configure the system and the OS installation down to the very last detail. The emerging installation description file can be used to install other servers with an identical configuration on an unattended basis. In both operating modes the user is taken through the configuration on a step-by-step basis by the Wizard and protected against operating errors at the end of every input phase by plausibility checks. By using the integrated ServerView Configuration Manager the Installation Manager covers the BIOS setting, for example recovery functions (ASR&R Automatic Server Reconfiguration and Restart) and the Baseboard Management Controller (BMC/BMC). During the installation the Installation Manager automatically integrates the appropriate OEM drivers for Fujitsu-specific components into the selected operating system and installs Service Packs. ServerView Suite components are also automatically installed as well as any other software applications (in user-defined mode) if requested. The Installation Manager is supplied as part of the PRIMERGY ServerView Suite which contains not only the installation software but also tools for the first installation and later upgrades. Additionally more server management software products as well as documentation and drivers are enclosed but no operating systems or tools which are offered as separate products. The ServerView Suite package is available for update as an annual subscription (about 10 editions per year). As of version 7.884 the suite may be ordered for a single update too.

**Key Characteristics and Customer Benefits**

- Decrease administration costs:
  - flawless quality controlled configuration
  - reproducibly locally unattended installation of operating systems
- Software is supplied for free
- Guarantees reliability and availability:
  - automatic hardware detection
  - safe configuration
  - correct and reproducible installation
- Cut down service expenses
  - local or remote application update installation
  - multiple system installation processes in parallel



Selle 1 von 5 http://its.fujitsu.com



[You're reading an excerpt. Click here to read official FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07 user guide](http://yourpdfguides.com/dref/3200531)  
<http://yourpdfguides.com/dref/3200531>

**Manual abstract:**

10.07 ServerView Suite DATENBLATT DATASHEET FUJITSU PRIMERGY ServerView® Installation Manager V10.10.07 ServerView Suite CONFIGURE AND INSTALL PRIMERGY SERVERS SERVERVIEW® INSTALLATION MANAGER IS THE TOOL TO CONFIGURE PRIMERGY SERVERS AND INSTALL OPERATING SYSTEM AND MANAGEMENT SOFTWARE. AS PART OF THE PRIMERGY SERVERVIEW SUITE THE INSTALLATION MANAGER PROVIDES FAST AND SECURE CONFIGURATION AND INSTALLATION. IT CAN INSTALL SERVERS EITHER UNATTENDED OR MENU-DRIVEN, LOCALLY OR REMOTE. @@@@ By using the integrated ServerView Configuration Manager the Installation Manager covers the BIOS setting, for example recovery functions (ASR&R Automatic Server Reconfiguration and Restart) and the Baseboard Management Controller (iRMC/BMC). During the installation the Installation Manager automatically integrates the appropriate OEM drivers for Fujitsu-specific components into the selected operating system and installs Service Packs. ServerView Suite components are also automatically installed as well as any other software applications (in user-defined mode) if requested. The Installation Manager is supplied as part of the PRIMERGY ServerView Suite which contains not only the installation software but also tools for the first installation and later upgrades.

Additionally more server management software products as well as documentation and drivers are enclosed but no operating systems or tools which are offered as separate products. The ServerView Suite package is available for update as an annual subscription (about 10 editions per year). As of version 7.804 the suite may be ordered for a single update too. Key Characteristics and Customer Benefits Decrease administration costs: o flawless quality controlled configuration o reproducible totally unattended installation of operating systems o Software is supplied for free Guarantees reliability and availability: o automatic hardware detection o safe configuration o correct and reproducible installation Cut down service expenses o local or remote application update installation o multiple system installation processes in parallel Seite 1 von 5 <http://ts.fujitsu.com>

DATASHEET FUJITSU PRIMERGY ServerView® Installation Manager V10.10.07 ServerView Suite FEATURES AND BENEFITS MAIN FEATURES BENEFITS Guided installation Windows installation on base of configuration file only - no native installation (e.g.

HP) Remote installation Multi system preparation and installation Post installation scripts Automatic recognition of HW: Correct installation Flawless configuration: Checked, ready for copying MSA (Microsoft System Architecture) certified Safe configuration & improved system stability Completely unattended installation for free Saves resources and time Huge time savings - up to 80% Maximum integration M Higher reliability & higher availability Cut admin costs High quality Page 2 of 5 <http://ts.fujitsu.com> DATASHEET FUJITSU PRIMERGY ServerView® Installation Manager V10.10.07 ServerView Suite OFFERING Functions Server installation The configuration and installation of a PRIMERGY server is carried out either locally by booting the ServerView DVD 1 or remote via PXE Boot. The remote installation process of a target system is "headless" i.e. local mouse, keyboard, monitor and accessible drives are not required. The configuration data can be saved for future use on diskette, USB device or network drive. Create service partitions At older systems on which online update isn't possible yet a corresponding service partition for the ServerView Update Manager can be created on the target system.

This option is no longer needed for new servers and thus no longer offered! @@@@ U7 and U8) o RHEL 5.0 incl. XEN Support (Domain 0 installation) o Edition x86 and EM64T (incl. @U4 and U5) o ESX4.0 (incl. @@@@ Furthermore the annual subscription can still be ordered using the existing order number U15000-C176. Technical Prerequisites Hardware Management or deployment stations require: DVD-ROM VGA screen (at least 1024x768), keyboard, mouse Main memory with at least 1 GB The target server requires: Main memory with min. 1 GB.PXE functionality for the remote installation (standard with current PRIMERGY servers) DHCP service support within the network Software For running a remote installation session an internet browser is required. The Microsoft Internet Explorer from version 6 as well as Mozilla Firefox from version 3 are supported (Firefox recommended).

The function scale may be restricted with other browsers. Notes This document can contain technical terms that are not exact and have printing errors. Changes are covered in new versions. This document refers to the software product "ServerView Installation Manager". For organizational reasons the software and any provided documentation may still contain the former product name "ServerStart".

Operating systems are not included in the ServerView Suite package. User Requirements Basic knowledge about system administration Page 4 of 5 <http://ts.fujitsu.com> DATASHEET FUJITSU PRIMERGY ServerView® Installation Manager V10.10.

07 ServerView Suite FUJITSU PLATFORM SOLUTIONS MORE INFORMATION COPYRIGHT In addition to FUJITSU PRIMERGY/ServerView Suite, FUJITSU provides a range of platform solutions. They combine reliable FUJITSU products with the best in services, know-how and worldwide partnerships. Dynamic Infrastructures With the FUJITSU Dynamic Infrastructures approach, FUJITSU offers a full portfolio of IT products, solutions and services, ranging from clients to datacenter solutions, Managed Infrastructure and Infrastructure-as-a-Service. How much you benefit from FUJITSU technologies and services depends on the level of cooperation you choose. This takes IT flexibility and efficiency to the next level. Computing Products [www.fujitsu.com/global/services/computing/](http://www.fujitsu.com/global/services/computing/) Software [www.fujitsu.com/software/](http://www.fujitsu.com/software/) Learn more about FUJITSU PRIMERGY/ServerView Suite, please contact your FUJITSU sales representative or FUJITSU Business partner, or visit our website.

[www.fujitsu.com/\[PRODUCT BRAND\]](http://www.fujitsu.com/[PRODUCT BRAND]) © Copyright 2009 FUJITSU Technology Solutions FUJITSU, the FUJITSU logo and FUJITSU brand names are trademarks or registered trademarks of FUJITSU Limited in Japan and other Countries. @@@@ Using our global know-how, we aim to resolve issues of environmental energy efficiency through IT. Please find further information at [<http://www.fujitsu.com/global/about/environment/>] CONTACT FUJITSU Technology Solutions Website: [www.fujitsu.com/PRIMERGY](http://www.fujitsu.com/PRIMERGY) 2010-07-09 EN Page 5 of 5 <http://ts.fujitsu.com>.



**[You're reading an excerpt. Click here to read official FUJITSU SIEMENS SERVERVIEW INSTALLATION MANAGER V10.10.07 user guide](http://yourpdfguides.com/dref/3200531)**  
<http://yourpdfguides.com/dref/3200531>