



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for GARMIN APPROACH S1. You'll find the answers to all your questions on the GARMIN APPROACH S1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual GARMIN APPROACH S1  
User guide GARMIN APPROACH S1  
Operating instructions GARMIN APPROACH S1  
Instructions for use GARMIN APPROACH S1  
Instruction manual GARMIN APPROACH S1



[You're reading an excerpt. Click here to read official GARMIN APPROACH S1 user guide](http://yourpdfguides.com/dref/3339926)  
<http://yourpdfguides.com/dref/3339926>

**Manual abstract:**

or its subsidiaries All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited. Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. @@@@or its subsidiaries, registered in the USA and other countries. @@When using the device the first time, complete these tasks. 1. 2. 3.

4. Charge the device (page 1). Turn on the device (page 2). Acquire satellite signals (page 3). Start a round (page 3).

The device will not charge when the battery is outside the temperature range of 41°F/104° (5°C/40°). 1. Plug the USB end of the cable into the AC adapter. 2. Plug the AC adapter into a standard wall outlet.

3. Align all four contacts on the back of the device with the four posts on the charging clip. Charging the Device notice To prevent corrosion, thoroughly dry the contacts and the surrounding area before charging or connecting to a computer. Approach S1 Owner's Manual 1 When you connect the device to a power source, the device turns on, and the charging screen appears. Keys Each key has multiple functions. light/ power up down Press to turn on the backlight. Press and hold to turn the device on and off. Press to scroll through menus, holes, and settings. Press to scroll through menus, holes, and settings. Press to select menu options and acknowledge messages.

Press and hold to open the menu. 4. Charge the device completely. When the device is fully charged, the on the screen is solid. OK/menu Turning On the Device Press and hold power. icons Battery is low. GPS in on and the (animated) odometer is measuring distance. Alarm is on. 2 Approach S1 Owner's Manual acquiring Satellite Signals You cannot start a round until the device acquires satellites. It may take 3060 seconds to acquire satellite signals.

1. If necessary, press OK to exit power save mode. 2. Go outdoors to an open area. 3.

Wait while the device searches for satellites. Hole View The device shows the current hole you are playing. The device automatically transitions when you move to a new hole. NOTE: Because pin locations change, the device calculates the distance to the front, middle, and back of the green and not the actual pin location. Starting a round 1.

From the time page, press menu. 2. Select Start Round. 3. Select a course from the list. The device automatically starts on the closest hole to your position. Current hole number. Distance to the back of the green. 3 Approach S1 Owner's Manual Distance to the middle of the green. Distance to the front of the green.

Indicates par for the hole. Ending a round 1. Press and hold menu. 2. Select End Round. Measuring Your Shot Before you can measure a shot, you must start a round. 1. Press and hold menu. 2. Select Measure Shot.

3. Walk to your ball. As you walk, the distance appears on the screen. @@1. Press and hold menu.

2. Select Measure Shot. 3. @@1. Press and hold menu.

2. Select Odometer. As you walk, the distance appears on the screen. @@Distance measurement uses GPS and decreases battery life. 1. Press and hold menu. Approach S1 Owner's Manual 2. Select Odometer. The device prompts you to continue, reset the distance, or turn off. 3.

Select Turn Off. Setting the alarm 1. 2. 3. 4. Press and hold menu. Select Alarm > Set. Enter the alarm time. Select Alarm > On. Modifying Your System Settings 1.

Press and hold menu. 2. Select Setup. 3. Modify the settings.

@@@1. Connect the USB cable to a USB port on your computer. 2. @@3. To update your Approach®, go to [www.garmin.com/CourseView](http://www.garmin.com/CourseView).

4. Follow the instructions. 1. Press and hold menu. 2. Select Setup > Time > Manual. 3. @@It can withstand immersion in 1 meter of water for 30 minutes.

Prolonged submersion can cause damage to the unit. @@@@The device displays the time and date but does not use GPS. @@@@Getting More information You can find more information about this product on the Garmin Web site. · Go to [www.garmin.com/intosports](http://www.garmin.com/intosports). · Go to [www.garmin.com/learningcenter](http://www.garmin.com/learningcenter). · Go to <http://buy.garmin.com>.

garmin.com, or contact your Garmin dealer for information about optional accessories and replacement parts. Troubleshooting resetting the Device If the keys or screen stop responding, you may need to reset the device. 1. Press and hold power until the screen goes blank.

2. Press and hold power until the screen turns on. Clearing User Data Press and hold menu and down simultaneously. Approach S1 Owner's Manual 7

Contacting Garmin Product Support You can contact Garmin Product Support if you have any questions about this product. · In the USA, go to [www.garmin.com/support](http://www.garmin.com/support), or contact Garmin USA by phone at (913) 397.8200 or (800) 800.1020. · In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000. · In Europe, go to [www.garmin.com/support](http://www.garmin.com/support) and click Contact Support for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.

8501241. Caring for Your Device notice Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage. Avoid chemical cleaners and solvents that can damage plastic components. Cleaning the Device 1. Use a cloth dampened with a mild detergent solution. 2. @@· Go to [www.garmin.com/intosports](http://www.garmin.com/intosports). @@or its subsidiaries Garmin International, Inc.

@@Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR UK Garmin Corporation No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan October 2010 Part Number 190-01283-00 Rev. B Printed in Taiwan .



[You're reading an excerpt. Click here to read official GARMIN APPROACH S1 user guide](http://yourpdfguides.com/dref/3339926)  
<http://yourpdfguides.com/dref/3339926>