



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for GARMIN GPSMAP 62S. You'll find the answers to all your questions on the GARMIN GPSMAP 62S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual GARMIN GPSMAP 62S
User guide GARMIN GPSMAP 62S
Operating instructions GARMIN GPSMAP 62S
Instructions for use GARMIN GPSMAP 62S
Instruction manual GARMIN GPSMAP 62S



[You're reading an excerpt. Click here to read official GARMIN GPSMAP 62S user guide](http://yourpdfguides.com/dref/3339401)
<http://yourpdfguides.com/dref/3339401>

Manual abstract:

1. 2. 3. 4. 5. 6. Install the batteries (page 2). Turn on the device (page 3). Acquire satellites (page 3). Mark a waypoint (page 5). Calibrate the compass (page 6). Navigate with the search menu (page 8). 7. Navigate a route (page 8). Getting More information Go to www.garmin.com to download the latest manuals. Battery information The device operates on two AA batteries. Use alkaline, NiMH, or lithium batteries. Use precharged NiMH or lithium batteries for best results.

1. Remove the battery cover by turning the D-ring 1/4 turn counterclockwise and pulling up. 2. @@@3. Replace the battery cover. @@@1. Go outdoors to an open area. 2. If necessary, turn on the device. 3.

Wait while the device searches for satellites. A question mark flashes while the device determines your location. 4. Quickly press to open the backlight status page. The GPS bars indicate satellite strength. @@Setting Your Language 1. Turn on the unit. 2. @@Press EnTEr to select options and acknowledge messages. Press MENU to open the options menu for the page that is currently open.

Press MENU twice to open the main menu (from any page). Press PaGE to scroll through the main pages (page 5). Press up, down, right, and left to select menu options and to move the map cursor. Press in to zoom in on the map. Press OUT to zoom out on the map.

EnTEr MENU PaGE Press and hold to turn the device on and off. Quickly press to open the backlight status page. FinD MarK Press FinD to open the search menu Press MarK to save your current location as a waypoint. rocker in OUT GPSMAP 62 Series Quick Start Manual waypoints Waypoints are locations you record and store in the device. Creating waypoints 1.

From any page, press MARK. 2. Select Done. Editing a waypoint Before you can edit a waypoint, you must create a waypoint. 1. From the main menu, select Waypoint Manager. 2. Select a waypoint. 3. Select an attribute (such as the name or location).

4. Enter the new information. 5. Select Done. Deleting a waypoint 1. From the main menu, select Waypoint Manager. 2. Select a waypoint. GPSMAP 62 Series Quick Start Manual 3. Press Menu.

4. Select Delete > Yes. Main Pages The information needed to operate this device is found on the following pages: map, compass, main menu, and trip computer. Map The position icon represents your location on the map. As you travel, the position icon moves and leaves a track log (trail).

Waypoint names and symbols also appear on the map. Changing the Map Orientation 1. From the map, press Menu. 2. Select Setup Map > Orientation.

3. Select an orientation: · Select north up to show north at the top of the page. · Select Track up to show your current direction of travel at the top of the page. · Select Automotive Mode to show a perspective view. Measuring Distance You can move the cursor around the map to measure distance from the current location. 1. From the map, press Menu. 2. Select Measure Distance. The device automatically begins measuring from your current location.

3. Move the cursor to a point you want to measure to. The distance appears at the bottom of the page. 4. Press quiT to stop measuring. Compass When navigating to a destination, the bearing pointer points to your destination, regardless of the direction you are moving. When the bearing pointer points toward the top of the electronic compass, you are traveling directly toward your destination. If it points any other direction, turn toward that direction until the arrow is pointing toward the top of the compass. @@@@1. From the compass, press Menu.

2. Select Calibrate Compass > Start. 3. Follow the on-screen instructions. @@@@1.

From the elevation plot, press Menu. 2. Select Calibrate Altimeter. 3. @@@@1.

2. 3. 4. From a main page, press Menu. Select Change Data Fields. Select a data field. @@@@1. 2. 3. 4.

From any page, press FinD. Select Waypoints. Select a waypoint. @@@1. From the main menu, select Setup > Routing > Guidance Method. 2. Select an option. 1. @@@2. Select a category.

3. Select the first point in the route. 4. Select use. 5.

Select Select next Point. 6. Repeat steps 25 until the route is complete. A route must contain at least two points. 7.

@@@2. 3. 4. Press FinD. Select Routes. Select a route. @@@@1. From the main menu, select Sight n Go. 2. Point the device at an object.

3. Select Lock Direction > Set Course. 4. Use the compass to navigate to the object. 2. @@@@Position the carabiner clip in the slots on the mounting spine.

2. @@From the main menu, select Setup > Display > Battery Save > On. Decreasing the Backlight Extensive use of screen backlighting can significantly reduce battery life. You can adjust the backlight brightness and decrease the backlight timeout to maximize battery power.

1. Quickly press to open the backlight status page. 2. Use the Rocker to adjust the brightness. 10 adjusting the Backlight Timeout 1.

From the main menu, select Setup > Display > Backlight Timeout. 2. Select a time. Selecting the Battery Type 1. From the main menu, select Setup > System > Battery Type.

2. Select Alkaline, Lithium, or Rechargeable niMH. Long-Term Storage When you do not plan to use the device for several months, remove the batteries. Stored data is not lost when batteries are removed. GPSMAP 62 Series Quick Start Manual registering Your Device Help us better support you by completing our online registration today. nOTE: This does not erase any of your data or settings. · Go to <http://my.garmin.com>. · Keep the original sales receipt, or a photocopy, in a safe place.

Contacting Garmin Product Support You can contact Garmin Product Support if you have any questions about this product. · In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397.8200 or (800) 800.1020. · In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000. · In Europe, go to www.garmin.com.

com /support and click Contact Support for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241. resetting the Device If your device screen or buttons stop responding, you can reset the device. 1.

Remove the batteries. 2. Reinstall the batteries (page 2). nOTE: This does not erase any of your data or settings. 1.

Go to www.garmin.com/webupdater. 2. Follow the on-screen instructions. GPSMAP 62 Series Quick Start Manual Updating the Software 11 Garmin®, the Garmin logo, and GPSMAP® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. @@@@ or its subsidiaries Garmin International, Inc. @@Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR UK Garmin Corporation No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan April 2010 Part Number 190-01215-01 Rev.



[You're reading an excerpt. Click here to read official GARMIN
GPSMAP 62S user guide
http://yourpdfguides.com/dref/3339401](http://yourpdfguides.com/dref/3339401)