




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for GIGABYTE GA-J1800M-D2P-IN. You'll find the answers to all your questions on the GIGABYTE GA-J1800M-D2P-IN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual GIGABYTE GA-J1800M-D2P-IN
User guide GIGABYTE GA-J1800M-D2P-IN
Operating instructions GIGABYTE GA-J1800M-D2P-IN
Instructions for use GIGABYTE GA-J1800M-D2P-IN
Instruction manual GIGABYTE GA-J1800M-D2P-IN

GA-J1800M-D2P-IN

User's Manual
12ME-J18M2P1-1102R

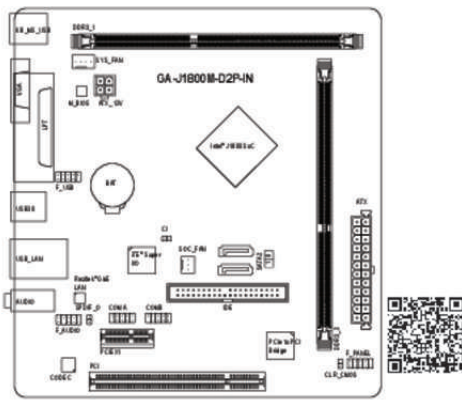

Box Contents

<input checked="" type="checkbox"/> GA-J1800M-D2P-IN motherboard	<input checked="" type="checkbox"/> One IDE cable
<input checked="" type="checkbox"/> Motherboard driver disk	<input checked="" type="checkbox"/> Two SATA cables
<input checked="" type="checkbox"/> User's Manual	<input checked="" type="checkbox"/> I/O Shield

* The box contents shown are for reference only and the actual items shall depend on the product package you obtain.

Go to GIGABYTE's website for detailed information on the hardware installation, BIOS configurations, and driver installation.



[You're reading an excerpt. Click here to read official GIGABYTE GA-J1800M-D2P-IN user guide](http://yourpdfguides.com/dref/5736598)

<http://yourpdfguides.com/dref/5736598>

Manual abstract:

The CPU cannot be inserted if oriented incorrectly. •• Do not turn on the computer if the CPU cooler is not installed, otherwise overheating and damage of the CPU may occur. •• Set the CPU host frequency in accordance with the CPU specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the standard requirements for the peripherals. If you wish to set the frequency beyond the standard specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc. Installing the Memory/Expansion Card Read the following guidelines before you begin to install the memory: •• Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used. (Go to GIGABYTE's website for the latest supported memory speeds and memory modules.) •• Make sure the motherboard supports the expansion card. Carefully read the manual that came with your expansion card. •• Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage. •• Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.

Drivers Installation "Xpress Install" will automatically scan your system and then list all of the drivers that are recommended to install.

•• Or click the arrow icon to individually install the drivers you need. •• Contravention will be prosecuted.

•• If you need further assistance in recycling, reusing in your "end of life" product, you may contact us at the Customer Care number listed in your product's user's manual and we will be glad to help you with your effort. Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly. With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of "end of life" products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

Motherboard GA-J1800M-D2P-IN Motherboard GA-J1800M-D2P-IN Sept. 30, 2014 Sept. 30, 2014 Contact Us GIGA-BYTE TECHNOLOGY CO., LTD.
Address: No.6, Bao Chiang Road, Hsin-Tien Dist., New Taipei City 231, Taiwan TEL: +886-2-8912-4000, FAX: +886-2-8912-4005 Tech. and Non-Tech.
Support (Sales/Marketing) : <http://esupport.gigabyte.com>

com WEB address (English): <http://www.gigabyte.com> WEB address (Chinese): <http://www.gigabyte.tw> You may go to the GIGABYTE website, select your language in the language list on the top right corner of the website. Copyright © 2014 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved. The trademarks mentioned in this manual are legally registered to their respective owners. Disclaimer Information in this manual is protected by copyright laws and is the property of GIGABYTE.

•••••



[You're reading an excerpt. Click here to read official GIGABYTE GA-J1800M-D2P-IN user guide](#)

<http://yourpdfguides.com/dref/5736598>