



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for GIGABYTE GA-MA78G-DS3H. You'll find the answers to all your questions on the GIGABYTE GA-MA78G-DS3H in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual GIGABYTE GA-MA78G-DS3H
User guide GIGABYTE GA-MA78G-DS3H
Operating instructions GIGABYTE GA-MA78G-DS3H
Instructions for use GIGABYTE GA-MA78G-DS3H
Instruction manual GIGABYTE GA-MA78G-DS3H

GA-MA78G-DS3H/ GA-MA78G-DS3HP

AM2+/AM2 socket motherboard for
AMD Phenom™ FX processor/AMD Phenom™ X4 processor/
AMD Phenom™ X3 processor/AMD Athlon™ X2 processor/
AMD Athlon™ processor/AMD Sempron™ X2 processor/
AMD Sempron™ processor

User's Manual

Rev. 2002
12ME-MA78GDS3H-2002R



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](http://yourpdfguides.com/dref/3958579)

<http://yourpdfguides.com/dref/3958579>

Manual abstract:

@@24, 2008 Sept. 24, 2008 Copyright © 2008 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved. @@Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice. No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission. Documentation Classifications In order to assist in the use of this product, GIGABYTE provides the following types of documentations: For quick set-up of the product, read the Quick Installation Guide included with the product. For detailed product information, carefully read the User's Manual. For instructions on how to use GIGABYTE's unique features, read or download the information on/from the SupportMotherboardTechnology Guide page on our website. For product-related information, check on our website at: <http://www.gigabyte.com.tw> Identifying Your Motherboard Revision The revision number on your motherboard looks like this: "REV: X.X." For example, "REV: 1.0" means the revision of the motherboard is 1.0. Check your motherboard revision before updating motherboard BIOS, drivers, or when looking for technical information. Example: Table of Contents Box Contents ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 7 Optional Items....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 7 GA-MA78G-DS3H/DS3HP Motherboard Layout

.....

.....

.....

.....

.....

.....

.....

.... 8 Block Diagram.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

..... 9 Chapter 1 Hardware Installation

.....
.....
.....
.....

.....
.....
.....
.....

.... 11 1-1 1-2 1-3 Installation Precautions .

.....
.....
.....
.....

.....
.....
.....
.....

... 11 Product Specifications ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 12 Installing the CPU and CPU Cooler ...

.....
.....
.....

.....
.....
.....
.....

..... 15 1-3-1 1-3-2 Installing the CPU .

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

15 Installing the CPU Cooler

.....

.....
.....
.....

.....
.....
.....

..... 17 Dual Channel Memory Configuration ..

.....
.....
.....

.....
.....
.....

.....

.. 18 Installing a Memory ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

19 1-4 Installing the Memory

.....

.....
.....
.....

.....
.....
.....

.....

18 1-4-1 1-4-2 1-5 1-6 1-7 Installing an Expansion Card

.....

.....
.....
.....
.....

.....
.....
.....

... 20 Back Panel Connectors

.....
.....
.....

.....
.....
.....

.....

.... 21 Internal Connectors .

.....
.....

.....
.....
.....

.....
.....
.....

.....

.. 24 Chapter 2 BIOS Setup ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.... 35 2-1 2-2 2-3 2-4 2-5 2-6 2-7 2-8 2-8 2-10 2-11 2-12 2-13 2-14 Startup Screen .

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
..... 36 The Main Menu

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 37 MB Intelligent Tweaker(M.
I.T.)

.....
.....
.....

.....
.....
.....
.....

.....
... 39 Standard CMOS Features ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

43 Advanced BIOS Features

.....
.....
.....

.....
.....
.....
.....

.....
.....

... 45 Integrated Peripherals ..

.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.. 48 Power Management Setup ..

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

51 PnP/PCI Configurations

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

. 53 PC Health Status

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

.. 54 Load Fail-Safe Defaults

.....
.....

.....
.....

.....
.....

.....
.....

.....
.....

56 Load Optimized Defaults

.....
.....

.....
.....

.....
.....
.....
.....

..... *56 Set Supervisor/User Password*

.....
.....
.....

.....
.....
.....
.....

.....
.....

57 Save & Exit Setup

.....
.....
.....
.....

.....
.....
.....
.....

.... *58 Exit Without Saving* .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. *58 -5- Chapter 3 Drivers Installation*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *59 3-1 3-2 3-3 3-4 3-5 3-6 Installing Chipset Drivers* ...

.....
.....
.....
.....

.....
.....
.....

..... *59 Application Software*

.....
.....
.....

.....
.....
.....

.....
.....
.....

... *60 Technical Manuals*

.....
.....
.....

.....
.....
.....

.....
.....
.....

... *60 Contact*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
61 System

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
..... 61 Download Center ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 62 Chapter 4 Unique Features .

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 63 4-1 4-2 Xpress Recovery2 ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 63 BIOS Update Utilities ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 68 4-2-1 4-2-2 Updating the BIOS with the Q-Flash Utility

.....
.....
.....
.....

.....
.....
. 68 Updating the BIOS with the @BIOS Utility
.....

.....
.....
.....
.....

.....
. 71 4-3 EasyTune 5 Pro
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... 72 Chapter 5 Appendix .
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.... 73 5-1 Configuring SATA Hard Drive(s)
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 73 5-1-1 5-1-2 5-1-3 Configuring the Onboard SATA Controller
.....

.....
.....
.....
.....

.....
.....

..... 73 Making a SATA RAID/AHCI Driver Diskette for Windows XP .

.....

.....

.....

... 79 Installing the SATA RAID/AHCI Driver and Operating System

.....

.....

80 Configuring 2/4/5.1/7.1-Channel Audio ...

.....

.....

.....

.....

.....

.....

.....

.. 85 Installing the S/PDIF In and Out Cable (Optional) ...

.....

.....

.....

.....

.....

. 87 Enabling the Dolby Home Theater Function

.....

.....

.....

.....

.....

.....

... 89 Configuring Microphone Recording

.....

.....

.....

.....

.....

.....

.....

.....

90 Using the Sound Recorder

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 92 Frequently Asked Questions

.....

.....

.....

.....

.....
.....
.....
.....

..... 93 Troubleshooting Procedure ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 94 5-2 Configuring Audio Input and Output ..

.....
.....
.....

.....
.....
.....

... 85 5-2-1 5-2-2 5-2-3 5-2-4 5-2-5 5-3 Troubleshooting

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 93 5-3-1 5-3-2 5-4 Regulatory Statements ..

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

. 96 -6- Box Contents GA-MA78G-DS3H or GA-MA78G-DS3HP motherboard Motherboard driver disk User's Manual Quick Installation Guide One IDE cable and one floppy disk drive cable Two SATA 3Gb/s cables I/O Shield · The box contents above are for reference only and the actual items shall depend on product package you obtain. The box contents are subject to change without notice. · The motherboard image is for reference only. Optional Items 2-port USB 2.0 bracket (Part No. 12CR1-1UB030-51R) 2-port IEEE 1394a bracket (Part No. 12CF1-1IE008-01R) 2-port SATA power cable (Part No. 12CF1-2SERPW-01R) COM port cable (Part No. 12CF1-1CM001-32R) S/PDIF in and out cable (Part No. 12CR1-1SPINO-11R) LPT port cable (Part No. 12CF1-1LP001-01R) -7- GA-MA78G-DS3H/DS3HP Motherboard Layout KB_MS ATX_12V DVI VGA Socket

AM2 PWR_FAN HDMI OPTICAL 1394 USB CPU_FAN USB LAN GA-MA78G-DS3H/DS3HP AUDIO F_AUDIO DDR2_2 SYS_FAN2 RTL 8111C PCIEX16_1 PCIEX1_2 DDR2_1 DDR2_3 DDR2_4 PCIEX1_1 AMD 780G ATX IDE F_USB1 F_USB2 CLR_CMOS AMD SB700 BATTERY F_USB3 F_USB4 CD_IN CODEC SPDIF_IO PCIEX1_3 PCIEX4_1 SATA2_1 SATA2_0 SATA2_3 TSB43AB23 SATA2_5 SATA2_4 IT8718 PCII PCI2 F_1394_2 COM FDD F_1394_1 CI LPT PWR_LED SYS_FAN1 M_BIOS B_BIOS -8- F_PANEL SATA2_2 Block Diagram 1 PCI Express x4 1 PCI Express x16 AMD Socket AM2+/AM2 CPU CPU CLK+/- (200 MHz) DDR2 1066/800/667 MHz DIMM Dual Channel Memory Hyper Transport 3.0 PCI Express x16 GFX CLK (100 MHz) AMD 780G PCI Express Bus x1 PCIe CLK (100 MHz) x1 x 1 RTL 8111C RJ45 LAN 6 SATA 3Gb/s ATA-133/100/66/33 IDE Channel AMD SB700 PCI Bus TSB43AB23 CODEC 3 IEEE 1394a Surround Speaker Out Center/Subwoofer Speaker Out Side Speaker Out MIC Line-Out Line-In SPDIF In SPDIF Out PCIe CLK (100 MHz) x4 D-Sub DVI-D or HDMI (Note1) 3 PCI Express x1 (Note2) 12 USB Ports Dual BIOS LPC BUS IT8718 Floppy LPT Port COM Port PS/2 KB/Mouse 2 PCI (Note1) Simultaneous output for DVI-D and HDMI is not supported. (Note2) The PCIEX1_2 and PCIEX1_3 slots share bandwidth with the PCIEX4_1 slot. When PCIEX4_1 slot is populated with a x4 card, the PCIEX1_2 and PCIEX1_3 slots become unavailable.

-9- - 10 - Chapter 1 Hardware Installation 1-1 Installation Precautions The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Prior to installation, carefully read the user's manual and follow these procedures: · Prior to installation, do not remove or break motherboard S/N (Serial Number) sticker or warranty sticker provided by your dealer. These stickers are required for warranty validation. · Always remove the AC power by unplugging the power cord from the power outlet before · · installing or removing the motherboard or other hardware components. When connecting hardware components to the internal connectors on the motherboard, make sure they are connected tightly and securely.

When handling the motherboard, avoid touching any metal leads or connectors. It is best to wear an electrostatic discharge (ESD) wrist strap when handling electronic components such as a motherboard, CPU or memory. If you do not have an ESD wrist strap, keep your hands dry and first touch a metal object to eliminate static electricity. Prior to installing the motherboard, please have it on top of an antistatic pad or within an electrostatic shielding container. Before unplugging the power supply cable from the motherboard, make sure the power supply has been turned off. Before turning on the power, make sure the power supply voltage has been set according to the local voltage standard.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](#)

<http://yourpdfguides.com/dref/3958579>

Before using the product, please verify that all cables and power connectors of your hardware components are connected. To prevent damage to the motherboard, do not allow screws to come in contact with the motherboard circuit or its components. Make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing. Do not place the computer system on an uneven surface.

Do not place the computer system in a high-temperature environment. Turning on t than 4 GB. (Note 2) Whether 1066 MHz memory speed is supported depends on the CPU being used. (Note 3) For Windows Vista/XP 32-bit operating system only. (Note 4) If you are installing a PCI Express graphics card, be sure to install it in the PCIEX16_1 slot for optimum performance. (Note 5) The PCIEX1_2 and PCIEX1_3 slots share bandwidth with the PCIEX4_1 slot. When PCIEX4_1 slot is populated with a x4 card, the PCIEX1_2 and PCIEX1_3 slots become unavailable. (Note 6) The DVI-D port does not support D-Sub connection by adapter. (Note 7) Whether the CPU/system fan speed control function is supported will depend on the CPU/system cooler you install. (Note 8) Available functions in EasyTune may differ by motherboard model.

GA-MA78G-DS3H/DS3HP Motherboard - 14 - 1-3 Installing the CPU and CPU Cooler Read the following guidelines before you begin to install the CPU: · Make sure that the motherboard supports the CPU. (Go to GIGABYTE's website for the latest CPU support list.) · Always turn off the computer and unplug the power cord from the power outlet before installing the CPU to prevent hardware damage. · Locate the pin one of the CPU. The CPU cannot be inserted if oriented incorrectly.

· Apply an even and thin layer of thermal grease on the surface of the CPU. · Do not turn on the computer if the CPU cooler is not installed, otherwise overheating and damage of the CPU may occur. · Set the CPU host frequency in accordance with the CPU specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the standard requirements for the peripherals. If you wish to set the frequency beyond the standard specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.

1-3-1 Installing the CPU A. Locate the pin one (denoted by a small triangle) of the CPU socket and the CPU. A Small Triangle Mark Denotes Pin One of the Socket AM2 Socket A Small Triangle Marking Denotes CPU Pin One AM2+/AM2 CPU - 15 - Hardware Installation B. Follow the steps below to correctly install the CPU into the motherboard CPU socket. Before installing the CPU, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the CPU. CPU Socket Locking Lever Step 1: Completely lift up the CPU socket locking lever. Step 2: Align the CPU pin one (small triangle marking) with the triangle mark on the CPU socket and gently insert the CPU into the socket. Make sure that the CPU pins fit perfectly into their holes. Once the CPU is positioned into its socket, place one finger down on the middle of the CPU, lowering the locking lever and latching it into the fully locked position. Do not force the CPU into the CPU socket.

The CPU cannot fit in if oriented incorrectly. Adjust the CPU orientation if this occurs. GA-MA78G-DS3H/DS3HP Motherboard - 16 - 1-3-2 Installing the CPU Cooler Follow the steps below to correctly install the CPU cooler on the CPU. (The following procedure uses the GIGABYTE cooler as the example.) Step 1: Apply an even and thin layer of thermal grease on the surface of the installed CPU. Step 2: Place the CPU cooler on the CPU. Step 3: Hook the CPU cooler clip to the mounting lug on one side of the retention frame. On the other side, push straight down on the the CPU cooler clip to hook it to the mounting lug on the retention frame. Step 4: Turn the cam handle from the left side to the right side (as the picture above shows) to lock into place. (Refer to your CPU cooler installation manual for instructions on installing the cooler.

) Step 5: Finally, attach the power connector of the CPU cooler to the CPU fan header (CPU_FAN) on the motherboard. Use extreme care when removing the CPU cooler because the thermal grease/tape between the CPU cooler and CPU may adhere to the CPU. Inadequately removing the CPU cooler may damage the CPU. - 17 Hardware Installation 1-4 Installing the Memory Read the following guidelines before you begin to install the memory: · Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used.

(Go to GIGABYTE's website for the latest memory support list.) · Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage. · Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.

1-4-1 Dual Channel Memory Configuration This motherboard provides four DDR2 memory sockets and supports Dual Channel Technology. After the memory is installed, the BIOS will automatically detect the specifications and capacity of the memory. Enabling Dual Channel memory mode will double the original memory bandwidth. The four DDR2 memory sockets are divided into two channels and each channel has two memory sockets as following: Channel

0: DDR2_1, DDR2_3 Channel 1: DDR2_2, DDR2_4 Dual Channel Memory Configurations Table DDR2_1 Two Modules Four Modules DS/SS -DS/SS DDR2_2 DDR2_3 DDR2_4 DS/SS -DS/SS -DS/SS DS/SS -DS/SS DS/SS (SS=Single-Sided, DS=Double-Sided, "- "=No Memory) If two memory modules are to be installed, it is recommended that you install them in the DDR2_1 and DDR2_2 sockets. DDR2_1 DDR2_2 DDR2_3 DDR2_4 Due to CPU limitation, read the following guidelines before installing the memory in Dual Channel mode. 1. Dual Channel mode cannot be enabled if only one DDR2 memory module is installed. 2. When enabling Dual Channel mode with two or four memory modules, it is recommended that memory of the same capacity, brand, speed, and chips be used and installed in the same colored DDR2 sockets for optimum performance. GA-MA78G-DS3H/DS3HP Motherboard - 18 - 1-4-2

Installing a Memory Before installing a memory module , make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the memory module.

DDR2 DIMMs are not compatible to DDR DIMMs. Be sure to install DDR2 DIMMs on this motherboard. Notch DDR2 DIMM A DDR2 memory module has a notch, so it can only fit in one direction. Follow the steps below to correctly install your memory modules in the memory sockets. Step 1: Note the orientation of the memory module. Spread the retaining clips at both ends of the memory socket.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](http://yourpdfguides.com/dref/3958579)
<http://yourpdfguides.com/dref/3958579>

Place the memory module on the socket. As indicated in the picture on the left, place your fingers on the top edge of the memory, push down on the memory and insert it vertically into the memory socket. Step 2: The clips at both ends of the socket will snap into place when the memory module is securely inserted. - 19 - Hardware Installation 1-5 Installing an Expansion Card Read the following guidelines before you begin to install an expansion card: · Make sure the motherboard supports the expansion card.

Carefully read the manual that came with your expansion card. · Always turn off the computer and unplug the power cord from the power outlet before installing an expansion card to prevent hardware damage. PCI Express x1 Slot PCI Express x16 Slot PCI Express x16 Slot PCI Slot Follow the steps below to correctly install your expansion card in the expansion slot. 1. Locate an expansion slot that supports your card.

Remove the metal slot cover from the chassis back panel. 2. Align the card with the slot, and press down on the card until it is fully seated in the slot. 3. Make sure the metal contacts on the card are completely inserted into the slot.

4. Secure the card's metal bracket to the chassis back panel with a screw. 5. After installing all expansion cards, replace the chassis cover(s). 6. Turn on your computer. If necessary, go to BIOS Setup to make any required BIOS changes for your expansion card(s). 7. Install the driver provided with the expansion card in your operating system. Example: Installing and Removing a PCI Express x16 Graphics Card: · Installing a Graphics Card: Gently push down on the top edge of the card until it is fully inserted into the PCIEX16_1 slot.

Make sure the card is securely seated in the slot and does not rock. · Removing the Card: Gently push back on the lever on the slot and then lift the card straight out from the slot. GA-MA78G-DS3H/DS3HP Motherboard - 20 - 1-6 Back Panel Connectors PS/2 Keyboard and PS/2 Mouse Port Use the upper port (green) to connect a PS/2 mouse and the lower port (purple) to connect a PS/2 keyboard. D-Sub Port The D-Sub port supports a 15-pin D-Sub connector. Connect a monitor that supports D-Sub connection to this port. DVI-D Port The DVI-D port supports DVI-D specification. Connect a monitor that supports DVI-D connection to this port. HDMI Port The HDMI (High-Definition Multimedia Interface) provides an all-digital audio/video interface to transmit the uncompressed audio/video signals and is HDCP compliant. Connect the HDMI audio/ video device to this port. The HDMI Technology can support a maximum resolution of 1920x1080p but the actual resolutions supported depend on the monitor being used.

· After installing the HDMI device, make sure the default device for sound playback is the HDMI device. (The item name may differ by operating system. Refer the figures below for details.) · Please note the HDMI audio output only supports AC3, DTS and 2-channel-LPCM formats.

(AC3 and DTS require the use of an external decoder for decoding.) In Windows XP, select Start>Control Panel>Sounds and Audio Devices>Audio, set the Default device for sound playback to Realtek HDA HDMI Out. In Windows Vista, select Start>Control Panel> Sound, select Realtek HDMI Output and then click Set Default. - 21 - Hardware Installation Optical S/PDIF Out Connector This connector provides digital audio out to an external audio system that supports digital optical audio. Before using this feature, ensure that your audio system provides an optical digital audio in connector.

IEEE 1394a Port The IEEE 1394 port supports the IEEE 1394a specification, featuring high speed, high bandwidth and hotplug capabilities. Use this port for an IEEE 1394a device. USB Port The USB port supports the USB 2.0/1.1 specification. Use this port for USB devices such as a USB keyboard/mouse, USB printer, USB flash drive and etc. RJ-45 LAN Port The Gigabit Ethernet LAN port provides Internet connection at up to 1 Gbps data rate. The following describes the states of the LAN port LEDs. Connection/ Speed LED Activity LED Connection/Speed LED: State Description Orange Green LAN Port Off 1 Gbps data rate 100 Mbps data rate 10 Mbps data rate Activity LED: State Blinking Off Description Data transmission or receiving is occurring No data transmission or receiving is occurring Center/Subwoofer Speaker Out Jack (Orange) Use this audio jack to connect center/subwoofer speakers in a 5.1/7.

1-channel audio configuration. Rear Speaker Out Jack (Black) Use this audio jack to connect rear speakers in a 4/5.1/7.1-channel audio configuration. Side Speaker Out Jack (Gray) Use this audio jack to connect side speakers in a 7.1-channel audio configuration. Line In Jack (Blue) The default line in jack. Use this audio jack for line in devices such as an optical drive, walkman, etc. Line Out Jack (Green) The default line out jack. Use this audio jack for a headphone or 2-channel speaker.

This jack can be used to connect front speakers in a 4/5.1/7.1-channel audio configuration. Mic In Jack (Pink) The default Mic in jack. Microphones must be connected to this jack.

In addition to the default speakers settings, the ~ audio jacks can be reconfigured to perform different functions via the audio software. Only microphones still MUST be connected to the default Mic in jack (). Refer to the instructions on setting up a 2/4/5.1/ 7.1-channel audio configuration in Chapter 5, "Configuring 2/4/5.

1/7.1-Channel Audio." · When removing the cable connected to a back panel connector, first remove the cable from your device and then remove it from the motherboard. · When removing the cable, pull it straight out from the connector. Do not rock it side to side to prevent an electrical short inside the cable connector. GA-MA78G-DS3H/DS3HP Motherboard - 22 - A. Dual Display Configurations: This motherboard provides three ports for video output: DVI-D, HDMI and D-Sub. The table below shows the supported dual display configurations. Dual Combination Supported or Not DVI-D + D-Sub Yes Display DVI-D + HDMI No HDMI + D-Sub Yes B. Playback of HD DVD and Blu-ray Discs: In order to get better playback quality, when playing the HD DVD or Blu-ray discs, refer to the recommended system requirements (or better) below.

· CPU: AMD Athlon™ LE1620 or above processor · Memory: Two 1 GB DDR2 800 memory modules with dual channel mode enabled · BIOS Setup: At least 256 MB of UMA Frame Buffer Size (refer to Chapter 2, "BIOS Setup," "Advanced BIOS Features," for more information) · Playback software: CyberLink PowerDVD 8.0 or above (Note: Please ensure Hardware Acceleration is enabled) File Format Non-protected contents HD-DVD Blu-ray Suitable Resolution Windows XP 1920 x 1080p 1920 x 1080p 1920 x 1080p Windows Vista 1920 x 1080p 1920 x 1080p 1920 x 1080p - 23 - Hardware Installation 1-7 Internal Connectors 1 3 6 2 13 5 21 14 15 16 8 11 9 12 10 19 7 17 20 18 4 1) 2) 3) 4) 5) 6) 7) 8) 9) 10) 11) ATX_12V ATX_CPU_FAN SYS_FAN1 SYS_FAN2 PWR_FAN FDD IDE SATA2_0 / 1 / 2 / 3 / 4 / 5 PWR_LED BATTERY 12) 13) 14) 15) 16) 17) 18) 19) 20) 21) F_PANEL F_AUDIO CD_IN SPDIF_IO F_USB1 / F_USB2 / F_USB3 / F_USB4 F_1394_1 / F_1394_2 LPT COM CI CLR_CMOS Read the following guidelines before connecting external devices: · First make sure your devices are compliant with the connectors you wish to connect.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](http://yourpdfguides.com/dref/3958579)
<http://yourpdfguides.com/dref/3958579>

· Before installing the devices, be sure to turn off the devices and your computer. Unplug the power cord from the power outlet to prevent damage to the devices. · After installing the device and before turning on the computer, make sure the device cable has been securely attached to the connector on the motherboard. GA-MA78G-DS3H/DS3HP Motherboard - 24 - 1/2) ATX_12V/ATX (2x2 12V Power Connector and 2x12 Main Power Connector) With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, first make sure the power supply is turned off and all devices are properly installed. The power connector possesses a foolproof design. Connect the power supply cable to the power connector in the correct orientation. The 12V power connector mainly supplies power to the CPU.

If the 12V power connector is not connected, the computer will not start. · To meet expansion requirements, it is recommended that a power supply that can withstand high power consumption be used (500W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable or unbootable system. · The main power connector is compatible with power supplies with 2x10 power connectors. When using a 2x12 power supply, remove the protective cover from the main power connector on the motherboard.

Do not insert the power supply cable into pins under the protective cover when using a 2x10 power supply. 1 3 ATX_12V: Pin No. 1 2 3 4 Definition GND GND +12V +12V 2 4 ATX_12V 13 1 ATX: Pin No. 1 2 3 4 5 6 7 8 9 10 11 12 ATX Definition 3.3V 3.

3V GND +5V GND +5V GND Power Good 5V SB(stand by +5V) +12V +12V (Only for 2x12-pinATX) 3.3V (Only for 2x12-pinATX) Pin No. 13 14 15 16 17 18 19 20 21 22 23 24 Definition 3.3V -12V GND PS_ON(soft On/Off) GND GND GND -5V +5V +5V +5V (Only for 2x12-pin ATX) GND (Only for 2x12-pin ATX) 24 12 - 25 - Hardware Installation 3/4/5/6) CPU_FAN/SYS_FAN1/SYS_FAN2/PWR_FAN (Fan Headers) The motherboard has a 4-pin CPU fan header (CPU_FAN), a 3-pin (SYS_FAN2) and a 4-pin (SYS_FAN1) system fan headers, and a 3-pin power fan header (PWR_FAN). Most fan headers possess a foolproof insertion design. When connecting a fan cable, be sure to connect it in the correct orientation (the black connector wire is the ground wire). The motherboard supports CPU fan speed control, which requires the use of a CPU fan with fan speed control design. For optimum heat dissipation, it is recommended that a system fan be installed inside the chassis. CPU_FAN: 1 CPU_FAN Pin No. 1 2 3 4 SYS_FAN1: 1 Definition GND +12V / Speed Control Sense Speed Control Definition GND Speed Control Sense +5V Definition GND +12V Sense Pin No.

1 2 3 4 1 SYS_FAN1 SYS_FAN2/PWR_FAN: Pin No. 1 2 3 1 PWR_FAN SYS_FAN2 · Be sure to connect fan cables to the fan headers to prevent your CPU and system from overheating. Overheating may result in damage to the CPU or the system may hang. · These fan headers are not configuration jumper blocks. Do not place a jumper cap on the headers. 7) FDD (Floppy Disk Drive Connector) This connector is used to connect a floppy disk drive. The types of floppy disk drives supported are: 360 KB, 720 KB, 1.2 MB, 1.44 MB, and 2.88 MB.

Before connecting a floppy disk drive, be sure to locate pin 1 of the connector and the floppy disk drive cable. The pin 1 of the cable is typically designated by a stripe of different color. 33 1 34 2 GA-MA78G-DS3H/DS3HP Motherboard - 26 - 8) IDE (IDE Connector) The IDE connector supports up to two IDE devices such as hard drives and optical drives. Before attaching the IDE cable, locate the foolproof groove on the connector. If you wish to connect two IDE devices, remember to set the jumpers and the cabling according to the role of the IDE devices (for example, master or slave).

(For information about configuring master/slave settings for the IDE devices, read the instructions from the device manufacturers.) 40 39 2 1 9)

SATA2_0/1/2/3/4/5 (SATA 3Gb/s Connectors) The SATA connectors conform to SATA 3Gb/s standard and are compatible with SATA 1.5Gb/s standard. Each SATA connector supports a single SATA device. The AMD SB700 controller supports RAID 0, RAID 1, RAID 10 and JBOD.

Refer to Chapter 5, "Configuring SATA Hard Drive(s)," for instructions on configuring a RAID array. Pin No. 1 SATA2_1 7 1 SATA2_0 SATA2_3 7 1 SATA2_2 1 7 SATA2_4 SATA2_5 1 7 Definition GND TXP TXN GND RXN RXP GND 2 3 4 5 6 7 Please connect the L-shaped end of the SATA 3Gb/s cable to your SATA hard drive. · A RAID 0 or RAID 1 configuration requires at least two hard drives. If more than two hard drives are to be used, the total number of hard drives must be an even number. · A RAID 10 configuration requires at least four hard drives and the total number of hard drives must be an even number. - 27 Hardware Installation 10) PWR_LED (System Power LED Header) This header can be used to connect a system power LED on the chassis to indicate system power status. The LED is on when the system is operating. The LED keeps blinking when the system is in S1 sleep state. The LED is off when the system is in S3/S4 sleep state or powered off (S5).

Pin No. 1 2 3 1 Definition MPD+ MPDMPD- System Status LED S0 S1 S3/S4/S5 On Blinking Off 11) BATTERY The battery provides power to keep the values (such as BIOS configurations, date, and time information) in the CMOS when the computer is turned off. Replace the battery when the battery voltage drops to a low level, or the CMOS values may not be accurate or may be lost. You may clear the CMOS values by removing the battery: 1. Turn off your computer and unplug the power cord. 2. Gently remove the battery from the battery holder and wait for one minute. (Or use a metal object like a screwdriver to touch the positive and negative terminals of the battery holder, making them short for 5 seconds.) 3. Replace the battery.

4. Plug in the power cord and restart your computer. · Always turn off your computer and unplug the power cord before replacing the battery. · Replace the battery with an equivalent one. Danger of explosion if the battery is replaced with an incorrect model.

· Contact the place of purchase or local dealer if you are not able to replace the battery by yourself or uncertain about the battery model. · When installing the battery, note the orientation of the positive side (+) and the negative side (-) of the battery (the positive side should face up). · Used batteries must be handled in accordance with local environmental regulations. GA-MA78G-DS3H/DS3HP Motherboard - 28 - 12) F_PANEL (Front Panel Header) Connect the power switch, reset switch, speaker and system status indicator on the chassis front panel to this header according to the pin assignments below.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](http://yourpdfguides.com/dref/3958579)

<http://yourpdfguides.com/dref/3958579>

Note the positive and negative pins before connecting the cables.

20 19 SPEAK Speaker SPEAK+ Power Switch Message/Power/Sleep LED PWPW+ MSGMSG+ 21 NC RES+ RESHDHD+ Reset Switch Hard Drive Activity LED · MSG (Message/Power/Sleep LED, Yellow): Connects to the power status indicator on the chassis front panel. The System Status LED is on when the system is operating. The LED keeps blinking when S0 On S1 Blinking the system is in S1 sleep state. The LED is off when the system is in S3/S4/S5 Off S3/S4 sleep state or powered off (S5). · PW (Power Switch, Red): Connects to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch (refer to Chapter 2, "BIOS Setup," "Power Management Setup," for more information). · SPEAK (Speaker, Orange): Connects to the speaker on the chassis front panel. The system reports system startup status by issuing a beep code. One single short beep will be heard if no problem is detected at system startup. If a problem is detected, the BIOS may issue beeps in different patterns to indicate the problem.

Refer to Chapter 5, "Troubleshooting," for information about beep codes. · HD (Hard Drive Activity LED, Blue) Connects to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data. · RES (Reset Switch, Green): Connects to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart. · NC (Purple): No connection The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly. - 29 Hardware Installation 13) F_AUDIO (Front Panel Audio Header) The front panel audio header supports Intel High Definition audio (HD) and AC'97 audio.

You may connect your chassis front panel audio module to this header.

Make sure the wire assignments of the module connector match the pin assignments of the motherboard header. Incorrect connection between the module connector and the motherboard header will make the device unable to work or even damage it. For HD Front Panel Audio: Pin No. Definition 1 2 1 10 9 For AC'97 Front Panel Audio: Pin No. Definition 1 2 3 4 5 6 7 8 9 10 MIC GND MIC Power NC Line Out (R) NC NC No Pin Line Out (L) NC MIC2_L GND MIC2_R -ACZ_DET LINE2_R GND FAUDIO_JD No Pin LINE2_L GND 2 3 4 5 6 7 8 9 10 · The front panel audio header supports HD audio by default.

If your chassis provides an AC'97 front panel audio module, refer to the instructions on how to activate AC'97 functionality via the audio software in Chapter 5, "Configuring 2/4/5.1/7.1-Channel Audio." · Audio signals will be present on both of the front and back panel audio connections simultaneously. If you want to mute the back panel audio (only supported when using an HD front panel audio module), refer to Chapter 5, "Configuring 2/4/5.

1/7.1-Channel Audio." · Some chassis provide a front panel audio module that has separated connectors on each wire instead of a single plug. For information about connecting the front panel audio module that has different wire assignments, please contact the chassis manufacturer. 14) CD_IN (CD In Connector) You may connect the audio cable that came with your optical drive to the header. Pin No. 1 1 Definition CD-L GND GND CD-R 2 3 4 GA-MA78G-DS3H/DS3HP Motherboard - 30 - 15) SPDIF_IO (S/PDIF In/Out Header, Red) This header supports digital S/PDIF in/out. Via an optional S/PDIF in and out cable, this header can connect to an audio device that supports digital audio out and an audio system that supports digital audio in. For purchasing the optional S/PDIF in and out cable, please contact the local dealer. Pin No.

1 2 6 2 5 1 Definition Power No Pin SPDIF SPDIFI GND GND 3 4 5 6 16) F_USB1/F_USB2/F_USB3/F_USB4 (USB Headers, Yellow) The headers conform to USB 2.0/1.1 specification. Each USB header can provide two USB ports via an optional USB bracket. For purchasing the optional USB bracket, please contact the local dealer. Pin No. 1 10 9 Definition Power (5V) Power (5V) USB DX USB DY USB DX+ USB DY+ GND GND No Pin NC 2 3 4 5 6 7 8 9 10 2 1 · Do not plug the IEEE 1394 bracket (2x5-pin) cable into the USB header. · Prior to installing the USB bracket, be sure to turn off your computer and unplug the power cord from the power outlet to prevent damage to the USB bracket. - 31 Hardware Installation 17) F_1394_1/F_1394_2 (IEEE 1394a Header, Gray) The header conforms to IEEE 1394a specification. The IEEE 1394a header can provide one IEEE 1394a port via an optional IEEE 1394a bracket. For purchasing the optional IEEE 1394a bracket, please contact the local dealer. Pin No. 1 2 9 10 1 2 Definition TPA+ TPAGND GND TPB+ TPBPower (12V) Power (12V) No Pin GND 3 4 5 6 7 8 9 10 · Do not plug the USB bracket cable into the IEEE 1394a header. · Prior to installing the IEEE 1394a bracket, be sure to turn off your computer and unplug the power cord from the power outlet to prevent damage to the IEEE 1394a bracket. · To connect an IEEE 1394a device, attach one end of the device cable to your computer and then attach the other end of the cable to the IEEE 1394a device.

Ensure that the cable is securely connected. 18) LPT (Parallel Port Header) The LPT header can provide one parallel port via an optional LPT port cable. For purchasing the optional LPT port cable, please contact the local dealer. 25 1 26 2 Pin No. 1 2 3 4 5 6 7 8 9 10 11 12 13 Definition STBAFDPD0 ERRPD1 INITPD2 SLINPD3 GND PD4 GND PD5 Pin No.

14 15 16 17 18 19 20 21 22 23 24 25 26 Definition GND PD6 GND PD7 GND ACKGND BUSY GND PE No Pin SLCT GND GA-MA78G-DS3H/DS3HP Motherboard - 32 - 19) COM (Serial Port Header) The COM header can provide one serial port via an optional COM port cable. For purchasing the optional COM port cable, please contact the local dealer. Pin No. 1 9 1 Definition NDCD NSIN NSOUT NDTR GND NDSR NRTS NCTS NRI No Pin 2 3 4 5 10 2 6 7 8 9 10 20) CI (Chassis Intrusion Header) This motherboard provides a chassis detection feature that detects if the chassis cover has been removed. This function requires a chassis with chassis intrusion detection design. Pin No. 1 Definition Signal GND 1 2 - 33 - Hardware Installation 21) CLR_CMOS (Clearing CMOS Jumper) Use this jumper to clear the CMOS values (e.g. date information and BIOS configurations) and reset the CMOS values to factory defaults. To clear the CMOS values, place a jumper cap on the two pins to temporarily short the two pins or use a metal object like a screwdriver to touch the two pins for a few seconds.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](http://yourpdfguides.com/dref/3958579)

<http://yourpdfguides.com/dref/3958579>

Open: Normal Short: Clear CMOS Values · Always turn off your computer and unplug the power cord from the power outlet before clearing the CMOS values. · After clearing the CMOS values and before turning on your computer, be sure to remove the jumper cap from the jumper. Failure to do so may cause damage to the motherboard. · After system restart, go to BIOS Setup to load factory defaults (select Load Optimized Defaults) or manually configure the BIOS settings (refer to Chapter 2, "BIOS Setup," for BIOS configurations). GA-MA78G-DS3H/DS3HP Motherboard - 34 - Chapter 2 BIOS Setup BIOS (Basic Input and Output System) records hardware parameters of the system in the CMOS on the motherboard. Its major functions include conducting the Power-On Self-Test (POST) during system startup, saving system parameters and loading operating system, etc. BIOS includes a BIOS Setup program that allows the user to modify basic system configuration settings or to activate certain system features. When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS to keep the configuration values in the CMOS. To access the BIOS Setup program, press the <Delete> key during the POST when the power is turned on. To see more advanced BIOS Setup menu options, you can press <Ctrl> + <F1> in the main menu of the BIOS Setup program. To upgrade the BIOS, use either the GIGABYTE Q-Flash or @BIOS utility. · Q-Flash allows the user to quickly and easily upgrade or back up BIOS without entering the operating system. · @BIOS is a Windows-based utility that searches and downloads the latest version of BIOS from the Internet and updates the BIOS. For instructions on using the Q-Flash and @BIOS utilities, refer to Chapter 4, "BIOS Update Utilities." · Because BIOS flashing is potentially risky, if you do not encounter problems using the current version of BIOS, it is recommended that you not flash the BIOS.

To flash the BIOS, do it with caution. Inadequate BIOS flashing may result in system malfunction. · BIOS will emit a beep code during the POST. Refer to Chapter 5, "Troubleshooting," for the beep codes description. · It is recommended that you not alter the default settings (unless you need to) to prevent system instability or other unexpected results.

Inadequately altering the settings may result in system's failure to boot. If this occurs, try to clear the CMOS values and reset the board to default values.

(Refer to the "Load Optimized Defaults" section in this chapter or introductions of the battery/clearing CMOS jumper in Chapter 1 for how to clear the CMOS values.) - 35 - BIOS Setup 2-1 Startup Screen The following screens may appear when the computer boots. A. The LOGO Screen (Default) Function Keys B. The POST Screen Award Modular BIOS v6.00PG, An Energy Star Ally Copyright (C) 1984-2008, Award Software, Inc. GA-MA78G-DS3H FAdc . .

. . : BIOS Setup/Q-Flash <F9>: XpressRecovery2 <F12>: Boot Menu <End>: Qflash 09/16/2008-RS780-SB700-6A66AG0IC-00 Motherboard Model BIOS Version Function Keys Function Keys: <TAB>: POST Screen Press the <Tab> key to show the BIOS POST screen. To show the BIOS POST screen at system startup, refer to the instructions on the Full Screen LOGO Show item on page 46. : BIOS Setup Press the <Delete> key to enter BIOS Setup. <F9>: Xpress Recovery2 If you have ever entered Xpress Recovery2 to back up hard drive data using the motherboard driver disk, the <F9> key can be used for subsequent access to XpressRecovery2 during the POST. For more information, refer to Chapter 4, "Xpress Recovery2." <F12>: Boot Menu Boot Menu allows you to set the first boot device without entering BIOS Setup. In Boot Menu, use the up arrow key < > or the down arrow key < > to select the first boot device, then press <Enter> to accept. To exit Boot Menu, press <Esc>.

The system will directly boot from the device configured in Boot Menu. Note: The setting in Boot Menu is effective for one time only. After system restart, the device boot order will still be based on BIOS Setup settings. You can access Boot Menu again to change the first boot device setting as needed. <End>: Q-Flash Press the <End> key to access the Q-Flash utility directly without having to enter BIOS Setup first.

GA-MA78G-DS3H/DS3HP Motherboard - 36 - 2-2 The Main Menu Once you enter the BIOS Setup program, the Main Menu (as shown below) appears on the screen. Use arrow keys to move among the items and press <Enter> to accept or enter a sub-menu. (Sample BIOS Version: FAdc) CMOS Setup Utility-Copyright (C) 1984-2008 Award Software MB Intelligent Tweaker(M.I.T.

) Standard CMOS Features Advanced BIOS Features Integrated Peripherals Power Management Setup PnP/PCI Configurations PC Health Status ESC: Quit F8: Q-Flash : Select Item F10: Save & Exit Setup Change CPU's Clock & Voltage Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving F11: Save CMOS to BIOS F12: Load CMOS from BIOS BIOS Setup Program Function Keys < > < > <Enter> <Esc> < > Move the selection bar to select an item Execute command or enter the submenu Main Menu: Exit the BIOS Setup program Submenus: Exit current submenu Increase the numeric value or make changes Decrease the numeric value or make changes Show descriptions of the function keys Move cursor to the Item Help block on the right (submenus only) Restore the previous BIOS settings for the current submenus Load the Fail-Safe BIOS default settings for the current submenus Load the Optimized BIOS default settings for the current submenus Access the Q-Flash utility Display system information Save all the changes and exit the BIOS Setup program Save CMOS to BIOS Load CMOS from BIOS <Page Up> <Page Down> <F1> <F2> <F5> <F6> <F7> <F8> <F9> <F10> <F11> <F12> Main Menu Help The onscreen description of a highlighted setup option is displayed on the bottom line of the Main Menu. Submenu Help While in a submenu, press <F1> to display a help screen (General Help) of function keys available for the menu. Press <Esc> to exit the help screen. Help for each item is in the Item Help block on the right side of the submenu. · If you do not find the settings you want in the Main Menu or a submenu, press <Ctrl>+<F1> to access more advanced options. · When the system is not stable as usual, select the Load Optimized Defaults item to set your system to its defaults. · The BIOS Setup menus described in this chapter are for reference only and may differ by BIOS version. - 37 BIOS Setup The Functions of the <F11> and <F12> keys (For the Main Menu Only) F11 : Save CMOS to BIOS This function allows you to save the current BIOS settings to a profile.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](http://yourpdfguides.com/dref/3958579)
<http://yourpdfguides.com/dref/3958579>

You can create up to 8 profiles (Profile 1-8) and name each profile. First enter the profile name (to erase the default profile name, use the SPACE key) and then press <Enter> to complete.

F12 : Load CMOS from BIOS If your system becomes unstable and you have loaded the BIOS default settings, you can use this function to load the BIOS settings from a profile created before, without the hassles of reconfiguring the BIOS settings. First select the profile you wish to load, then press <Enter> to complete. **MB Intelligent Tweaker(M.I.T.)** Use this menu to configure the clock, frequency and voltages of your CPU, memory, etc. **Standard CMOS Features** Use this menu to configure the system time and date, hard drive types, floppy disk drive types, and the type of errors that stop the system boot, etc. **Advanced BIOS Features** Use this menu to configure the device boot order, advanced features available on the CPU, and the primary display adapter. **Integrated Peripherals** Use this menu to configure all peripheral devices, such as IDE, SATA, USB, integrated audio, and integrated LAN, etc. **Power Management Setup**

Use this menu to configure all the power-saving functions.

PnP/PCI Configurations Use this menu to configure the system's PCI & PnP resources. **PC Health Status** Use this menu to see information about autodetected system/CPU temperature, system voltage and fan speed, etc. **Load Fail-Safe Defaults** Fail-Safe defaults are factory settings for the most stable, minimal-performance system operations. **Load Optimized Defaults** Optimized defaults are factory settings for optimal-performance system operations. **Set Supervisor Password** Change, set, or disable password.

It allows you to restrict access to the system and BIOS Setup. A supervisor password allows you to make changes in BIOS Setup. **Set User Password** Change, set, or disable password. It allows you to restrict access to the system and BIOS Setup. An user password only allows you to view the BIOS settings but not to make changes.

Save & Exit Setup Save all the changes made in the BIOS Setup program to the CMOS and exit BIOS Setup. (Pressing <F10> can also carry out this task.)

Exit Without Saving Abandon all changes and the previous settings remain in effect. Pressing <Y> to the confirmation message will exit BIOS Setup.

(Pressing <Esc> can also carry out this task.) GA-MA78G-DS3H/DS3HP Motherboard - 38 - 2-3 MB Intelligent Tweaker(M.I.T.) CMOS Setup Utility-

Copyright (C) 1984-2008 Award Software MB Intelligent Tweaker(M.I.

T.) [Press Enter] [Auto] [Disabled] 500 [Auto] [Auto] [Auto] 200 [Auto] [Auto] DDR 667 [Unganged] ***** [Auto] Normal Normal Normal Normal

Normal +/-/PU/PD: Value F6: Fail-Safe Defaults F10: Save ESC: Exit F1: General Help F7: Optimized Defaults Item Help Menu Level DRAM

Configuration HT Link Frequency VGA Core Clock control x VGA Core Clock (Mhz) CPU Clock Ratio CPU NorthBridge Freq. (Note) CPU Host Clock Control x CPU Frequency (MHz) PCIE Clock (MHz) Set Memory Clock x Memory Clock DCTs Mode (Note) ***** System Voltage Optimized System Voltage Control x DDR2 Voltage Control x NorthBridge Volt Control x SouthBridge Volt Control x CPU NB VID Control (Note) x CPU Voltage Control :

Move Enter: Select F5: Previous Values CMOS Setup Utility-Copyright (C) 1984-2008 Award Software MB Intelligent Tweaker(M.I.T.) Normal CPU Vcore 1.3500V Item Help Menu Level : Move Enter: Select F5: Previous Values +/-/PU/PD: Value F6: Fail-Safe Defaults F10: Save ESC: Exit F1: General Help

F7: Optimized Defaults · Whether the system will work stably with the overclock/overvoltage settings you made is dependent on your overall system configurations. Incorrectly doing overclock/overvoltage may result in damage to CPU, chipset, or memory and reduce the useful life of these components.

This page is for advanced users only and we recommend you not to alter the default settings to prevent system instability or other unexpected results.

(Inadequately altering the settings may result in system's failure to boot.

If this occurs, clear the CMOS values and reset the board to default values.) · When the System Voltage Optimized item blinks in red, it is recommended that you set the System Voltage Control item to Auto to optimize the system voltage settings. (Note) This item is present only if you install a CPU that supports this feature. - 39 BIOS Setup DRAM Configuration CMOS Setup Utility-Copyright (C) 1984-2007 Award Software DRAM Configuration x x x x x x x x x x x x x x

DDRII Timing Items CAS# latency RAS to CAS R/W Delay Row Precharge Time Minimum RAS Active Time 1T/2T Command Timing TwTr Command Delay

Trfc0 for DIMM1 Trfc2 for DIMM2 Trfc1 for DIMM3 Trfc3 for DIMM4 Write Recovery Time Precharge Time Row Cycle Time RAS to RAS Delay [Auto] Auto Auto Auto Auto Auto Auto Auto Auto Auto Auto Auto Auto Auto Auto SPD 5T 5T 5T 15T -3T 127ns ---5T 3T 21T 3T Auto 5T 5T 5T 15T -3T 127ns ---5T

3T 21T 3T Item Help Menu Level : Move Enter: Select F5: Previous Values +/-/PU/PD: Value F6: Fail-Safe Defaults F10: Save ESC: Exit F1: General Help

F7: Optimized Defaults DDRII Timing Items Manual allows all DDRII Timing items below to be configurable. Options are: Auto (default), Manual.

CAS# latency Options are: Auto (default), 3T~6T. RAS to CAS R/W Delay Options are: Auto (default), 3T~6T. Row Precharge Time Options are: Auto

(default), 3T~6T. Minimum RAS Active Time Options are: Auto (default), 5T~18T. 1T/2T Command Timing Options are: Auto (default), 1T, 2T.

TwTr Command Delay Options are: Auto (default), 1T~3T. Trfc0 for DIMM1 Options are: Auto (default), 75ns, 105ns, 127.5ns, 195ns, 327.5ns. Trfc2 for

DIMM2 Options are: Auto (default), 75ns, 105ns, 127.5ns, 195ns, 327.5ns. Trfc1 for DIMM3 Options are: Auto (default), 75ns, 105ns, 127.5ns, 195ns,

327.5ns.

Trfc3 for DIMM4 Options are: Auto (default), 75ns, 105ns, 127.5ns, 195ns, 327.5ns. Write Recovery Time Options are: Auto (default), 3T~6T. GA-MA78G-

DS3H/DS3HP Motherboard - 40 - Precharge Time Options are: Auto (default), 2T, 3T. Row Cycle Time Options are: Auto (default), 11T~26T. RAS to RAS

Delay Options are: Auto (default), 2T~5T. HT Link Frequency Allows you to manually set the frequency for the HT Link between the CPU and chipset. Auto

BIOS will automatically adjust the HT Link Frequency. (Default) 200 MHz~1.

0 GHz Sets HT Link Frequency to 200 MHz~1.0 GHz. VGA Core Clock control Enables or disables the control of VGA Core clock. VGA Core Clock (Mhz)

Allows you to manually set the VGA Core clock. The adjustable range is from 150 MHz to 1100 MHz.

This item is configurable only if the VGA Core Clock control option is enabled. (Default: 500) CPU Clock Ratio Allows you to alter the clock ratio for the

installed CPU. The adjustable range is dependent on the CPU being used. CPU NorthBridge Freq. (Note) Allows you to alter the North Bridge controller

frequency for the installed CPU.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](http://yourpdfguides.com/dref/3958579)

<http://yourpdfguides.com/dref/3958579>

The adjustable range is dependent on the CPU being used. CPU Host Clock Control Enables or disables the control of CPU host clock. Auto (default) allows BIOS to automatically adjust the CPU host frequency. Manual allows the CPU Frequency (MHz) item below to be configurable. Note: If your system fails to boot after overlocking, please wait for 20 seconds to allow for automated system reboot, or clear the CMOS values to reset the board to default values. CPU Frequency (MHz) Allows you to manually set the CPU host frequency. Important It is highly recommended that the CPU frequency be set in accordance with the CPU specifications. PCIE Clock (MHz) Allows you to manually set the PCIe clock frequency. The adjustable range is from 100 MHz to 200 MHz. Auto sets the PCIe clock frequency to standard 100 MHz.

(Default: Auto) Set Memory Clock Determines whether to manually set the memory clock. Auto lets BIOS automatically set the memory clock as required. Manual allows all voltage control items below to be configurable. (Default: Auto) Memory Clock This option is configurable only when Set Memory Clock is set to Manual. (Note) This item is present only if you install a CPU that supports this feature. - 41 BIOS Setup When you use an AM2 CPU: DDR 400 Sets Memory Clock to DDR 400. DDR 533 Sets Memory Clock to DDR 533. DDR 667 Sets Memory Clock to DDR 667. DDR 800 Sets Memory Clock to DDR 800.

When you use an AM2+ CPU: X2.

00 Sets Memory Clock to X2.00. X2.66 Sets Memory Clock to X2.66.

X3.33 Sets Memory Clock to X3.33. X4.00 Sets Memory Clock to X4.

00. X5.33 Sets Memory Clock to X5.33. DCTs Mode (Note) Allows you to set memory control mode. Ganged Sets memory control mode to single dual-channel. Unganged Sets memory control mode to two single-channel. ***** System Voltage Optimized ***** System Voltage Control Determines whether to manually set the system voltages. Auto lets BIOS automatically set the system voltages as required. Manual allows all voltage control items below to be configurable.

(Default: Auto) DDR2 Voltage Control Allows you to set memory voltage. Normal Supplies the memory voltage as required. (Default) +0.1V ~ +0.5V Increases memory voltage by 0.1V to 0.5V at 0.1V increment. NorthBridge Volt Control Allows you to set the North Bridge voltage. Normal Supplies the North Bridge voltage as required.

(Default) +0.1V ~ +0.3V Increases North Bridge voltage by 0.1V to 0.3V at 0.

IV increment. SouthBridge Volt Control Allows you to set the South Bridge voltage. Normal Supplies the South Bridge voltage as required. (Default) +0.1V ~ +0.

3V Increases South Bridge voltage by 0.1V to 0.3V at 0.1V increment. CPU NB VID Control (Note) Allows you to set the CPU Northbridge VID voltage. Normal sets the CPU Northbridge VID voltage as required. (Default: Normal) Note: Increasing CPU voltage may result in damage to your CPU or reduce the useful life of the CPU. CPU Voltage Control Allows you to set the CPU voltage. Normal sets the CPU voltage as required. The adjustable range is dependent on the CPU being installed.

(Default: Normal) Note: Increasing CPU voltage may result in damage to your CPU or reduce the useful life of the CPU. Normal CPU Vcore Displays the normal operating voltage of your CPU. (Note) This item is present only if you install a CPU that supports this feature. - 42 - GA-MA78G-DS3H/DS3HP Motherboard 2-4 Standard CMOS Features CMOS Setup Utility-Copyright (C) 1984-2008 Award Software Standard CMOS Features Date (mm:dd:yy) Time (hh:mm:ss) IDE Channel 0 Master IDE Channel 0 Slave IDE Channel 1 Master IDE Channel 1 Slave IDE Channel 2 Master IDE Channel 2 Slave IDE Channel 3 Master IDE Channel 3 Slave Drive A Floppy 3 Mode Support Halt On Base Memory Extended Memory : Move Enter: Select F5: Previous Values Mon, Sep 15 2008 18:25:04 [None] [None] [None] [None] [None] [None] [None] [None] [1.44M, 3.5"] [Disabled] [All, But Keyboard] 640K 382M +/-PU/PD: Value F6: Fail-Safe Default F10: Save ESC: Exit F1: General Help F7: Optimized Defaults Item Help Menu Level Date Sets the system date. The date format is week (read-only), month, date and year. Select the desired field and use the up arrow or down arrow key to set the date. Time Sets the system time. For example, 1 p.

m. is 13:0:0. Select the desired field and use the up arrow or down arrow key to set the time. IDE Channel 0, 1 Master/Slave IDE HDD Auto-Detection Press <Enter> to autodetect the parameters of the IDE/SATA device on this channel. IDE Channel 0, 1 Master/Slave Configure your IDE/SATA devices by using one of the three methods below: · Auto Lets BIOS automatically detect IDE/SATA devices during the POST.

(Default) · None If no IDE/SATA devices are used, set this item to None so the system will skip the detection of the device during the POST for faster system startup. · Manual Allows you to manually enter the specifications of the hard drive when the hard drive access mode is set to CHS. Access Mode Sets the hard drive access mode. Options are: Auto (default), CHS, LBA, Large. IDE Channel 2, 3 Master/Slave IDE Auto-Detection Press <Enter> to autodetect the parameters of the IDE/SATA device on this channel.

Extended IDE Drive Configure your IDE/SATA devices by using one of the two methods below: · Auto Lets BIOS automatically detect IDE/SATA devices during the POST. (Default) · None If no IDE/SATA devices are used, set this item to None so the system will skip the detection of the device during the POST for faster system startup. - 43 - BIOS Setup Access Mode Sets the hard drive access mode. Options are: Auto (default), Large. The following fields display your hard drive specifications. If you wish to enter the parameters manually, refer to the information on the hard drive. Capacity Approximate capacity of the currently installed hard drive. Cylinder Number of cylinders. Head Number of heads. Precomp Write precompensation cylinder.

Landing Zone Landing zone. Sector Number of sectors. Drive A Allows you to select the type of floppy disk drive installed in your system. If you do not install a floppy disk drive, set this item to None. Options are: None, 360K/5.25", 1.2M/5.25", 720K/3.5", 1.44M/3.

5", 2.88M/3.5". Floppy 3 Mode Support Allows you to specify whether the installed floppy disk drive is 3-mode floppy disk drive, a Japanese standard floppy disk drive. Options are: Disabled (default), Drive A.

Halt On Allows you to determine whether the system will stop for an error during the POST. No Errors The system boot will not stop for any error. All Errors Whenever the BIOS detects a non-fatal error the system boot will stop. All, But Keyboard The system boot will not stop for a keyboard error but stop for all other errors. (Default) All, But Diskette The system boot will not stop for a floppy disk drive error but stop for all other errors.

All, But Disk/Key The system boot will not stop for a keyboard or a floppy disk drive error but it will stop for all other errors.



[You're reading an excerpt. Click here to read official GIGABYTE GA-MA78G-DS3H user guide](#)

<http://yourpdfguides.com/dref/3958579>

