



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER AFD631CX. You'll find the answers to all your questions on the HAIER AFD631CX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER AFD631CX
User guide HAIER AFD631CX
Operating instructions HAIER AFD631CX
Instructions for use HAIER AFD631CX
Instruction manual HAIER AFD631CX

Haier

Household Refrigerator/Freezer
Operation Manual

AFD631CX
AFD631CB
AFD631CS
AFL631CB
AFL631CS
AFD630IX
AFT630IX
CFL633CB
CFL633CS
CFE633CW

0060506447



[You're reading an excerpt. Click here to read official HAIER AFD631CX user guide](http://yourpdfguides.com/dref/3203286)
<http://yourpdfguides.com/dref/3203286>

Manual abstract:

@@@You can freezer is too high. silence the alarm manually. The refrigerator is not Adjust the feet to level the refrigerator. located on a level place. Remove objects around it. The refrigerator touches some object around it. Normal. @@@@If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge. Please read this Operation Manual carefully before using the appliance.

Keep this Manual for future reference. See the physical object for the appearance, color and the door pattern. 25 Troubleshooting Problems Too high temperature The temperature in the fridge storage compartment is too high while the temperature in the freezer is OK Causes Solutions Key Features ô ô Removable automatic icemaker (only on some models). The freezer door is replaced by two drawers. This can better facilitate food access, featuring both energy saving and convenience (only on some models).

Accumulation of frost and moisture accelerate in such climate. See "Door/drawer opening/closing" in section "Problem". Do not open the door so frequently. The fridge temperature is set too high. Set the fridge temperature lower.

It takes 24 hours for the temperature of the refrigerator to become stable. Water/moisture/frost in the refrigerator Hot and moist climate. Moisture The door is not closed accumulates on the tightly. refrigerator inner The door is opened too walls frequently or for too long each time. ô ô ô Half-shelf structure. Innovative long-efficiency lighting system. Foldaway wine holder. ô ô ô Large crisper with humidity adjustment. Holiday function. Power ON/OFF function is set on the display panel (only on some models).

ô ô Fridge storage compartment can be set on/off separately. Intelligent alarm function: automatic alarm at over temperature, malfunction, door open. ô ô ô Touch keys (only on some models). Deodorizer (only on some models). Zero degree fresh keeping. Water/moisture/frost on outside surface of the refrigerator Moisture accumulates on the refrigerator's outside surface or between two doors Automatic icemaker The icemaker is not turned on The water supply valve is not turned on The temperature in the freezer is not low enough The icemaker is not installed in place. The ice-making capacity Ice-making is less than expected capacity is The temperature in the insufficient freezer is not low enough Its ice detection bar is The icemaker pushed to a lower position cannot stop making by some object in the ice freezer storage compartment. The icemaker does not make ice Tainted by odors in the The cubed ice taste fridge or freezer storage bad compartment. The water supplied to the icemaker is not fresh. The cubed ices have been stored for an extended period.

Bad odors in the refrigerator The inside of the refrigerator is dirty The inside of the refrigerator needs cleaning Food of strong odor is stored in the refrigerator Clean the internal of the refrigerator. Wrap the food tightly. Turn on the icemaker on the display panel. Turn on the water supply valve. See "Too high temperature" in section "Problem".

Push the icemaker to its proper place. The icemaker can make approximately 1kg of cubed ices in 24 hours. Set the freezer temperature lower. Damp climate. The refrigerator door is not closed tightly.

This causes condensation of the cold air in the refrigerator and the warm air outside it. This is normal in damp climate. The moisture will decrease when the humidity drops. See "Door/drawer opening/closing" in section "Problem". Cover all the food closely. Discard the ices stored for long period or made in the first loads. Add a filter on the water supply pipe. Please consult a water purification company. Discard the cubed ices stored too long. 24 Description of various components Models: AFD631CX/AFD 631CB/AFD 631CS/AFL631CB/AFL631CS / AFD630IX/AFT630IX Display panel Turnover box (including egg box) Turnover box rack Shelf Wire wine holder Middle bottle rack Fresh keeping box cover Fresh keeping box Crisper cover Crisper Small bottle rack Large bottle rack Butter box Fridge storage compartment Troubleshooting Before calling for service, please read the following troubleshooting table first.

This can save both your time and money. The table contains common problems except those caused by defects in workmanship or material of the refrigerator. Problems Refrigerator operation The compressor does not work The refrigerator is in the defrosting cycle. The refrigerator is not plugged into a power outlet. The refrigerator is turned OFF. The indoor or outdoor temperature is high. The refrigerator has been powered off for a period of time. The automatic icemaker is operating. The door is opened too frequently or for long period. The door of the fridge / freezer storage compartment is not tightly closed. The temperature setting for the freezer storage compartment is too low. The door gasket of the fridge/freezer storage compartment is dirty, worn, cracked or mismatched. The condenser is dirty. Too high temperature This is normal for an automatic defrosting refrigerator. Verify the plug is plugged in the socket firmly.

Press the "Power" button for 3 seconds or more to restart the refrigerator or turn the knob from OFF to temperature selection position. In this case, it is normal for the refrigerator to run longer. Normally, it takes 8 to 12 hours for the refrigerator to totally cool down. Ice-making process makes the refrigerator to run longer. Warm air enters the refrigerator and causes it to start frequently.

Please do not open the door too frequently. Ensure the refrigerator is located on a level ground and there is no food or container j a r r i n g t h e d o o r. S e e " d o o r / d r a w e r opening/closing" in section "Problem" Set the temperature higher until a satisfactory refrigerator temperature is obtained. It takes 24 hours for the refrigerator temperature to become stable. Clean or replace the door gasket. A leakage gap of door gasket can cause a longer running time of the refrigerator in order to maintain desired temperature. Clean the condenser. Causes Solutions Middle door drawer The refrigerator runs frequently or runs for too long period Bottom door drawer Freezer storage compartment Middle door drawer Transparent tray Bottom door drawer Too high temperature in the fridge/freezer storage compartment The temperature in the freezer is too high while the temperature in the fridge storage compartment is OK Warm air will enter the refrigerator The door is opened too frequently or for too long whenever the door is opened. Try to open the each time. door as less frequently as possible.



[You're reading an excerpt. Click here to read official HAIER](#)

[AFD631CX user guide](#)

<http://yourpdfguides.com/dref/3203286>

Temperature is set too high. See "Door/drawer opening/closing in The door is not closed section "Problem". tightly. Clean the condenser. The condenser is dirty. The freezer temperature is set too high. Set the freezer temperature lower. It takes 24 hours for the temperature of the refrigerator to become stable. The accessories shown are for several models.

There may be slight Note differences between them and the ones on your refrigerator. 23 Stopping use Measures on power interruption Even in summer, food may be stored in the refrigerator for a few hours after a power interruption. If a power interruption occurs, please call the power company to ask about the interruption duration. Do not put additional food into the refrigerator during a power interruption and try to open the door as few times as possible. If prior notice of a power interruption is given and the interruption duration is over 24hrs, make some ice and put it in a container in the top of the fridge storage compartment.

Descriptions of various components Models: CFL 633CB/CFL 633CS/CFE 633 CW Display panel Shelf Turnover box (including egg box) Turnover box rack Butter box Wire wine holder Middle bottle rack As temperature in the refrigerator will rise during a power interruption or other failures, the storage period and edible quality of food will be reduced. Note Stopping use If the refrigerator will not be used for an extended period, please unplug the power cord, disconnect the water source, and clean it with the method described above. Keep the refrigerator door open to prevent any food remaining in the compartment from producing bad odors. Fresh keeping box cover Fresh keeping box Crisper cover Crisper Small bottle rack Large bottle rack Note To ensure the service life of the refrigerator, it is recommended that the refrigerator not be turned off unless it is necessary. Freezer storage compartment drawer Before leaving for a vacation If leaving on an extended vacation, please disconnect the power and water source.

remove any food, wait for the frost to melt. Afterwards, clean and dry the interior, and keep the door open to prevent any food remaining in the compartment from producing bad odors. If the room temperature is expected drop below 0 , please ask a qualified service person to drain the water in the water supply system. Otherwise serious property loss may be caused due to overflow of water if the water pipe or joint breaks. Moving the refrigerator Unplug the refrigerator. Remove all food. Secure the shelves and crisper in the fridge storage compartment as well as the shelves and other movable parts in the freezer with adhesive tape. Close the door and secure with adhesive tape. Do not tilt the refrigerator more than 45 degrees (angle to vertical) to avoid damaging the refrigerating system. Do not move the refrigerator by its handle to avoid property damage or personal injury.

The accessories shown are for several models. There may be slight Note differences between them and the ones on your refrigerator. Never place the refrigerating horizontally down. Warning 22 Safety precautions The refrigerator is operated through a 220240VAC/50Hz power supply. Abnormal voltage fluctuation may cause the refrigerator to fail to start, or damage to the temperature control or compressor, or there may be an abnormal noise when the compressor is operating. In such a case, an automatic regulator shall be mounted. A dedicated socket with reliable grounding must be provided for the refrigerator. The refrigerator's power cable is fitted with 3-cord (grounding) plug that fits a standard 3-cord (grounding) socket. Never cut off or dismount the third pin (grounding). After the refrigerator is installed, the plug should be accessible.

Defrosting -Cleaning Defrosting the freezer The freezer defrosts automatically. No manual operation is needed. Cleaning The refrigerator should be cleaned regularly to prevent bad stored food odors. For safety, unplug the powure, door-opening frequency, water pressure, freezer temperature and other conditions.

To ensure that the storage box is fully filled with cubed ices, arrange the cubed ices in the drawer frequently.

As the icemaker makes 8 cubed ices in one cycle, it is normal that some of them stick to each other (This can be improved by decreasing water supply duration). For a newly installed refrigerator, please let the appliance operate for 24 hours before making ice. Note If this is your first icemaker Some "crack" sound may be heard in the process of ice making. Don't worry, it's normal. If you do not use cubed ices frequently Cubed ices stored for an extended period may become opaque or emit a strange odor.

Please empty the cubed ice storage box regularly and clean it with warm water. Before putting the box back, make sure to cool it down and to dry it under soft sunshine. Otherwise cubed ices may stick on the box. If you do not want to use the cubed ice storage box for an extended period Please take out all the cubed ices from the storage box and wash the box with warm water. Wipe the box with a dry towel before replacing it to the appliance. After that, turn off the valve between the water source and the appliance. Safety precautions Never store inflammables, explosives or Do not store medicines, bacteria or chemical agents in the refrigerator. This refrigerator is a corrosive materials in the refrigerator. household appliance. It is not recommended to place materials that require strict temperatures.

Do not store or use gasoline or other Do not place unstable articles (heavy objects, inflammable materials in the vicinity of the containers filled with water) on the top of the refrigerator to avoid a fire. refrigerator, to avoid personal injury caused by falling or electric shock caused by contact with water Do not swing from the bottle racks on the door. The door may be pulled slant, the bottle rack may be pulled away, or the refrigerator may topple. Do not step on the freezer storage compartment door or cabinet when putting in or taking out food. Do not touch the inside surface of the freezer storage compartment when in operation, especially with wet hands, as your hands may freeze onto the surface. 20 Safety precautions Open/close the doors only with the handles. The gap between the two doors and between the doors and the cabinets is very narrow. Do not extend your hands in these areas to avoid pinching your fingers. Open or close the refrigerator doors only when there are no children standing within range of door movement. To ensure the refrigerator's electrical insulation, do not spray or flush the refrigerator when cleaning, nor place the refrigerator in a damp area or a location where it may be splashed with water.

Freezer storage precautions Hot food should not be stored in the refrigerator until it has cooled down to room temperature Food cut into small portions will freeze faster and be easier to defrost and cook.



[You're reading an excerpt. Click here to read official HAIER](#)

[AFD631CX user guide](#)

<http://yourpdfguides.com/dref/3203286>

The recommended weight for each portion is less than 2.5kg. Disassembly and alteration of the refrigerator Never store bottled beer or beverages in the must be authorized. Any agitated movement of freezer, as these will burst during freezing.

the refrigerator may damage the cooling pipes. Property loss or personal injury may result. Repair of the refrigerator must be performed by professional personnel. It's better to pack food before putting it in the freezer. The outside of the packing must be dry to avoid bags sticking together.

Packing materials should be odor-free, airtight, non-poisonous and nontoxic. In order to avoid expiration of storage period, please note the freezing date, time limit and name of the food on the packing according to the storage periods of different foods. DMY DM Y Unplug the refrigerator in the event of a power interruption or before cleaning. Allow at least 5 minutes before restarting the refrigerator, as frequent starting be damage the compressor. When discarding the refrigerator, to avoid the accidental entrapment of children, please remove the refrigerator doors, door gaskets and shelves and put them in an appropriate place. Only take the required amount of food from the freezer. Defrosted food cannot be re-frozen unless it is first cooked, otherwise it may be less edible. Do not load excessive quantities of fresh food in the freezer. It is better to refer to the cooling capacity of the refrigerator. (See "Technical data".

) 19 Tips on food storage in the fridge storage compartment For turnip radish and other similar vegetables, please cut off their leaves before storage so as to prevent the nutrition from being absorbed by the leaves. Defreeze frozen food in the fridge storage compartment. In this way you can use the frozen food to decrease the temperature in the compartment and save energy. Placing environment Leveling of the cabinet The refrigerator should be placed on a flat and solid surface. If the refrigerator is placed on a pedestal, flat, strong and fire-resistant materials must be used. Never use the foam packing material for a pedestal. If the refrigerator is slightly unstable, you can prolong or shorten the adjustable feet of the refrigerator by turning them clockwise or counterclockwise. @@@@It is recommended not to exceed the load line of the drawers. The total weight of the food should not exceed 30kg.

@@The appliance must be positioned so that the plug is accessible.

@@@@Warning:Do not damage the refrigerant circuit. @@@@Please inquire with the purchase shop if there is any discrepancy. Sorted storage of food. Food to be stored should be properly sealed. @@@@be placed on the front part of the shelves.

@@@Food should be stored with spaces in between them. @@@@Otherwise they may freeze to the walls. @@@@So it's better to clean the oily dirt whenever it is found. @@ shows the extended state of the foldaway shelf in which you can put lower food containers. Fig.

shows the folded state of the foldaway shelf in which you can put higher food containers. To fold the shelf from state to state , simply push structure A upwards, and push structure B inward in the direction of the arrow shown in the figure. To extend the shelf from state to state , push structure A upwards, and pull structure B in the direction of the arrow shown in the figure. Preparation prior to use Connection to power supply When the refrigerator is connected to power supply, the fridge temperature and freezer temperature are automatically set to 5 and -18 respectively. Operation modes of the refrigerator Manual adjustment mode: can set temperature by pressing the temperature setup key (see "Function description" hereafter). Use of the wire wine holder Fig. shows the folded state of the wire wine holder. In this state large space can be spared. Fig. shows the extended state of the wire wine holder.

In this state it can hold various wines. To extend it from state to state , simply pull the wire down. To fold it from state to state , simply push the wire up. Loading the refrigerator with food Load the refrigerator with food after it has been operates for a period and the inside is cool enough. make sure to keep the two ends of a shelf on the same level. Otherwise it may fall or the food on it may dump. Note Note Some time will be required for the refrigerator to reach the set temperature when the setting is changed. The length of this period depends on the difference between the existing and set temperatures, ambient temperature, door opening frequency and the amount of food in storage. Recommended storage areas for various foods As cold air circulates inside the refrigerator, there is temperature difference inside the fridge storage compartment. Different foods should be placed in different areas according to their properties.

Eggs, butter, cheese and etc. Drinks, canned food and etc. Seasonings and pickled food Beverages, canned food, cake, etc. Wine, champagne, etc. Milk, cheese, etc Cooked meat, fresh fish and meat, etc.

Fruit, vegetables, salad, etc. Lamp in the fridge storage compartment and its replacement Parameters of the lamp: 12V, max 5W(the power depends on the model). The lamp adopts LED as its light source, featuring low energy consumption and long service life. If there is any abnormality, please contact the after-sales service personnel. 16 9 Function introduction (1) Models: CFE633CW Control panel Super cooling button Fridge storage temperature setup knob Power Indicator Freezer storage Super freezing temperature button setup knob About the fridge storage compartment Please put the food to be stored for short period or for daily consumption in the fridge storage compartment: Although the average temperature in most areas in the fridge storage compartment can be regulated between 0 and 10 , extended period of food storage is not recommended.

The fridge storage compartment should only be used for short-term storage. Adjusting shelf height The shelf can be relocated to accommodate food size or height. To adjust the height of a shelf, remove it first in this way: uplift its front edge and then pull it out. To install the shelf, put the dogs on both sides of the shelf on the supporting ribs and push it to the most inward end. Initial powering on Upon initial powering on, the power indicator will illuminate. There will be alarm due to high temperature in the freezer storage compartment. You can cancel the alarm by pressing any key. Fridge storage temperature setup The temperature in the fridge storage compartment can be set by turning the fridge storage temperature setup knob. There are three temperature positions for refrigerating: Holiday, Moderate and Super Cool. Freezer storage temperature setup The temperature in the freezer storage compartment can be set by turning the freezer storage temperature setup knob.

There are three temperature positions for freezing: Weak, Moderate and Super Freeze. Super cooling Select this function after you have put fresh food in the fridger storage compartment.



[You're reading an excerpt. Click here to read official HAIER](#)

[AFD631CX user guide](#)

<http://yourpdfguides.com/dref/3203286>

Press the super cooling button, the refrigerator activates this function and corresponding indicator illuminates. This function will automatically deactivate when the temperature decreases to the required level. You can also deactivate it by pressing the super cooling button again. Super freezing Select this function after you have put large amount of food in the freezer storage compartment. Press the super freezing button, the refrigerator activates this function and corresponding indicator illuminates. This function will become automatically deactivate after 24 hours. You can also deactivate it by pressing the super freezing button again. Holiday function Turning the fridge storage temperature setup knob to "Holiday" will activate the holiday function of the fridge storage compartment.

It will operate at a relatively high temperature. (Please remove any fresh food from the fridge storage compartment and close the door before activating this function) Display control The display screen will turn off automatically 1 minute after an operation is finished. It will be lit up by opening the door or pressing any key. (Alarm does not light up the display screen) Door open alarming When the refrigerator door is open for more than 3 minutes, the super cooling indicator will flash and the buzzer will sound 3 beeps every 30 seconds. The buzzer can be silenced by closing the door or pressing any key.

Fruit & Vegetable box The refrigerator has a crisper. You can adjust the humidity inside it according to the properties of the foods. Turning the humidity control button rightward enables the crisper to keep in a higher humidity suitable for cucumbers, grapes, Chinese gooseberries, persimmons, etc. Turning the humidity control button leftward enables the crisper to keep in a lower humidity suitable for strawberries, oranges, beans, garlic, watermelon, plums, tomatoes, etc. Fresh control box The temperature in this box is kept at approx 0 , it may be slightly changed due to the different ambient temperature or refrigerator working style.

It is suitable to store fresh fish, meat and cooked food in 1~2 days. Disassemble of Clean the bottle To take out a bottle guard, uplift the bottle guards in direction and grip both sides and pull it out in direction. After cleaning, install it with the operation in the reversed direction. 10 15 Function introduction Super cooling Press key A2 until icon B flashes. Then, press key A5 to confirm the super cooling function. Icon B will illuminate solid. You can deactivate the super cooling function with the same operation. Function introduction Over temperature alarm When the temperature in the freezer storage compartment rises to a certain value, the Super Freeze indicator will flash and the buzzer will sound 1 beep every second. The buzzer may be silenced when the temperature in the freezer storage compartment drops to a specified level or by pressing any key. Holiday function Press key A2 until icon C flashes.

Then, press key A5 to confirm the holiday function. Icon C will illuminate solid. You can deactivate the holiday function with the same operation. Super freezing Press key A2 until icon I flashes. Then, press key A5 to confirm the super freezing function. Icon I will illuminate solid. You can deactivate the super freezing function with the same operation. Turning off the fridge storage compartment Set the fridge storage temperature to OFF. The fridge storage compartment will be turned off while the freezer storage compartment operates normally. Ice making function (only on models with an icemaker) Press key A2 until icon J flashes.

Then, press key A5 to confirm the ice making function. Icon J will illuminate solid. You can deactivate the ice making function with the same operation.

Turning off the refrigerator Set the freezer storage temperature to OFF. The refrigerator will stop operating.

This function is not equivalent to turning off the power. Icemaker's water injection time adjustment (only on models with an icemaker) Press key A2 until icon K flashes. Then, press key A5 to confirm the icemaker's water injection time adjustment. Icon K will illuminate solid. The water injection time will be indicated with icon H and icon D.

For example, if the time is 4.0s, icon H will be 4 and D will be 0. Press key A3 or A4 to set the time in an increment of 0.5s. It cycles from 2s to 7s. After you have set it to the desired value, press key A5 to confirm. Icon K will go off. You can exit the icemaker's water injection time adjustment with the same operation. Note: this operation can be performed only when the ice making function is selected. (2) Models: CFL633*/AFL631* Control panel Fridge storage Freezer storage compartment compartment temperature temperature Display control The display screen will dim 1 minute after an operation is finished.

It will recover to normal brightness when you open the door or press any key. (Alarm does not light up the display screen) Door open alarming When the fridge storage compartment door is open for more than 3 minutes, icon G will flash and the buzzer will give out 3 beeps every 30 seconds. If you close the door, the alarm will be silenced and icon G will go off. You can also silence the buzzer by pressing key A5. Over temperature alarming When the temperature in the freezer storage compartment rises to a certain value, icon G will illuminate solid and the buzzer will sound 1 beep every second. When the temperature in the freezer storage compartment drops to a specified level, the alarm will silence and icon G will go off. You can also silence the buzzer by pressing key A5.

A1 A3 A5 A7 A9 Switch on/off the fridge storage compartment Super cool Fridge temperature down Freezer temperature down Over-temperature/door open alarm A2 A4 A6 A8 A10 Holiday function Fridge temperature up Freezer temperature up Super freeze Power ON/OFF Switching off the fridge storage compartment Press and hold key A1 for 3 seconds, the fridge storage compartment will be turned off while the freezer storage compartment is operating normally. At this time, icon D will go off and icon E will become dim. Press and hold key A1 for 3 seconds again, the fridge storage compartment will be turned on, icon D will recover, and icon E will recover its normal brightness.

Note: if super cooling or holiday function is selected previously, the function will be deactivated and corresponding icon will turn off when the fridge storage compartment is turned off Initial powering on When the refrigerator is powered on for the first time, the power indicator and the fridge storage compartment indicator will light. The fridge storage temperature will be displayed as "-" due to the high temperature inside. The freezer storage temperature will be displayed as "-" due to high temperature inside. The buzzer will beep. Press key A9, and the buzzer will be silenced.

After the temperature decreases to certain level, the displayed temperatures of the fridge storage compartment and the freezer storage compartment will become the ex-factory settings "5" and "-18" respectively.



[You're reading an excerpt. Click here to read official HAIER](#)

[AFD631CX user guide](#)

<http://yourpdfguides.com/dref/3203286>

Switching off the refrigerator Press and hold key A6 for 3 seconds, the display panel will go off and the refrigerator will stop operating. Press and hold key A6 for 3 seconds again, the display panel will light up and the refrigerator will start operating normally. @@The fridge storage temperature cycles from 1 to 8. @@@@The freezer storage temperature cycles from -14 to -26 .

@@Press key A3, and this function is activated and the corresponding indicator illuminates. This function will automatically deactivate when the temperature decreases to the required level. You can also deactivate it by pressing key A3 again. Super freezing Select this function after you have put large amount of food in the freezer storage compartment. Press key A8, this function is activated and the corresponding indicator illuminates. This function will become inactive automatically after 24 hours. You can also deactivate it by pressing key A8 again. Holiday function Press key A2, corresponding indicator illuminates and the holiday function of the fridge storage compartment is activated. It will operate at a relatively high temperature in Holiday mode. The fridge storage temperature will be indicated as "-" (Please take out the fresh food in the refrigerator and close the door before activating this function).

Press key A2 again, and the corresponding indicator goes off and the refrigerator comes into normal control. Display control The display screen will turn off automatically 1 minute after an operation is finished. It can be lit up by opening the door or pressing any key. (Alarm does not light up the display screen)

Door open alarming When the refrigerator door is open for more than 3 minutes, the alarm indicator will flash and the buzzer will sound 3 beeps every 30 seconds. The buzzer can be silenced by closing the door or pressing key A9. A1 Switch on/off the fridge storage compartment A2 Menu key A3 Temperature up A4 Temperature down A5 Confirmation key A6 Power ON/OFF B Super cooling icon C Holiday function icon D Fridge storage temperature display E F G H I J K Fridge compartment indicating icon Freezer compartment indicating icon Alarm icon Freezer storage temperature display Super freezing icon Icemaker icon (only on models with an icemaker) Water input time adjustment icon (only on models with an icemaker) Over temperature alarm When the temperature in the freezer storage compartment rises to a certain value, the alarm indicator will illuminate solid and the buzzer will sound 1 beep every second. The buzzer can be silenced when the temperature in the freezer storage compartment drops to a specified level or key A9 is pressed. Initial powering on When the refrigerator is powered on for the first time, icon G will light. The fridge storage temperature will be displayed as "-" due to high temperature. The freezer storage temperature will be displayed as "-" due to high temperature.

The buzzer will beep. Press key A5, the buzzer will be silenced and icon G will remain lit. After the temperature decreases to certain level, icon G will turn off and the displayed temperatures of the fridge storage compartment and the freezer storage compartment will become the ex-factory settings "5" and "-18" respectively. The brightness of D, E, H icon will decrease to half automatically when the refrigerator is not being operated. Fridge storage temperature setup Press key A2 until icon D flashes.

Then, press key A3 or A4 to set the temperature. The refrigerating storage temperature cycles from 1 to 8. After you have set it to the desired value, press key A5 to confirm. Note: Flashing of icon D is accompanied by flashing of icon E Turning off the fridge storage compartment Press and hold key A1 for 3 seconds, and the corresponding indicator will turn off and the fridge storage compartment will be turned off while the freezer storage compartment operates normally. The fridge storage temperature indication icon will also go off.

Press and hold key A1 for 3 seconds again, the corresponding indicator will illuminate, the fridge storage compartment will be turned on, and the fridge storage temperature indication icon will recover. Turning off the refrigerator Press and hold key A10 for 3 seconds, corresponding indicator will go off, the display panel will go off and the refrigerator will stop operating. Press and hold key A10 for 3 seconds again, corresponding indicator will light up, the display panel will light up, and the refrigerator will start operating normally. This function is not equivalent to turning off the power. Freezer storage temperature setup Press key A2 until icon H flashes. Then, press key A3 or A4 to set the temperature. The freezing storage temperature cycles from -14 to -26. After you've set it to the desired value, press key A5 to confirm. Note: Flashing of icon H is accompanied by flashing of icon F Fault indication When E or F is displayed due to fault, the refrigerator can still refrigerate. Please contact professional after-sales service personnel as soon as possible.



[You're reading an excerpt. Click here to read official HAIER AFD631CX user guide](http://yourpdfguides.com/dref/3203286)
<http://yourpdfguides.com/dref/3203286>