



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER AFL631CS. You'll find the answers to all your questions on the HAIER AFL631CS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER AFL631CS
User guide HAIER AFL631CS
Operating instructions HAIER AFL631CS
Instructions for use HAIER AFL631CS
Instruction manual HAIER AFL631CS

Haier

Combined fridge - freezer - Instruction for use

CFE633CW/U
CFE633CS/U
CFE633CB/U
AFL631CW/U
AFL631CS/U
AFL631CB/U
AFL631CW



[You're reading an excerpt. Click here to read official HAIER AFL631CS user guide](http://yourpdfguides.com/dref/2700956)
<http://yourpdfguides.com/dref/2700956>

Manual abstract:

@@@ Innovative long-efficiency lighting system. Foldaway wine holder. Large crisper with humidity adjustment. Holiday function. Power ON/OFF function is set on the display panel (only on some models). Fridge storage compartment can be set on/off separately. Intelligent alarm function: automatic alarm at over temperature, malfunction, door open. 6 Touch keys (only on some models). Zero degree fresh keeping. Description of various components Models: AFL631CW/U AFL631CS/U AFL631CB/U Fridge storage compartment Display panel Turnover box (including egg box) Turnover box rack Shelf Fresh control box cover Fresh control box Friut & vegetable box cover Friut & vegetable box Middle bottle rack Large bottle rack Small bottle rack Middle door drawer Bottom door drawer Freezer storage compartment Middle door drawer Transparent tray Bottom door drawer The accessories shown are for several models.

There may be slight Note differences between them and the ones on your refrigerator. Descriptions of various components Models: CFE633CW/U CFE633CS/U CFE633CB/U Display panel Turnover box (including egg box) Turnover box rack Shelf Middle bottle rack Fresh control box cover Fresh control box Friut & vegetable box Large bottle rack Small bottle rack Freezer storage compartment drawer The accessories shown are for several models. There may be slight Note differences between them and the ones on your refrigerator. Safety precautions The refrigerator is operated through a 220240VAC/50Hz power supply. Abnormal voltage fluctuation may cause the refrigerator to fail to start, or damage to the temperature control or compressor, or there may be an abnormal noise when the compressor is operating.

In such a case, an automatic regulator shall be mounted. A dedicated socket with reliable grounding must be provided for the refrigerator. The refrigerator's power cable is fitted with 3-cord (grounding) plug that fits a standard 3-cord (grounding) socket. Never cut off or dismount the third pin (grounding). After the refrigerator is installed, the plug should be accessible.

Care for the power cord Hold the plug, not the cord, when unplugging the refrigerator. Ensure that the power cord is not trapped by the refrigerator. Do not step on the power cord. Take care not to roll over the power cord or damage it when moving the refrigerator away from the wall. If the mains cord becomes damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person with a specially prepared cord of the same type and rating. If coal gas or other inflammable gas is Unplug the refrigerator for the following leaking in the vicinity of the refrigerator reasons: Turn off the valve of the leaking gas; Open the doors and windows; Do not unplug or plug the power cords of the refrigerator or any other appliance. Cleaning or maintenance; Lamp replacement Safety precautions Never store inflammables, explosives or Do not store medicines, bacteria or chemical agents in the refrigerator. This refrigerator is a corrosive materials in the refrigerator. household appliance. It is not recommended to place materials that require strict temperatures.

Do not store or use gasoline or other Do not place unstable articles (heavy objects, inflammable materials in the vicinity of the containers filled with water) on the top of the refrigerator to avoid a fire. refrigerator, to avoid personal injury caused by falling or electric shock caused by contact with water Do not swing from the bottle racks on the door. The door may be pulled slant, the bottle rack may be pulled away, or the refrigerator may topple. Do not step on the freezer storage compartment door or cabinet when putting in or taking out food. Do not touch the inside surface of the freezer storage compartment when in operation, especially with wet hands, as your hands may freeze onto the surface. Safety precautions Open/close the doors only with the handles. The gap between the two doors and between the doors and the cabinets is very narrow. Do not extend your hands in these areas to avoid pinching your fingers. Open or close the refrigerator doors only when there are no children standing within range of door movement. To ensure the refrigerator's electrical insulation, do not spray or flush the refrigerator when cleaning, nor place the refrigerator in a damp area or a location where it may be splashed with water.

Disassembly and alteration of the refrigerator Never store bottled beer or beverages in the must be authorized. Any agitated movement of freezer, as these will burst during freezing, the refrigerator may damage the cooling pipes. Property loss or personal injury may result. Repair of the refrigerator must be performed by professional personnel.

Unplug the refrigerator in the event of a power interruption or before cleaning. Allow at least 5 minutes before restarting the refrigerator, as frequent starting be damage the compressor. When discarding the refrigerator, to avoid the accidental entrapment of children, please remove the refrigerator doors, door gaskets and shelves and put them in an appropriate place. Placing environment Leveling of the cabinet The refrigerator should be placed on a flat and solid surface. If the refrigerator is placed on a pedestal, flat, strong and fire-resistant materials must be used.

Never use the foam packing material for a pedestal. If the refrigerator is slightly unstable, you can prolong or shorten the adjustable feet of the refrigerator by turning them clockwise or counterclockwise. Never place the refrigerator in a damp area or a location where it may be splashed with water. Clean and dry any water splashes and stains with soft cloth. The direction shown is clockwise The refrigerator should be placed in a wellventilated place not far from a drink water source. A space of at least 20cm above and 10cm around the refrigerator must be kept. Distance To the backside To right or left To the upper Do not store too much food in the freezer storage compartment to avoid long operation time of the compressor or falling food. It is recommended not to exceed the load line of the drawers. The total weight of the food should not exceed 30kg. To prevent the food from falling on the ground, do not pull open the freezer drawer too strong or slanted.

Do not use the appliance if the mains cable is damaged or if the product does not work as expected or if it is damaged in any way. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Warning: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



[You're reading an excerpt. Click here to read official HAIER](#)

[AFL631CS user guide](#)

<http://yourpdfguides.com/dref/2700956>

Warning: Children should be supervised to ensure that they do not play with the appliance. This appliance is intended for domestic use only, commercial or any other use may invalidate the warranty and might be dangerous. Preparation prior to use Remove all package parts Please also remove the foam base and the adhesive tape fixing accessories. Check accompanying accessories and documents Check the items inside the package box against the Packing List. Please inquire with the purchase shop if there is any discrepancy. Install the handles (AFL631CW/U/AFL631CS/U/AFL631CB/U) Take out the two handles from the accessory box and insert them in the handle seats respectively as shown in the figure. Secure the handles on the doors with the supplied (4) screws from bottom to upper direction.

Move the refrigerator into a proper location (See section "Placing environment") It is advisable to clean the cabinet before use Please clean the inside and outside of the refrigerator with water before putting into any food in it. Idle standing After the appliance has been leveled and cleaned, let it remain idle for at least 6 hours before switching it on so as to ensure its normal running. 8 Preparation prior to use Connection to power supply When the refrigerator is connected to power supply, the fridge temperature and freezer temperature are automatically set to 5 and -18 respectively. Operation modes of the refrigerator Manual adjustment mode: can set temperature by pressing the temperature setup key (see "Function description" hereafter). Loading the refrigerator with food Load the refrigerator with food after it has been operates for a period and the inside is cool enough.

Note Some time will be required for the refrigerator to reach the set temperature when the setting is changed. The length of this period depends on the difference between the existing and set temperatures, ambient temperature, door opening frequency and the amount of food in storage. 9 Function introduction 1 Models: CFE633CW/U/CFE633CS/U/CFE633CB/U Control panel Super cooling button Fridge storage temperature setup knob Power Indicator Freezer storage temperature setup knob Super freezing button Initial powering on Upon initial powering on, the power indicator will illuminate. There will be alarm due to high temperature in the freezer storage compartment. You can cancel the alarm by pressing any key.

Fridge storage temperature setup The temperature in the fridge storage compartment can be set by turning the fridge storage temperature setup knob. There are three temperature positions for refrigerating: Holiday, ECO. and max. Freezer storage temperature setup The temperature in the freezer storage compartment can be set by turning the freezer storage temperature setup knob. There are three temperature positions for freezing: Min, ECO. and max. Super cooling Select this function after you have put fresh food in the fridger storage compartment. Press the super cooling button, the refrigerator activates this function and corresponding indicator illuminates. This function will automatically deactivate when the temperature decreases to the required level. You can also deactivate it by pressing the super cooling button again.

When the temperature in the refrigerator storage compartment is too low, the super-cooling function may not work. That is, when you press the "super-cooling" button once, the buzzer will beep once and the indicator will not blink, meaning the temperature in the refrigerator storage compartment is too low and the super-cooling function doesn't need to be activated. Super freezing Select this function after you have put large amount of food in the freezer storage compartment. Press the super freezing button, the refrigerator activates this function and corresponding indicator illuminates. This function will become automatically deactivate after 24 hours. You can also deactivate it by pressing the super freezing button again. Holiday function Turning the fridge storage temperature setup knob to "Holiday" will activate the holiday function of the fridge storage compartment. It will operate at a relatively high temperature. (Please remove any fresh food from the fridge storage compartment and close the door before activating this function) Display control The display screen will turn off the fridge storage temperature will be indicated as "-" (Please take out the fresh food in the refrigerator and close the door before activating this function). Press key A2 again, and the corresponding indicator goes off and the refrigerator comes into normal control.

Display control The display screen will turn off automatically 1 minute after an operation is finished. It can be lit up by opening the door or pressing any key. (Alarm does not light up the display screen) Door open alarming When the refrigerator door is open for more than 3 minutes, the alarm indicator will flash and the buzzer will sound 3 beeps every 30 seconds. The buzzer can be silenced by closing the door or pressing key A9. Over temperature alarm When the temperature in the freezer storage compartment rises to a certain value, the alarm indicator will illuminate solid and the buzzer will sound 1 beep every second.

The buzzer can be silenced when the temperature in the freezer storage compartment drops to a specified level or key A9 is pressed. Turning off the fridge storage compartment Press and hold key A1 for 3 seconds, and the corresponding indicator will turn off and the fridge storage compartment will be turned off while the freezer storage compartment operates normally. The fridge storage temperature indication icon will also go off. Press and hold key A1 for 3 seconds again, the corresponding indicator will illuminate, the fridge storage compartment will be turned on, and the fridge storage temperature indication icon will recover. Turning off the refrigerator 12 Function introduction Press and hold key A10 for 3 seconds, corresponding indicator will go off, the display panel will go off and the refrigerator will stop operating.

Press and hold key A10 for 3 seconds again, corresponding indicator will light up, the display panel will light up, and the refrigerator will start operating normally. This function is not equivalent to turning off the power. Fault indication When E or F is displayed due to fault, the refrigerator can still refrigerate. Please contact professional after-sales service personnel as soon as possible. 13 About the fridge storage compartment Please put the food to be stored for short period or for daily consumption in the fridge storage compartment: Although the average temperature in most areas in the fridge storage compartment can be regulated between 0 and 10 , extended period of food storage is not recommended. The fridge storage compartment should only be used for short-term storage. Adjusting shelf height The shelf can be relocated to accommodate food size or height.



[You're reading an excerpt. Click here to read official HAIER](http://yourpdfguides.com/dref/2700956)

[AFL631CS user guide](http://yourpdfguides.com/dref/2700956)

<http://yourpdfguides.com/dref/2700956>

@@@@@@@@@@@@@@@@@@@@@Fig. @@@@@@shows the folded state of the wire wine holder. In this state large space can be spared.

Fig. shows the extended state of the wire wine holder. In this state it can hold various wines. @@To fold it from state to state , simply push the wire up. make sure to keep the two ends of a shelf on the same level. Otherwise it may fall or the food on it may dump. @@@@Eggs, butter, cheese and etc. Drinks, canned food and etc. Seasonings and pickled food Beverages, canned food, cake, etc. Milk, cheese, etc Cooked meat, fresh fish and meat, etc.

@@@@@@@@Sorted storage of food. @@to their category. @@@@Food should be stored with spaces in between them. @@Do not store foods with high moisture content clinging to the inner walls. Otherwise they may freeze to the walls.

Place food a little away from the inner walls. Avoiding food (especially oil food) contact with the inner liner directly, as oil can erode the inner liner. So it's better to clean the oily dirt whenever it is found. Note 16 Tips on food storage in the fridge storage compartment For turnip radish and other similar vegetables, please cut off their leaves before storage so as to prevent the nutrition from being absorbed by the leaves. Defreeze frozen food in the fridge storage compartment.

In this way you can use the frozen food to decrease the temperature in the compartment and save energy. Some vegetables, for example, onion, garlic, ginger, water chestnut, and other rhizomatic foods, can be stored for long periods at normal temperature. There is no need to store them in the refrigerator. The metabolism of vegetable marrow, melons, pawpaw, banana, pineapple can be quickened in the refrigerator, so it is not suitable to store them in the fridge storage compartment. But storing green fruits in the refrigerator for certain periods can promote its maturing. 17 Freezer storage precautions Hot food should not be stored in the refrigerator until it has cooled down to room temperature Food cut into small portions will freeze faster and be easier to defrost and cook. The recommended weight for each portion is less than 2.5kg. It's better to pack food before putting it in the freezer. The outside of the packing must be dry to avoid bags sticking together.

Packing materials should be odor-free, airtight, non-poisonous and nontoxic. In order to avoid expiration of storage period, please note the freezing date, time limit and name of the food on the packing according to the storage periods of different foods. DMY DM Y Only take the required amount of food from the freezer. Defrosted food cannot be re-frozen unless it is first cooked, otherwise it may be less edible. Do not load excessive quantities of fresh food in the freezer. It is better to refer to the cooling capacity of the refrigerator. (See "Technical data".) 18 Defrosting ·Cleaning Defrosting the freezer The freezer defrosts automatically. No manual operation is needed. Cleaning The refrigerator should be cleaned regularly to prevent bad stored food odors.

For safety, unplug the power cord before cleaning the refrigerator. Clean the refrigerator with a soft cloth or sponge with warm water (can be added with mild detergent). Dry water droplets on the refrigerator surfaces with a dry cloth. Use of the cleaning filter (on some models) The design service life is from 5 to 6 years. But as the kind and concentration of odors in each refrigerator is uncertain due to different operation condition and environment, we recommend you to set the replacement cycle within 3 years.

After prolonged use, you can put it under sunshine for 30 minutes to recover the deodorization effect. To clean, please use slow water flow. Note The refrigerator is very heavy. When you are moving it for cleaning or repairs, take care not to damage the floor. Keep the refrigerator upright during moving.

Do not move the refrigerator by rocking it to avoid damage to the floor. Do not spray or flush the refrigerator with water to avoid impact on its electrical insulation property. Do not clean with hard brush, wire brush, detergent powder, gasoline, amyl acetate, acetone and similar organic solutions, warm water or acid or alkaline solutions. Please clean with special refrigerator detergent to avoid damage. Do not touch the cold iron parts with wet hands, otherwise your skin may stick on the cold iron parts. When cleaning, do not clean the cold glass shelves with warm water. Otherwise the glass may break due to sudden temperature change and cause personal injury or property loss. Always keep the door gasket clean. 19 Stopping use Measures on power interruption Even in summer, food may be stored in the refrigerator for a few hours after a power interruption. If a power interruption occurs, please call the power company to ask about the interruption duration.

Do not put additional food into the refrigerator during a power interruption and try to open the door as few times as possible. If prior notice of a power interruption is given and the interruption duration is over 24hrs, make some ice and put it in a container in the top of the fridge storage compartment. As temperature in the refrigerator will rise during a power interruption or other failures, the storage period and edible quality of food will be reduced. Note Stopping use If the refrigerator will not be used for an extended period, please unplug the power cord, disconnect the water source, and clean it with the method described above. Keep the refrigerator door open to prevent any food remaining in the compartment from producing bad odors. Note To ensure the service life of the refrigerator, it is recommended that the refrigerator not be turned off unless it is necessary. Before leaving for a vacation If leaving on an extended vacation, please disconnect the power and water source. remove any food, wait for the frost to melt. Afterwards, clean and dry the interior, and keep the door open to prevent any food remaining in the compartment from producing bad odors. If the room temperature is expected drop below 0 , please ask a qualified service person to drain the water in the water supply system.

Otherwise serious property loss may be caused due to overflow of water if the water pipe or joint breaks. Moving the refrigerator Unplug the refrigerator. Remove all food. Secure the shelves and crisper in the fridge storage compartment as well as the shelves and other movable parts in the freezer with adhesive tape. Close the door and secure with adhesive tape.

Do not tilt the refrigerator more than 45 degrees (angle to vertical) to avoid damaging the refrigerating system. Do not move the refrigerator by its handle to avoid property damage or personal injury. Never place the refrigerating horizontally down. Warning 20 Troubleshooting Before calling for service, please read the following troubleshooting table first. This can save both your time and money.

The table contains common problems except those caused by defects in workmanship or material of the refrigerator.



[You're reading an excerpt. Click here to read official HAIER](#)

[AFL631CS user guide](#)

<http://yourpdfguides.com/dref/2700956>

Problems Refrigerator operation The compressor does not work The refrigerator is in the defrosting cycle. The refrigerator is not plugged into a power outlet. The refrigerator is turned OFF. The indoor or outdoor temperature is high. The refrigerator has been powered off for a period of time. The automatic icemaker is operating. The door is opened too frequently or for long period. The door of the fridge / freezer storage compartment is not tightly closed. @@@@The condenser is dirty.

@@Try to open the each time. door as less frequently as possible. Temperature is set too high. Reset the temperature. @@@tightly. Clean the condenser. The condenser is dirty. The freezer temperature is set too high. Set the freezer temperature lower. It takes 24 hours for the temperature of the refrigerator to become stable.

This is normal for an automatic defrosting refrigerator. Verify the plug is plugged in the socket firmly. Press the "Power" button for 3 seconds or more to restart the refrigerator or turn the knob from OFF to temperature selection position. In this case, it is normal for the refrigerator to run longer. Normally, it takes 8 to 12 hours for the refrigerator to totally cool down.

Ice-making process makes the refrigerator to run longer. Warm air enters the refrigerator and causes it to start frequently. Please do not open the door too frequently. Ensure the refrigerator is located on a level ground and there is no food or container j a r r i n g t h e d o o r. S e e " d o o r / d r a w e r opening/closing" in section "Problem" Set the temperature higher until a satisfactory refrigerator temperature is obtained.

It takes 24 hours for the refrigerator temperature to become stable. Clean or replace the door gasket. A leakage gap of door gasket can cause a longer running time of the refrigerator in order to maintain desired temperature. Clean the condenser. Causes Solutions The refrigerator runs frequently or runs for too long period 21 Troubleshooting Problems Too high temperature The temperature in the fridge storage compartment is too high while the temperature in the freezer is OK The fridge temperature is set too high. Set the fridge temperature lower. It takes 24 hours for the temperature of the refrigerator to become stable. Causes Solutions Water/moisture/frost in the refrigerator Hot and moist climate. Moisture The door is not closed accumulates on the tightly. refrigerator inner The door is opened too walls frequently or for too long each time.

Accumulation of frost and moisture accelerate in such climate. See "Door/drawer opening/closing" in section "Problem". Do not open the door so frequently. Water/moisture/frost on outside surface of the refrigerator Moisture accumulates on the refrigerator's outside surface or between two doors Damp climate. The refrigerator door is not closed tightly. This causes condensation of the cold air in the refrigerator and the warm air outside it. This is normal in damp climate. The moisture will decrease when the humidity drops. See "Door/drawer opening/closing" in section "Problem". Bad odors in the refrigerator The inside of the refrigerator is dirty If you hear Beeps Close the door or silence the alarm The fridge storage compartment door is open. manually. The alarm is normal when it is first started The temperature in the due to relatively higher temperature. You can freezer is too high. silence the alarm manually. The refrigerator is not Adjust the feet to level the refrigerator.

located on a level place. Remove objects around it. The refrigerator touches some object around it. Normal. This prevents condensation and is normal. The inside of the refrigerator needs cleaning Food of strong odor is stored in the refrigerator Clean the internal of the refrigerator. Wrap the food tightly. Abnormal sound This is the sound of the Slight sound similar refrigerating system to that of flowing water The anti-condensation Heating of cabinet system is working. 22 Technical data Meaning of crossed out wheeled dustbin: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact you local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge. 23 0060506447D .



[You're reading an excerpt. Click here to read official HAIER AFL631CS user guide](http://yourpdfguides.com/dref/2700956)
<http://yourpdfguides.com/dref/2700956>