



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER BD 103GAA. You'll find the answers to all your questions on the HAIER BD 103GAA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER BD 103GAA
User guide HAIER BD 103GAA
Operating instructions HAIER BD 103GAA
Instructions for use HAIER BD 103GAA
Instruction manual HAIER BD 103GAA



BD-100G		
BD-100GB	(D)	Bedienungsanleitung
		Gefriertruhe
BD-103GAA	(GB)	Instruction for use
BD-103GB		Chest Freezer
BD-103GC	(F)	Instructions pour l'emploi
BD-143GAA		Gongélateur coffre
BD-143GB	(I)	Istruzioni per l'uso
BD-146GAA		Congelatore orizzontale
BD-146G	(E)	Instrucciones de uso
BD-198G		Congelador
BD-203GAA	(P)	Manual de instruções
BD-203GB		Arca congelador
BD-208GAA	(NL)	Gebruiksaanwijzing
BD-208G		Vrieskist



[You're reading an excerpt. Click here to read official HAIER BD 103GAA user guide](http://yourpdfguides.com/dref/2406622)
<http://yourpdfguides.com/dref/2406622>

Manual abstract:

The instructions for use apply to several models, which is why details of the information may differ according to the type of the appliance. Instruction for use Omit any mechanical influence on the cooling system, especially on the following accessible parts in the compressor chamber (L): Rear wall condenser or skin condenser (R) Compressor (P) (motor) Capillary tube (Q) Drying filter (N) We advise you to place your appliance in a cool, well aired, dry room. installation in the immediate vicinity of a heat source (heating, oven etc.) is highly inappropriate (increased compressor performance would be necessary and, as a result, power consumption would be considerably higher). If the installation near a heat source cannot be avoided, a suitable insulation plate must be fitted between the appliance and the heat source (do not use asbestos), or the following minimum distances must be observed: from gas or electric cooker from radiator or oven from a wall, piece of furniture or another appliance 3 cm 5 cm 2 cm Interventions on the cooling system must be carried out by professional and authorised personnel only. **IMPORTANT!** Escaping refrigerant can injure your eyes. In the event of eye contact with the refrigerant, wash your eyes instantly under plenty of running water and call/consult an eye specialist immediately. Take a note of the technical data Copy the technical data from the rating plate to here so that it is at any time readily available, without having to move the appliance Model/Type. Never obstruct the ventilation grille Larger chest freezers are equipped with a ventilation grille (F) located below on one side. These appliances can be placed directly against a wall or a piece of furniture but not with the side protected with the ventilation grille.

@@ the appliance must be placed horizontally and on a levelled base. @@ **IMPORTANT!** @@The odour which is typical of all new appliances is easy to remove. @@Do not use washing liquids, sharp or granular cleaning implements, or any cleaning products containing soda. Before connecting the appliance, make sure that the inner area especially the corners is absolutely dry. Danger warning Depending on its composition, the refrigerant is easily inflammable. Your appliance must be connected to a power socket with grounded connection, which is conform to the respective standards and has been installed by an authorised specialist. Before you connect the plug of the appliance with the power socket, make absolutely sure that the voltage (V) on the appliance's data-plate corresponds with that of your mains. If the voltage differs, notify the after-sales-service or your dealer immediately, and do not on any account connect the appliance to the mains. English Temperature settings must be according to: You will soon learn which is the most suitable setting for your requirements. If your appliance is equipped with indicator-lights, the following guide explains what is meant by each light up: The green control light must always be on when the appliance is connected to the mains and switched on.

It is very important to pay attention to this, because in the event of a power failure, the red and yellow lights stop operating and do no longer provide a warning. If the red indicator-light goes on, there may be several reasons for this, namely: First start-up of appliance Restart after defrosting Filling freezer with fresh food Remove documents and any accessories from the inside of the appliance. 4. Clean the interior with a mixture of lukewarm water and vinegar, and dry thoroughly with a cloth. 4) to the right (For the time being, turn the controller fully to the right to Max position). If equipped with a SUPER FREEZE SWITCH, turn it on (yellow light goes on too). 9. Do not open the appliance any more for about 4 hours respectively as long as the red light is on, to allow the temperature in the inner compartment to drop to the necessary level. 10. You can now fill the appliance with any amount of deep frozen food (purchased ready frozen goods).

Turn off the SUPER FREEZE SWITCH again after 24 hours at the latest. 12. If you wish to freeze fresh, unfrozen food, go on to the following chapter "Freezing/storage of fresh food". important! Do not store any bottles containing liquids. Liquid expands when frozen and the bottle can explode. Never keep containers with explosive substances (gas lighters, petrol, ether and the like) in the freezer compartment of the appliance. When storing ready frozen food, you must observe the manufacturer's instructions on the food packaging. Deep frozen ice-cream and ice lollies must be eaten only a few minutes after being taken from the appliance to avoid injury to lips and tongue (danger of skin detachment). For the same reason, avoid touching the inner walls with wet hands. We advise you to use defrosted or slightly frozen products within short time.

As a rule, such products are not suitable for re-freezing. In these cases it is normal that the red indicator-light goes on. It goes off automatically when the interior temperature reaches approximately 15°C. @@@@We advise you to use commercially available labels for frozen foods. @@@@ ice forming in the appliance. @@" at the back of the this user manual). @@@@ this is the coldest part. Avoid to put fresh foods directly in contact with deep frozen food. Deep frozen food could defrost and may not outlast the foreseen storage time. B) Fill in within 24 hours, only the quantities of fresh food that are suitable for the freezing capacity of your appliance.

4) (not absolutely necessary when filling in already frozen (e. D) After 24 hours, shift deep-frozen goods from the freezer bottom or the pre-freeze shelf to a hung basket (K), so that the pre-freeze shelf or freezer bottom are available for freezing additional fresh foods. E) Turn off the SUPER FREEZE SWITCH (yellow light goes off). The storage temperature must always be at least -18°C. Refilling of fresh food (not frozen) Make sure that you refill fresh food, in quantities adequate to the freezing capacity (XXkg/24h) earliest 24 hours after the previous filling. 12 Cleaning and maintenance For the upkeep of the external appearance of your appliance, now and again clean with furniture polish or other enamel protecting product (never, on any account, use it in the inside. Clean the seal (B) with warm water now and again without using any cleaning product. If your appliance has a condenser (R) in the rear inside, from time to time remove dirt and dust. Dust and dirt impede release of heat from the inner compartment and considerably increases consumption of energy. For best results, use a light brush or duster to remove dust from the condenser on the rear wall.

If you leave your appliance out of use for an extended period (e. g. When on holidays), leave it open to prevent odours building up inside. For appliances with locks: when the chest lid is open, always set the lock in "closed" position and keep the key well away from small children to prevent accidents.



[You're reading an excerpt. Click here to read official HAIER BD 103GAA user guide](http://yourpdfguides.com/dref/2406622)
<http://yourpdfguides.com/dref/2406622>

When ice and frost layers form on the inner walls up to a certain thickness, they act as an insulation element and prevent the coldness being released from the inner walls. They must be removed from time to time. To ensure correct storage of frozen food, never fill the storage shelf (E) up to the edge. Always allow space between the lid and the frozen foods. To save energy when operating in normal ambient temperature (+18 to + 22°C), we recommend the following settings for the temperature control: Capacity pos. Full Half full 1/4 or less Stacking mark upper medium lower Setting 12,00 h 10.

English In order to receive immediate help, make sure you have ready the following essential data to identify your appliance: Brand of appliance Model / Type Kind of trouble Date of purchase Purchased from whom? Instruction for use The appliance is exposed to direct sunlight or is installed near a heat source (oven, radiator, etc.) Protect the appliance against direct sunlight; check the distance to the heat source; place isolating (see " Installation (Choice of position for installation") The filling of food does not correspond with the excess freezing capacity of your appliance (see rating plate: XXkg/24h), or you did fill in too warm food (see: " Refilling of fresh food"). If the appliance documentation does not include a guarantee card, please contact your dealer. The manufacturer works constantly at the further development of all products. @ @ @ @ @ @ If it takes longer to eliminate a problem, the frozen food in the appliance begins to defrost.

Therefore, take prompt action to eliminate the problem and, if necessary, shift frozen food into another appliance (possibly neighbour). B) Appliance not cooling sufficiently Freezing process too long Compressor operating too often Possible causes/Remedies: Did you have the appliance stand for at least 2 hours before switching it on? If not: unplug when the chest is closed, lift the chest for a brief moment and then put it back down to its original position. After 2 hours put the plug back in. Do not open the chest during this period and a further 12 hours afterwards, i. e.

Until the red light goes off. Is the plug in good cond.



[You're reading an excerpt. Click here to read official HAIER BD](#)

[103GAA user guide](#)

<http://yourpdfguides.com/dref/2406622>