



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER BD-66GAA. You'll find the answers to all your questions on the HAIER BD-66GAA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER BD-66GAA**  
**User guide HAIER BD-66GAA**  
**Operating instructions HAIER BD-66GAA**  
**Instructions for use HAIER BD-66GAA**  
**Instruction manual HAIER BD-66GAA**



[You're reading an excerpt. Click here to read official HAIER  
BD-66GAA user guide](http://yourpdfguides.com/dref/5916112)  
<http://yourpdfguides.com/dref/5916112>

**Manual abstract:**

□ •• For flammable refrigerants is used in the freezer, please be careful when installing, handling, servicing and recycling the appliance. A switch is built into appliances equipped with lighting. When the appliance is opened the light goes on automatically and switches off automatically when closed. To replace the light bulb, first remove the two shade fastening screws, then unscrew the troubled bulb by turning counterclockwise and replace with a new one of the same specification, and then remount the shade and fasten it up with the screws. □ Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. □ The appliance must be positioned so that the plug is accessible. □ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. □ Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. •• Regulation require the appliance to be earthed.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

••• Do not damage the refrigerant circuit. □ If the illuminating lamp is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

□ Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. 1 DIAGRAMS •• FIG1. A Lid B Lid seal C Interior light (if available) D Cabinet E Storage compartment F Vent on grille G Control panel H Basket I Compressor chamber J Compressor K Fan (if available) L Back condenser (if available) • Leave at least 10cm between the appliance and surrounding for ventilation and heat dissipation. The electricity supply must conform to as specified on the rating plate and follow local regulations. It is recommended to wait at least two hours before plugging the appliance after installation.

This helps the refrigerant circuit to stabilise. Insert the plug in the socket. The green light (2) goes on. Allow one hour for the temperature inside the appliance to go down and then place food inside the appliance FIG2. 1 Temperature control (Thermostat) 2 Control light 3 Alarm light 4 Super freeze switch and light (if available) Light Indicators Green = CONTROL (The appliance is running) Red = ALARM (Interior temperature too high) Yellow = Super Freeze indicator (if available) TEMPERATURE SETTING Turn thermostat (1) to adjust the temperature between Min (warmer) and Max (colder). The storage temperature will decrease from Min. SUPER FREEZE FUNCTION (If available) Press the Super freeze button (4) to activate the Super freeze function. The yellow light (4) turns on. Press the button again to switch it off. The Super freeze function will be switched off automatically after 56 hours to save energy.

Energy consumption will increase when this function is on. BEFORE USE ••• This appliance is intended strictly for household use, for storing food only. If the appliance unpacked is damaged please contact your dealer. The mains electricity supply must conform to the rating plate of the appliance. FREEZING FOOD ••• Wrap or seal food in aluminium foil, air tight containers or food storage bags prior to freezing. Allow hot food to cool prior to placing it in the appliance. Smaller portion of food will be faster frozen. The recommended max portion weight is 2.5kg. Avoid placing warm food directly in contact with already frozen food.

••••• 9. •• 10. Now re-fill the frozen food. ••••• TROUBLESHOOTING 1. ••••• 2.

□ Is there heavy ice formation on the inner walls? □ Is the appliance exposed to direct sunlight or heat source? □ Have too much warm foods been put in the appliance? ••••• Do not use any electrical, sharp or mechanical objects to assist in defrosting the ice removal process, unless supplied or approved by manufacturer or approved service centre. To remove ice from the inner walls, use a plastic or wood scraper without sharp edges. Make sure to unplug the appliance. Dry your hands thoroughly to prevent skin damage by contact with ice (it is advised to use gloves). Remove all frozen food from the appliance, put it into a container, cool box, put the frozen cool blocks on top of the frozen food to help keep it very cold, and place the container or cool box in a cool, dry room.

Pull out the water drain plug (if available) located at the bottom of the appliance. Otherwise you must wipe up the melt water at the bottom of the appliance compartment with a sponge or towel. Scrape the ice carefully from the inner of appliance and put it into your kitchen sink, for defrosting. Thoroughly clean the inside of the appliance compartment, rinse it with warm water and remove any spilt food or liquids. Wipe the appliance with an absorbent cloth or sponge thoroughly dry and allow to air for about 3 to 4 minutes. The appliance makes noise. This noise is produced when the motor in the compressor operates and also by refrigerant flowing in the cooling system circuit. These noises are normal. 4. •• This is normal and won't affect the function of the appliance.

•• 2. •• 2. •• Brand of appliance Model Serial number The problem or reason Date of purchase Purchased from/supplier PRECAUTIONS • If your cabinet is to be discarded, you must remove the door and leave the shelves in place. This will reduce the possibility of danger to children. And the flammable foaming needs to be disposed by professional persons. The manufacturer works constantly at the further development of all products. Please therefore bear this in mind as the form, set up and technology are subject to change, without prior notice. Marca aparatului Model Număr de serie Problema sa mo vula Data achiziției Achiziționat de la/furnizor DECLARAȚIE DE CONFORMITATE Fabricantul produselor descrise în acest document, la care se referă această descriere, declară pe propria răspundere că produsele respectă cerințele fundamentale relevante de siguranță, sănătate și protecție din cadrul normelor britanice și UE în vigoare și că rapoarte de testare corespunzătoare sunt disponibile pentru examinare de către autoritățile relevante, care pot fi solicitate de la vânzătorul aparatului, mai ales cu privire la declarația de conformitate CE emisă de producător sau cu aprobarea acestuia. .



[You're reading an excerpt. Click here to read official HAIER](#)

[BD-66GAA user guide](#)

<http://yourpdfguides.com/dref/5916112>