



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER DW9-AFM. You'll find the answers to all your questions on the HAIER DW9-AFM in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual HAIER DW9-AFM User guide HAIER DW9-AFM Operating instructions HAIER DW9-AFM Instructions for use HAIER DW9-AFM Instruction manual HAIER DW9-AFM

### Cleaning and Special Maintenance

#### Filter Assembly

For the best performance and results, the filter assembly must be cleaned.


The filter efficiently removes food particles from the wash water, allowing it to be recirculated during the cycle. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the "A" semi-circular filter and cup under running water. To remove the filter assembly, pull on the cup handle in the upward direction. The entire filter assembly (made up of the "A" semi-circular filter and the "B" fine filter) should be cleaned at least once a month. To clean the filter and the fine filter, use a cleaning brush. Then, reassemble the filter parts as shown in the figures below and reinsert the entire assembly in the dishwasher, positioning in its seat and pressing downward.

The dishwasher must never be used without the filters. Improper replacement of the filters may reduce level of the appliance and damage dishes and utensils.



#### Cleaning the Spray Arms

It may happen that food particles become enmeshed on the spray arms and block the hole. Check the spray arms periodically and clean them when needed. (See "Close up view [interior]", letters C-E).

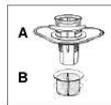

#### Cleaning the Water Inlet Filter

Periodically clean the water inlet filter (see figure 1A) located on the outlet of the water supply tap. After turning off the water tap, unscrew the end of the water supply hose, remove the filter and clean it carefully under running water. Then, return the filter to its place and tighten the water supply hose back into position.

### Troubleshooting

It may occur that the dishwasher does not function or does not function properly. Before calling for assistance, let us see what can be done first: have you forgotten to press one of the buttons or to perform an essential operation?

#### The Dishwasher Does Not Start

- Have you checked whether:
  - the plug is pushed into the socket correctly;
  - the power is on in the house;
  - the door is closed properly;
  - the ON-OFF switch is on "ON";
  - the water supply is turned on

#### The Dishwasher Does Not Load Water

- Have you checked whether:
  - the water is turned on and the hose is connected properly;
  - the water supply to the house on and has sufficient pressure;
  - the water supply hose is crimped or bent;
  - the filter for the water supply hose is clogged.

#### The Dishes Are Not Clean

- Have you checked whether:
  - the water is turned on and the hose is connected properly;

- the water supply to the house on and has sufficient pressure;
- the water supply hose is crimped or bent;
- the filter for the water supply hose is clogged.

#### The Dishwasher Does Not Drain

- Have you checked whether:
  - the drain hose is crimped or bent.

#### Lime Deposits or a White Film Form on the Dishes

- Have you checked whether:
  - the lid to the salt container is closed properly;
  - the rinse aid dosage is correct.

If, despite all these checks, the dishwasher still does not function and/or the problem persists, contact the nearest authorised service centre and provide them with the following information:

- the nature of the problem;
- the model type number (Mod. ...) And the serial number (S.N. ...), which are indicated on the plate located on the side of the inner part of the door.

Never call on unauthorised technicians and refuse to allow parts to be installed that are not original spare parts.

### Installation

#### Positioning the Appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation.

#### Levelling the Appliance

Once the appliance is positioned, adjust the feet (screwing them in or out) to adjust the dishwasher, making it level. In any case, the appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance.


#### Cold Water Connection

Connect the cold water supply hose to a threaded 3/4" (gas) connector and make sure that it is fastened tightly in place (see fig. 1).

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance.


#### Hot Water Connection

The water supply to the appliance can also be connected to the house's hot water line (centralised system, heating system), as long as it does not exceed a temperature of 60°C. In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced. The connection must be made to the hot water line following the same procedures as those for the connection to the cold water line.

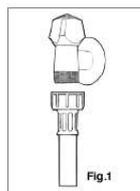

#### Drain Hose Connection

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it. Use the special plastic support that comes with the appliance (see fig. 2). The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water.

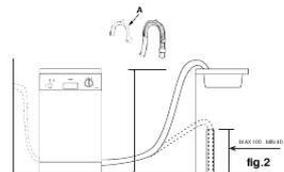

#### Attention:

The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain.

#### Electrical Connection

After making sure that the voltage and frequency values for the current in the home correspond to those on the rating plate (located on the stainless steel inner door of the appliance) and that the electrical system is sized for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly (the earthing of the appliance is a safety requirement mandated by law). If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the plug, rather than using adaptors or the like as they could cause overheating and burns.



[You're reading an excerpt. Click here to read official HAIER DW9-AFM user guide](http://yourpdfguides.com/dref/3244221)  
<http://yourpdfguides.com/dref/3244221>

### Manual abstract:

The filter efficiently removes food particles from the wash water, allowing it to be recirculated during the cycle. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the "A" semi-circular filter and cup under running water. To remove the filter assembly, pull on the cup handle in the upward direction. The entire filter assembly (made up of the "A" semicircular filter and the "B" fine filter) should be cleaned at least once a month. To clean the filter and the fine filter, use a cleaning brush. Then, reassemble the filter parts as shown in the figures below and reinsert the entire assembly in the dishwasher, positioning in its seat and pressing downward. The dishwasher must never be used without the filters.

Improper replacement of the filters may reduce level of the appliance and damage dishes and utensils. Installation Cleaning the Spray Arms It may happen that food particle become encrusted on the sprayer arms and block the hole. Check the sprayer arms periodically and clean them when needed. (See "Close up view [interior]", letters C-E). Positioning the Appliance Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation. Drain Hose Connection Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it.

@@@In any case, the appliance should not be inclined more than 2°. @@@Then, return the filter to its place and tighten the water supply hose back into position. Connect the cold water supply hose to a threaded 3/4" (gas) connector and make sure that it is fastened tightly in place (see fig. 1). If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities.

If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance. S MAX 100 MIN 40 fig.2 Troubleshooting It may occur that the dishwasher does not function or does not function properly. Before calling for assistance, let us see what can be done first: have you forgotten to press one of the buttons or to perform an essential operation? - the water supply to the house on and has sufficient pressure; - the water supply hose is crimped or bent; - the filter for the water supply hose is clogged. Hot Water Connection The water supply to the appliance can also be connected to the house's hot water line (centralised system, heating system), as long as it does not exceed a temperature of 60°. In this case, the wash cycle time will be shortened by about 15 minutes and the wash efficiency slightly reduced. The connection must be made to the hot water line following the same procedures as those for the connection to the cold water line. Attention: The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain. The Dishwasher Does Not Start Have you checked whether: - the plug is pushed into the socket correctly; - the power is on in the house; - the door is closed properly; - the ON-OFF switch is on "ON"; - the water supply is turned on. The Dishwasher Does Not Drain Have you checked whether: - the drain hose is crimped or bent.

Electrical Connection After making sure that the voltage and frequency values for the current in the home correspond to those on the rating plate (located on the stainless steel inner door of the appliance) and that the electrical system is sized for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly (the earthing of the appliance is a safety requirement mandated by law). If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the plug, rather than using adaptors or the like as they could cause overheating and burns. Lime Deposits or a White Film Form on the Dishes Have you checked whether: - the lid to the salt container is closed properly; - the rinse aid dosage is correct. If, despite all these checks, the dishwasher still does not function and/or the problem persists, contact the nearest authorised service centre and provide them with the following information: - the nature of the problem; - the model type number (Mod...) And the serial number (S/N...), which are indicated on the plate located on the side of the inner part of the door.

The Dishwasher Does Not Load Water Have you checked whether: - the water is turned on and the hose is connected properly; - the water supply to the house on and has sufficient pressure; - the water supply hose is crimped or bent; - the filter for the water supply hose is clogged. The Dishes Are Not Clean Have you checked whether: - the water is turned on and the hose is connected properly; Never call on unauthorised technicians and refuse to allow parts to be installed that are not original spare parts. Fig.1 .9.

GB GB .10. Wash Cycle Table Energy Saving Tips Cycle Cycle Selection Information Description of Cycle Detergent Rinse Aid - It is important to try and run the dishwasher when it is fully loaded to save on energy. In order to prevent odors from forming and food from caking onto the dishes, you can run the hold cycle. - Choose the right wash cycle: the choice of cycle depends on - Use the right amount of detergent: if you use too much detergent, the result will not be cleaner dishes, but, rather, a greater negative impact on the environment.

@@Very dirty dishes, pots and pans. (not to be used with Rinse with cold water. Extended wash at 50 Rinse with hot water Drying. @@Normally dirty dishes, pots and pans. @@@@Run immediately after dishes are used. Wash at 50 Hot Rinse Drying. . @@@@This will eliminate the need for extra wash cycle. @@- Make sure that the water supply is turned on to full pressure. @@@@They will also dry better.

How to Use the Lower Rack We recommend that you place the items which are the most difficult to clean items on the lower rack: pots, lids, serving dishes and bowls, as shown in the figure to the right. It is preferable to place serving dishes and lids on the sides of the racks in order to avoid blocking the rotation of the top spray arm. - Pots, serving bowls, etc. must always be placed face down. - Deep pots should be slanted to allow the water to flow out. - The silverware basket can be doubled (see fig.A) so that only one section may be used when the silverware load is light. This also makes space for additional pots and pans on the lower rack. - Silverware should be placed in the silverware basket with the handles at the bottom; if the rack has side baskets, the spoons should be located individually into the appropriate slots.



[You're reading an excerpt. Click here to read official HAIER](#)

[DW9-AFM user guide](#)

<http://yourpdfguides.com/dref/3244221>

*Especially long utensils should be placed in the horizontal position at the front of the upper rack.*

*1 2 Load for 9 Standard Settings - Press the ON-OFF button, and the ON-OFF light will turn on. At this point, the wash cycle will begin. Important: In general, it is not advisable to open the door while the machine is working. Care must be taken if the door is opened during the hot phase or immediately after a program has finished as steam may escape. STOP Cancelling or modifying a wash cycle setting Press the ON-OFF button and the ON Light will turn off. Rotate the knob in the clockwise direction to the desired cycle setting (see the section entitled, "Starting a wash cycle..."). Then, turn the dishwasher back on using the ON-OFF button.*

*3 4 fig.A fig.B How to Use the Upper Rack The upper rack is designed to hold more delicate and lighter dishware, such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they do not get moved by the spray of water. The upper rack can be adjusted for height. @@@@The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water. Detergent and Rinse Aid Adjusting Salt Consumption The dishwasher i the appliance malfunctions, turn off water supply to the appliance and disconnect the plug from the wall socket. Then, consult the section entitled, "Troubleshooting. "If you can not solve the problem, contact a service centre. - Only specialised personnel are authorised to make repairs.*

*@@- The appliance must be positioned so that the plug is accessible. @@- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. Close-up View (Interior) This appliance complies with the following EEC directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications; - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications. - Carefully dispose of the packing material. - After removing the packing, check to make sure that the appliance is not damaged. If in doubt, contact a qualified professional. - The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. - Fundamental rules to follow when using the appliance: \* Never touch the dishwasher when bare foot or with wet hands or feet; \* We discourage the use of extension cords and multiple sockets; \* During installation, the power supply cord must not be excessively or dangerously bent or flattened; A B C D Upper Rack Rack Height Adjustor Top Sprayer Arm Lower Rack E F G H Washing Filter Bottom Sprayer Arm Detergent and Rinse Aid Dispenser Salt Container Cap Close-up View (Control Panel) A B Technical characteristics Width 45 cm 60 cm 85 cm 9 standard place settings 0.03-0.6 MPa 220-240V~ 50Hz 1900W S Depth Height Capacity C D E Mains water pressure Power voltage A B C ON-OFF Light Low Salt Indicator Light ON-OFF Button D E Handle For Opening Door Knob For Selecting Cycle Total absorber power .*

*1. GB GB .2. Installation Domestic Dishwasher DW9-AFM Diagram WR L 3(1) 1(2) IG LS IS 1 1 2 3 220-240V~/50Hz N 4(2)2(1) F Filter LSS B1 CL B2 8 B3 CL B3 B5 7 B4 TS.50 n.*

*a. A4 A5 ITR n.c. A3 EV2 R C ISS M 1 T2 D/Ed B6 CL T6 T3 T4 T1 A6 CL 2 A8 A7 4 B8 B7 B10 CL B9 3 B8 A ITR n.c.*

*C A9 CL 1 A10 A8 3 2 IAQS 1 WR: Wiring box IG: Power switch IS: Door switch P1: Water level switch LS: Power indicator LSS: Saltmiss ISS: Softer switch PS: Drain pump EV1: Inlet valve D/ED: Dispenser TS50: 50j temperature controler R: Heater EV2: Softer valve ML: Washing motor MT: Timer motor IAQS: Waterflow switch GB .*



**[You're reading an excerpt. Click here to read official HAIER](http://yourpdfguides.com/dref/3244221)**

**[DW9-AFM user guide](http://yourpdfguides.com/dref/3244221)**

**<http://yourpdfguides.com/dref/3244221>**