



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER DW9-TFE1. You'll find the answers to all your questions on the HAIER DW9-TFE1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER DW9-TFE1**  
**User guide HAIER DW9-TFE1**  
**Operating instructions HAIER DW9-TFE1**  
**Instructions for use HAIER DW9-TFE1**  
**Instruction manual HAIER DW9-TFE1**

## Haier

Dishwasher  
Geschirrspülautomat  
DW9-TFE1  
Instructions for Use  
Bedienungsanleitung



012056061



[You're reading an excerpt. Click here to read official HAIER DW9-TFE1 user guide](http://yourpdfguides.com/dref/3244223)  
<http://yourpdfguides.com/dref/3244223>

**Manual abstract:**

*If the appliance is damaged, do not put it into use but contact your supplier or customer service without delay. The dishwasher must not be connected to the electricity supply while installation is being carried out. After the appliance has been installed, the mains plug should still be easily accessible. During installation, the power supply cord must not be excessively or dangerously bent or flattened. This appliance cannot be installed outdoor, not even if the area in which it is installed is covered by a roof; it is also very dangerous to leave it exposed to the rain and elements. During normal use The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. Do not place any heavy objects or stand on the door when it is open. the appliance could tip forward. The water inside the dishwasher is not suitable for drinking. Do not use solvents of any kind inside your dishwasher.*

*There is a risk of water squirting out. Do not touch the heating element during or after a wash cycle. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet; - We discourage the use of extension cords and multiple sockets; - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. If your family includes children The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.*

*@@@Only specialised personnel are authorised to make repairs. @@@When disposing of old appliances Appliances which are no longer being used must be made inoperable by cutting the power supply cord and removing the door lock. Take the appliance to a designated waste disposal center. Children could get locked in the appliance (risk of suffocation) or get stuck in other positions. therefore: Remove the mains plug , cut the mains wire and set aside.*

*Damage the door lock so that the door can no longer be closed. The back of the appliance should rest against the wall, and the sides, along the adjacent cabinets or wall. The dishwasher is equipped with water supply and drain hoses that can be positioned to the right or the left to facilitate proper installation. Once the appliance is positioned, adjust the feet (screwing them in or out) to adjust the dishwasher, making it level. The appliance should not be inclined more than 2°. If the appliance is level, it will help ensure proper performance. Some models are fitted with an "Aquistop" water supply hose (see fig. B) in which the small filter is already housed in the threaded end. If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance.*

*The appliance is to be connected to the water mains using new hose-sets and that old hose-sets should not be reused. The dishwasher is equipped with a system that stops the supply of water in the event of a problem with the water supply hose, or leaks within the unit, in order to prevent damage to your home. If for any reason the box containing the electrical components happens to get damaged, turn off the power supply and remove the plug for the appliance from the socket immediately. In order to guarantee that the anti-flooding feature operates properly, the "A" box with water supply hose must be attached to the water supply tap as shown in fig. The water supply hose must not, under any circumstances, be cut, as it contains electrical parts which are live. If the length of the hose is not adequate to make a proper connection, the hose must be replaced with one which is long enough. This hose is available upon request from specialised retailers and approved service center. Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it. If necessary, fit a syphon trap (U-bend) with a connecting piece for the electrical drain hose (fig. c).*

*The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water. The connecting piece for syphon trap (U-bend) must be securely fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain. After making sure that the voltage and frequency values for the current in the home correspond to those on the rating plate (located on the stainless steel inner door of the appliance) and that the electrical system is correct for the maximum voltage on the rating plate, insert the plug into an electrical socket which is earthed properly (the earthing of the appliance is a safety requirement mandated by law). The dishwasher plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be done safely. Getting to know your dishwasher How to fill the salt The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water.*

*Always use salt intended for use with dishwashers. The salt container is located beneath the lower rack and should be filled as follows: Remove the lower rack and then unscrew and remove the cap from the salt container; If you are filling the container for the first time, fill it with water; Place the end of the funnel (supplied) into the hole and introduce about 2 kg of salt. It is normal for a small amount of water to come out of the salt container. Carefully screw the cap back on. To prevent the formation of rust, load the salt just before beginning a wash cycle.*

*This is intended to optimize and customize the level of salt consumption so that it remains at a minimum. To adjust salt consumption, proceed as follows: Unscrew the cap from the salt container; There is a ring on the container with an arrow on it (see figure to the side). If necessary, rotate the ring in an anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used. It is recommended that adjustments be made in accordance with the following table: Water Hardness How to fill rinse aid rinse aid This product makes dishes sparkle and helps them to dry without spotting. the dispenser is located on the inside panel of the door. When the low rinse aid indicator " 1 " is bright ,it means the rinse aid is low,you must load rinse aid . Regardless of the type of detergent dispenser installed on your appliance, you must proceed as indicated below when loading the rinse aid. To open the dispenser, turn the "2" cap in an anti-clockwise direction and then pour in the rinse aid, making sure not to overfill. The amount of rinse aid used for each cycle can be regulated by turning the "3" dose adjustor, located beneath the "2" cap, with a screwdriver.*



**[You're reading an excerpt. Click here to read official HAIER](#)**

**[DW9-TFE1 user guide](#)**

**<http://yourpdfguides.com/dref/3244223>**

There are 6 different settings; the normal dosage setting is 3.

If drops of water remain on the dishes or spotting occurs, the dosage adjustor should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjustor to a lower setting. How to fill the detergent dispenser Detergent specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Programme overview". The detergent for the wash cycle should be poured into the "6" compartment. If they become faded and unsightly in appearance. If necessary, seek further information from detergent manufacturers. This will eliminate the need for extra wash cycles. Pull out the rack to load the dishwasher. Must always be placed face down (see fig.

d) . Deep pots should be slanted to allow the water to flow out. (see fig. g). Place glasses, cups and small bowls on the additional cup rack.

Condition of food remains A lot stuck on hard Rinse with hot water. Coffee, cakes, milk, sausage, cold drinks, Mixed salads Very little loosely attached Short wash at 40°C. Rinse off if the dishes have been stacked for several days in the dishwasher prior to washing. Short cold wash to prevent food residue from drying on the dishes . , as well as the amount and condition of food remains, with the details contained in the wash cycle table. the corresponding programme sequence , duration and consumption details are shown in the right half of the overview. For example: Use the « normal» programme for dishes and utensils which have plenty of food remains stuck on hard. If only a small number of dishes have been loaded into the dishwasher, selecting a programme that operates at the next lowest temperature which should be sufficient. The values can vary considerably according to: different amounts of dishes temperature of mains water supply pressure of mains water supply ambient temperature fluctuations in mains voltage machine-related factors (e. Close the door after loading the appliance. Rotate the knob to select programme you wish, the timer remaining indicator display the time of the programme you selected. After 3 seconds the appliance emits a short warning signal, and start the programme, the state indicator "A" blinks. After a washing program ends, the knob indicates the same position as the last washing program. To start another washing program, turn the knob to the reset position, then choose the next washing program. Six beeps will indicate that the wash cycle has finished and during normal daily usage yourself, without having to call out a service engineer.

Not only does this save costs, but it also means that the appliance is available for use again that much sooner. The following list of common occurrences and their remedies should help you identify the causes of most problems. Plug not inserted in wall socket. Do not forget that repairs should only be carried out by a qualified specialist. Improper repairs can lead to considerable equipment damage as well as danger to the user. With the appliance itself error displays on the Stop light "A" with it blinking all the time. When the buzzer emits 1 short warning signal every 30 seconds. When the buzzer emits 3 short warning signal every 30 seconds. When the buzzer emits 4 short warning signal every 30 seconds. When the buzzer emits 5 short warning signal every 30 seconds.

have you checked whether: The water is turned on and the hose is connected properly; the water supply to the house is on and has sufficient pressure; the water supply hose is crimped or bent; the filter for the water supply hose is clogged. When the buzzer emits 2 or 6 short warning signals every 30 seconds, Contact the nearest authorized service center. If you take all these checks and the dishwasher still does not function or your dishwasher have any other error display, you can power the dishwasher OFF, and wait a few minutes. You can power the dishwasher on, try it again, if the dishwasher still does not function and/or the problem persists, contact the nearest authorised service center and provide them with the following information: the nature of the problem. The model type number (Mod.

Lower spray arm rotates with difficulty Spray arm is blocked by small items or food remains. Lid in detergent compartment cannot be closed Compartment was damp when it was filled up with detergent. Compartment must be dry before detergent is added. Water remains inside appliance after programme has ended Remove any spilled rinse aid with a cloth as it could otherwise lead to excessive foaming during the next washing cycle. Appliance stops suddenly while washing is taking place Knocking sound can be heard while washing is taking place A spray arm is knocking against the dishes inside the appliance. Rattling sound can be heard while washing is taking place Crockery has not been stacked properly inside the appliance. Knocking sound coming from inlet valves This is caused by the way the water pipes have been laid and it has no effect upon the way the appliance functions. Jets of water could not reach all parts of the dishes, ect. too many items in the rack. Items in the rack were touching each other. not enough detergent was added to dispenser. Selected wash programme was not intensive enough. White stains are left on crockery, glasses have a milky appearance Although water is quite hard, no salt has been put in appliance. If you used a phosphate-free detergent , try a detergent containing phosphates and compare results. Items were removed from dishwasher too soon.

Tea stains or traces of lipstick have not been completely removed - Too much salt was spilt while filling container. Glasses become clouded and discoloured; coating cannot be wiped off Smears left behind on glasses and cutlery; glasses have acquired a metallic appearance Width Depth Height Capacity Mains water pressure Power voltage Maximum current intensity Total absorbed power 45 cm 60 cm 82 cm 9 standard place settings Old appliances still have some residual value. An environment-friendly method of disposal will ensure that valuable raw materials can be recovered and used again. When an appliance has reached the end of its working life, unplug it from the mains. Cut through the mains cable and dispose of it together with the plug. destroy the door locking mechanism. This will ensure that children at play cannot become locked inside and are not exposed to the risk of suffocation. Your new appliance was protected by suitable packaging while it was on its way to you. All materials used for this purpose are environment-friendly and can be recycled. please make a contribution to protecting the environment by disposing of the packaging appropriately.

Do not allow children to play with any parts of the packaging. Example of loaded dishwasher: See Fig 1 and 2 Capacity: 9 place settings Comparability programme: Light wash Rinse-aid setting: 5 Detergent: 5g+25g If the comparability tests do not comply fully with EN 50242, e.



[You're reading an excerpt. Click here to read official HAIER](#)

[DW9-TFE1 user guide](#)

<http://yourpdfguides.com/dref/3244223>

A: Wiring box B: Door switch C: Water level switch D: Drain pump motor E: Dispenser The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. When the buzzer emits 3 short warning signal every 30 seconds. .



[You're reading an excerpt. Click here to read official HAIER](#)

[DW9-TFE1 user guide](#)

<http://yourpdfguides.com/dref/3244223>