




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER DW9-TFE3. You'll find the answers to all your questions on the HAIER DW9-TFE3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER DW9-TFE3**  
**User guide HAIER DW9-TFE3**  
**Operating instructions HAIER DW9-TFE3**  
**Instructions for use HAIER DW9-TFE3**  
**Instruction manual HAIER DW9-TFE3**

**Haier**

Dishwasher  
DW9-TFE3 Series  
DW9-UFE3 Series  
Instructions for Use

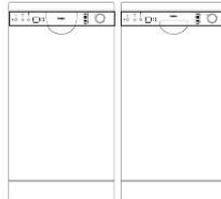

0120205000

en



[You're reading an excerpt. Click here to read official HAIER DW9-TFE3 user guide](http://yourpdfguides.com/dref/3244224)  
<http://yourpdfguides.com/dref/3244224>

**Manual abstract:**

Ensure that the domestic wiring is properly earthed. The mains electricity supply must conform to the details shown on the dishwasher rating plate. Do not connect the dishwasher to the electricity supply using an extension cable. After the appliance has been installed, the mains plug should still be easily accessible. During installation, the power cable must not be excessively or dangerously kinked or flattened. This appliance cannot be installed outdoors, even if the area in which it is installed is covered by a roof. It is very dangerous to leave the appliance exposed to rain and the elements. During normal use The dishwasher must only be used by adults for the washing of household dishes and cooking utensils. Do not place any heavy objects on the door or stand on the door when it is open. The appliance could tip forward.

The water inside the dishwasher is not suitable for drinking. Do not use solvents of any kind inside your dishwasher. There is a risk of explosion. Open the door carefully if the dishwasher is operating. There is a risk of water coming out.

Do not touch the heating element during or after a wash cycle. Fundamental rules to follow when using the appliance: - Never touch the dishwasher when barefoot or with wet hands or feet. - Do not use extension cords and multiple sockets. - If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply. 2 en If your family includes children or the infirm The appliance is not intended for use by young children or infirm persons without supervision.

Young children should be supervised to ensure that they do not play with the appliance. Keep detergents out of the reach of children. If a fault occurs If the appliance malfunctions, turn off the water supply to the appliance, switch it off and disconnect the plug from the wall socket. Then, consult the section entitled "Trouble shooting". If you cannot solve the problem, contact a service centre. Only specialised personnel are authorised to make repairs. If the power cable is damaged, it must be replaced by the manufacturer or a manufacturer-approved service engineer. To maintain the EFFICIENCY and SAFETY of this appliance, we recommend: - Call only the service centres authorised by the manufacturer, or the approved service agents. - Always use original spare parts. When disposing of old appliances Appliances which are no longer being used must be made inoperable by disconnecting the plug from the wall socket, cutting the power cable and removing the door lock.

Take the appliance to a designated waste disposal centre. Dangerous voltage Warning Children could get locked or stuck in the appliance (risk of suffocation). Therefore: Remove the mains plug and cut the mains wire. Damage the door lock so that the door can no longer be closed. 3 Installation Positioning the appliance en Positioning the appliance in the desired location. The appliance is equipped with water supply and drain hoses that can be positioned to the right or the left of the appliance to facilitate proper installation. Levelling the appliance Once the appliance is positioned, adjust the feet (screwing them in or out) to level the appliance. If the appliance is level, it will help to ensure proper performance. Cold water connection Connect the water supply hose to a threaded 3/4 inch (ca. 19mm) connector, making sure that it is fastened tightly in place (see Fig.

A). If the water pipes are new or have not been used for an extended period of time, let the water run for a while until the water is clear and free of impurities. If this precaution is not taken, there is a risk that the water inlet can get blocked and damage the appliance. fig.A Warning The appliance is to be connected to the mains water using new hose sets.

Old hose sets should not be reused. fig.B Anti-Flooding protection The dishwasher is equipped with a system that stops the supply of water in the event of a problem with the water supply hose or leaks within the unit, in order to prevent damage to your home. If for any reason the box containing the electrical components happens to get damaged, turn off the power supply and unplug the appliance immediately. In order to guarantee that the anti-flooding feature operates properly, box "A" with the water supply hose must be attached to the water supply tap as shown in Fig.

B. If the length of the hose is not adequate to make a proper connection, the hose must be replaced with one which is long enough. This hose is available upon request from specialised retailers and approved service centres. 4 en Drain hose connection Insert the drain hose into a drain pipe with a minimum diameter of 4cm, making sure to avoid kinking or pinching. If necessary, fit a syphon trap (U-bend) with a connecting piece for the drain hose (Fig. C). The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water. fig.C Attention: The syphon trap (U-bend) must be securely fastened to the wall to prevent the drain hose from moving and thus causing water to be spilt. Electrical connection After making sure that the voltage and frequency values for your domestic electricity supply correspond to those on the rating plate (located on the inner door of the appliance), insert the plug into an electrical socket which is properly earthed (the earthing of the appliance is a legal safety requirement).

Caution: The dishwasher's mains plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be carried out safely.

5 en ELECTRICAL CONNECTION (UK ONLY) For your safety please read the following information. Warning: This appliance must be earthed. The appliance must be connected to a socket by means of a three pin plug, suitably earthed and should be protected by a 13 amp fuse. The appliance is supplied with a rewirable 3-pin plug fitted with a 13-amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 13 amp and approved to BS1362. The plug contains a removable fuse cover that must be refitted when the fuse is replaced. In the event of the fuse cover being lost or damaged, the plug must not be used until a replacement cover has been obtained. Caution: The plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be carried out safely. 6 Getting to know your appliance Close-up view (control panel) A CE H en B DF A CE GI H J B A B C D E DF G I F G H I J Delayed Start Button J ON-OFF Indicator ON-OFF Button "3 in 1" Indicator "3 in 1" Button Delayed Start Indicator Time-remaining Indicator Low Rinse Aid Indicator Low Salt Indicator Programme selection dial.

Dishwasher interior a c e b d h f g i j k a Upper Rack b Lower Rack c Top Spray Arm d Silverware Basket e Bottom Spray Arm f 7 Salt Container Cap g Washing Filter h Detergent and Rinse Aid Dispenser i j Water Inlet Hose Drain Hose k Power Supply Cord How to fill the salt container Salt en The hardness of water varies from place to place.



[You're reading an excerpt. Click here to read official HAIER](#)

[DW9-TFE3 user guide](#)

<http://yourpdfguides.com/dref/3244224>

If hard water is used in the appliance, deposits will form on the dishes and utensils. The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime and minerals from the water. Filling the container with salt Always use salt intended for use with dishwashers. The salt container is located beneath the lower rack and should be filled as follows: When the low Salt indicator "1" lights, you must add salt.

Remove the lower rack and then unscrew and remove the cap from the salt container. If you are filling the container for the first time, fill it with water. Place the end of the funnel (supplied) into the hole and introduce about 2 kg of salt. It is normal for a small amount of water to come out of the salt container.

Carefully screw the cap back on.

**1 Important** To prevent the formation of rust, fill with salt just before beginning a wash cycle. Adjusting salt consumption You can adjust the amount of salt used to suit the hardness of the water in your area. This is intended to optimize the level of salt consumption so that it remains at a minimum. To adjust salt consumption, proceed as follows: Unscrew the cap from the salt container; There is a ring on the container with an arrow on it (see figure to the side). If necessary, rotate the ring in an anticlockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used. It is recommended that adjustments be made in accordance with the following table: Water Hardness Level 1 2 3 4 Clarke degrees 0-14 14-36 36-71 >71 °dH 0-17 18-44 45-89 >89 mmol/l 0-1,7 1,8-4,4 4,5-8,9 >8,9 Autonomy Selector Salt consumption position (Grams/cycle) (cycles/2kg) / "-" Middle "+" 0 20 40 60 / 60 40 25 8 How to fill the rinse aid container Rinse aid This product makes dishes sparkle and helps them to dry without spotting. The dispenser is located on the inside panel of the door. en H Adding rinse aid Regardless of the type of detergent dispenser installed on your appliance, you must proceed as indicated below when loading the rinse aid. To open the dispenser, turn the cap "2" in an anti-clockwise direction and then pour in the rinse aid, making sure not to overfill. The amount of rinse aid used for each cycle can be regulated by turning the dose adjustor "3", located beneath the cap "2", with a screwdriver.

There are 6 different settings; the normal dosage setting is 3. **23 Important** Correct dosage of rinse aid improves drying. If drops of water remain on the dishes or spotting occurs, the dosage adjustor should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjustor to a lower setting. How to fill the detergent dispenser Detergent Detergent specifically intended for use with dishwashers must be used. The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Programme overview". The detergent dispenser is located on the inside panel of the door. **4 5 Adding detergent** To open cover "4" on the dispenser, press button "5". The detergent for the wash cycle should be poured into compartment "6".

The detergent for the pre-wash cycle should be poured into compartment "7".

After the detergent has been placed in the dispenser, close the cover and press down until it clicks into place. **7 6 Notice:** To facilitate closing the cover, remove any excess detergent on the edges of the dispenser. **9 Not suitable for the dishwasher** What you should not put into the dishwasher en Cutlery and tableware manufactured in whole or part from wood. These will become faded and unsightly in appearance. Furthermore, the adhesives that are used are not suitable for the temperature inside the dishwasher.

Delicate decorative glassware and vases, special antique or irreplaceable china. The decorative patterns on such items will not be dishwasher-proof.

@@@Highly absorbent materials, such as sponges and towels, should never be placed in the dishwasher. Our **rwash** For dishes that need to be rinsed and dried only. Hot rinse at 65°C.

@@@The values can vary considerably according to: Amount of dishes. Temperature of mains water supply. Pressure of mains water supply. Ambient temperature. Fluctuations in mains voltage. Machine-related factors (e.g. @@Set On-Off button "B" to On. The indicator light "A" comes on. Rotate the dial to select the required programme.

@@@Open the door. Remove dishes, etc. @@@@Caution! There is a risk of water coming out from inside the appliance. Do not open the door fully until spray arm has stopped rotating. @@@@Close the door after loading the appliance. Switch dishwasher ON. Immediately press the Delayed Start button "F". @@@@The time-remaining indicator "G" will also blink. @@Otherwise, the detergent may have already been used and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled (see the paragraph entitled, "Adding Detergent"). To modify a cycle that is already underway, follow the instructions contained in the paragraph entitled "Reset function" and select the programme you require (see the paragraph entitled "Switching the dishwasher ON"). A CE H B DF G I 3in1 function When using "3 in 1" combination products, the rinse-aid and salt indicator lights are no longer relevant. It may be helpful to select the lowest possible setting for water hardness. If you decide to switch to using a standard detergent system we advise you to: 1: Refill both the salt and rinse aid compartments. 2: Switch the water hardness setting to the highest possible position and run for three normal cycles with the appliance left empty.

3: Readjust the water hardness setting again according to the conditions for your region. **Warning** Do not place the tablets in the cutlery basket as this will result in poorer wash results. The tablets should be placed in the detergent doser. **Notice:** 3 in 1 or similar tablets should not be used when Heat Wash, Rapid wash or Soak programmes are selected. **Reset drain function** You can use the "Reset" function to stop the wash cycle when running by rotating the dial to "Reset".

The appliance will stop after a few minutes drain phase. **17 How to keep your dishwasher in shape** After every wash After every wash leave the door slightly ajar so that moisture and odours are not trapped inside. en Remove the plug Before cleaning or performing maintenance, always switch off the machine and remove the plug from the socket. No solvents or abrasive cleaning products To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. It is recommended that you use only a cloth and warm soapy water.



[You're reading an excerpt. Click here to read official HAIER](#)

[DW9-TFE3 user guide](#)

<http://yourpdfguides.com/dref/3244224>

To remove spots or stains from the surface of the interior, use a cloth dampened with water and a little white vinegar or a cleaning product made specifically for dishwashers. Moving the appliance If the appliance must be moved, try to keep it in a vertical position. If absolutely necessary, it can be positioned on its back. Seals One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

The door should not be left in the open position since this could present a tripping hazard. When you go on holiday When you go on holiday, it is recommended that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly ajar. This will help the seals last longer and prevent odours from forming within the appliance. 18 Care and maintenance en Regular inspection and maintenance of your appliance helps to prevent problems from occurring. This saves time and aggravation. You should therefore carefully inspect the inside of your dishwasher from time to time. Overall condition of appliance Check that no grease or scale has accumulated on the inside of the dishwasher. If you discover any deposits: Clean the interior of the dishwasher thoroughly with a dishwasher detergent solution. Dishwasher salt Check the LOW SALT indicator "G". Top up with salt if required.

H Rinse-aid Check the LOW RINSE AID indicator "H", on the front panel. Top up with rinse-aid, if required. G Filters The filters "8" and "9" prevent larger particles of food in the water from reaching the pump. These particles can occasionally block the filters. When the appliance has finished washing, check the filters for particles of food and, if required, clean.

After undoing the coarse micro-filter "8", the filter unit "9" can be removed. Remove any particles of food and rinse the filters under running water. Insert the filter unit "9" and tighten the coarse micro-filter. 8 9 19 en Spray arms Lime scale and food residue in the wash water can block the nozzles in the spray arms "10" and "11" and the arm mountings. Inspect the nozzles in the spray arms for holes blocked due to food residue.

If necessary, pull the lower arm "11" upwards and lift it off. Unscrew the upper spray arm "10". Clean both spray arms under running water. Refit the spray arms. Ensure that the lower arm has locked into place and the upper one is screwed in tight. Ensure that the power supply is turned off prior to removal and cleaning of any internal parts. 10 11 20 Trouble Shooting Resolving minor problems yourself en Experience has shown that you can resolve most problems that arise during normal daily usage yourself without having to call out a service engineer. Not only does this save costs, but it also means that the appliance is available for use again that much sooner. The following list of common occurrences and their remedies should help you resolve most problems. .

..when the appliance is switched on Appliance does not start up Fault with fuse in mains electricity supply. Plug not inserted in wall socket. Appliance door not closed properly. Programme button has not been pressed. Water tap not turned on. Blocked filter in water intake hose. -The filter is situated in the supply-hose connection. Caution Blocked filter in water intake hose.

The filter is situated in the supply-hose connection. ...with the appliance itself Error display on the time-remaining indicator When the buzzer emits 10 short warning signals every 30 seconds and the time-remaining indicator displays "E1" Have you checked whether: the door is closed properly.

When the buzzer emits 10 short warning signals every 30 seconds and the time-remaining indicator displays "E3" Have you checked whether: The drain hose is too low. 21 en When the buzzer emits 10 short warning signals every 30 seconds and the time-remaining indicator displays "E4" Have you checked whether: The drain hose is creased or kinked. The drain hose is too high. When the buzzer emits 10 short warning signals every 30 seconds and the time-remaining indicator displays "E5" Have you checked whether: The water is turned on and the hose is connected properly. The water supply to the house is on and has sufficient pressure.

The water supply hose is creased or kinked. The filter for the water supply hose is clogged. The drain hose is too low. When the buzzer emits 10 short warning signals every 30 seconds and the time remaining indicator displays "E2" or "E6" contact the nearest authorised service centre. If you carry out all these checks and the appliance still does not function or your appliance has any other error display, power the appliance OFF and wait a few minutes. Then power the dishwasher on and try again. If the dishwasher still does not function and/or the problem persists, contact the nearest authorised service centre and provide them with the following information: The nature of the problem. The model type number (Mod...

) and the serial number (S/N...), which is shown on the plate on the inner part of the door. Lower spray arm rotates with difficulty. Spray arm is blocked by small items or food residue. Detergent compartment lid cannot be closed Detergent compartment has been overfilled. Mechanism is clogged with remnants of detergent. Remnants of detergent stuck inside dispenser. Compartment was damp when it was filled up with detergent.

Compartment must be dry before detergent is added. 22 en Water remains inside appliance after programme has ended. Blockage or kink in drainage hose. Pump is jammed. Filters are blocked.

The programme is still running. Wait for the programme to end. ...

during washing Unusual amount of foam is created Normal washing up liquid has been poured into the rinse-aid container. @@@@ Jets of water could not reach all parts of the dishes, etc. Too many items in the rack. Items in the rack were touching each other. Not enough detergent was added to dispenser. Selected wash programme was not intensive enough. Rotation of spray arm was obstructed by dishes, etc. Nozzles in spray arm are blocked by food residue.

Filters are blocked. Filters have been incorrectly fitted.

@@ Detergent has insufficient bleaching properties. Use a detergent containing a chemical bleaching agent. White stains are left on crockery, glasses have a milky appearance Not enough detergent was added to dispenser compartment. Amount of rinse-aid was set too low. No salt has been put in appliance (if in a hard water area). Water softener was set too low. Salt container lid is not screwed tight. If you used a phosphate-free detergent, try a detergent containing phosphates and compare results. Dishes, cutlery, etc.



[You're reading an excerpt. Click here to read official HAIER](http://yourpdfguides.com/dref/3244224)

[DW9-TFE3 user guide](http://yourpdfguides.com/dref/3244224)

<http://yourpdfguides.com/dref/3244224>

*have not been dried Selected programme did not include drying function.*

*Amount of rinse-aid was set too low. Items were removed from dishwasher too soon. Glasses have a dull appearance Amount of rinse-aid was set too low. Tea stains or traces of lipstick have not been completely removed. Detergent does not have a sufficient bleaching effect.*

*Washing temperature was set too low. Traces of rust on cutlery Cutlery is not sufficiently rustproof. Salt content in wash water is too high. - Salt container lid is not screwed tight. - Too much salt was spilt while filling container.*

*Glasses become clouded and discoloured; coating cannot be wiped off Unsuitable detergent was used. Glasses are not dishwasher-proof. Smears left behind on glasses and cutlery; glasses have acquired a metallic appearance Amount of rinse-aid set too high. 24 Technical data Width Depth Height Capacity Mains water pressure Power voltage Maximum current intensity Total absorbed power 45 cm 60 cm 82 cm 9 standard place settings en 0.03-1.0MPa 220-240V~50Hz 10A 1950W Important information Notes on waste disposal Old appliances still have some residual value. An environment-friendly method of disposal will ensure that valuable raw materials can be recovered and used again. When an appliance has reached the end of its working life, unplug it from the mains. Cut through the mains cable and dispose of it together with the plug. Destroy the door locking mechanism.*

*This will ensure that children cannot become locked inside and are not exposed to the risk of suffocation. Your new appliance was protected by suitable packaging while it was on its way to you. Please dispose of all packaging materials properly and ensure that they are kept out of children's reach. There is a risk of suffocation from the cardboard boxes and the plastic wrapping. Up-to -date information concerning options for disposal can be obtained from your retailer or local council. 25 en General information Measures must be taken to ensure that built-under and built-in units that are later used as freestanding appliances cannot topple over. This can be achieved by bolting the dishwasher to the wall or fitting it under a continuous work surface which is screwed to the adjacent cupboards. Information on conformity tests implemented in compliance with EN 50242 Appliance loaded in accordance with standard specifications.*

*Example of loaded dishwasher: See Fig 1 and 2 Capacity: 9 place settings Programme: Light Wash Rinse-aid setting: 5 Detergent: 5g+25g Fig.1 Fig. 2 Height-adjustable top-basket must be inserted in the uppermost position. If the conformity tests do not comply fully with EN 50242, e.g., degree of soiling, type of dishes and cutlery, etc., contact the appliance manufacturer before starting the test.*

*26 en Disposal The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. .*



[You're reading an excerpt. Click here to read official HAIER](#)

[DW9-TFE3 user guide](#)

<http://yourpdfguides.com/dref/3244224>