



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER ESA410K-L. You'll find the answers to all your questions on the HAIER ESA410K-L in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER ESA410K-L
User guide HAIER ESA410K-L
Operating instructions HAIER ESA410K-L
Instructions for use HAIER ESA410K-L
Instruction manual HAIER ESA410K-L



Haier

ROOMAIR CONDITIONER
Use & Care Guide

ACONDICIONADOR DE AIRE PARA HABITACIÓN
Manual de Uso y Cuidado

CLIMATISEUR DE PIÈCE
Guide d'utilisation et d'entretien



Model:
ESA406K ESA406K-L ESA406K-T
ESA408K ESA408K-L ESA408K-T
ESA410K ESA410K-L ESA410K-T
ESA412K ESA412K-L ESA410K-E

For questions about features, operation/performance, parts,
accessories or service call: 1-877-337-3639

Si tiene preguntas respecto a las características, funcionamiento,
rendimiento, partes, accesorios o servicio técnico,
llame al: 1-877-337-3639

Au Canada, pour assistance, installation ou service,
composez le : 1-877-337-3639

No.0010529626



[You're reading an excerpt. Click here to read official HAIER
ESA410K-L user guide](http://yourpdfguides.com/dref/3624599)
<http://yourpdfguides.com/dref/3624599>

Manual abstract:

This is the safety alert symbol. @@@@ You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. **IMPORTANT SAFETY INSTRUCTIONS WARNING:** To reduce the risk of fire, electrical shock or injury when using your air conditioner, follow these basic precautions: plug into a grounded 3 prong outlet. Do not remove ground prong. Use two or more people to move and install air conditioner. Read and follow the instructions provided with any tools listed here. Check that all parts are included in parts package.

Make sure you have everything necessary for correct installation.

The location should provide: Grounded electrical outlet within 4 ft (122 cm) of where the power cord exits the air conditioner. (For model ESA406K,ESA408K,ESA406K-L,ESA408K-L, ESA406K-T,ESA408K-T electrical outlet can be grounded within 6 ft (183 cm)) **NOTE:** Do not use an extension cord. Free movement of air in room to be cooled. Adequate wall support for weight of air conditioner. Air must be able to pass freely through the cabinet louvers.

The electrical ratings for your air conditioner are listed on the model and serial number label. The model and serial number label is located either on the side or back of the air conditioner cabinet or behind the front grille. specific electrical requirements are listed in the chart below. Follow the requirements for the type of plug on the power supply cord. This air conditioner must be grounded.

This air conditioner is equipped with a power supply cord having a 3 prong grounding plug. The cord must be plugged into a mating, grounded 3 prong outlet, grounded in accordance with all local codes and ordinances. If a mating outlet is not available, it is the customer's responsibility to have a properly grounded 3 prong outlet installed by a qualified electrical installer. **NOTE:** Your air conditioner's device may differ from the one shown. This room air conditioner is equipped with a power supply cord required by UL. This power supply cord contains state-of-the-art electronics that sense current leakage.

Plug power supply cord into a grounded 3 prong outlet. 2. Press RESET (on some devices, a green light will turn on). 3.

Press TEST (listen for click; Reset button will trip, and on some devices, a green light will turn off). 4. Press and release RESET (listen for click; Reset button will latch, and on some devices, a green light will turn on). The power supply cord is ready for operation. **NOTES:** The Reset button must be pushed in for proper operation. The power supply cord must be replaced if it fails to trip when the test button is pressed or fails to reset. Do not use the power supply cord as an off/on switch. A damaged power supply cord must be replaced with a new power supply cord obtained from the product manufacturer and must not be repaired. Remove tape and glue residue from surfaces before turning on the air conditioner. Rub a small amount of liquid dish soap over the adhesive with your fingers.

These products can damage the surface of your air conditioner. ESA406K-T,ESA408K-T three 13/32" screws is needed to attach the top channel to the air conditioner. **NOTE:** Your model may differ from the one shown. Slide the side curtain frame into the top channel on the top of the air conditioner and the track on the bottom of the air conditioner. Slide the side curtain frame as close to the air conditioner as necessary to lock the side curtain to the frame.

Mark the center line on the inside windowsill. Slide the side curtain down the track until the curtain is aligned with the top and bottom of the air conditioner cabinet. Be sure your air conditioner does not fall out of the opening during installation or removal. The place where the power cord exits the air conditioner should be no more than 4 ft (122 cm) from a grounded outlet. (For model ESA406K,ESA408K,ESA406K-L,ESA408K-L, ESA406K-T,ESA408K-T electrical outlet can be grounded within 6 ft (183 cm)) Do not block the louvers in the front panel.

Do not block the louvers on the outside of the air conditioner. Lower the window sash behind the top channel to hold the cabinet in place **NOTE:** Your model may differ from the one shown. Use 1/8" drill bit to drill a starter hole through the holes in the side bracket and windowsill. Window sash behind top channel C. Bottom channel in behind windowsill Pull the left-hand curtain out until it fits into the window channel. 2. Use a 1/8" drill bit to drill a starter hole through the top hole in the side curtain and into the window sash. 3. Insert one of the 31/32" screws through the top hole of the lefthand curtain and into the window sash. Use a 1/8" drill bit to drill a starter hole through the bottom hole in the side curtain and into the window frame.

Insert one of the 31/32" screws through the bottom hole of the left-hand curtain and into the window frame. Loosen the screw on the right-hand side of the air conditioner cabinet near the bottom. Insert the foam seal behind the top of the lower window sash and against the glass of the upper window. Use a 1/8" drill bit to drill a starter hole through the hole in the window lock bracket and into the upper window. 3. Attach the window lock bracket to the upper window with one 31/32" screw to secure the window in place. Operating your air conditioner properly helps you to obtain the best possible results. This section explains proper air conditioner operation. **IMPORTANT:** If you turn off the air conditioner, wait at least 3 minutes before turning it back on. This keeps the air conditioner from blowing a fuse or tripping a circuit breaker.

Do not try to operate your air conditioner in the Cool mode when outside temperature is below 61°F (16°C). The inside evaporator coil will freeze up, and the air conditioner will not operate properly. Press MODE until you see the indicator light glow for the desired setting. The display shows the current room temperature. Energy Saver--Fan runs only when cooling is needed.

press SPEED to select High , Med or Low fan speed. Because the fan does not circulate the room air continuously, less energy is used, but the room air is not circulated as often. Dehum mode should not be used to cool the room. In Dehum mode, Please do not operate the speed button. Remove the clear plastic film from the control panel.

The Power indicator light will turn on. After the air conditioner is turned on for the first time, the display will show the current room temperature and the fan is set to Low speed. @@@@After 5 seconds, Timer OFF indicator light will remain on. @@@@Timer On indicator light will remain on. @@ 6. @@ 7. Timer On indicator light will remain on. @@@@**NOTE:** Air conditioner can be either on or off. @@ Press the TEMP/TIME down arrow button to lower the temperature.



[You're reading an excerpt. Click here to read official HAIER
ESA410K-L user guide
http://yourpdfguides.com/dref/3624599](http://yourpdfguides.com/dref/3624599)

@@@NOTE: Dots are Braille text for sight Impaired. @@Press the TEMP/TIME down arrow button to lower the temperature. @@@@After 5 seconds, Timer OFF indicator light on the air conditioner control panel will remain on. To set Timer to turn on the air conditioner, keeping previous settings: @@ 4. After 5 seconds, Timer On indicator light on the air conditioner control panel will remain on. @@@Timer On indicator light on the air conditioner control panel will remain on. Vent:The Fresh air vent allows the air conditioner to recirculate inside air,draw fresh air into the room and exhaust stale air to the outside. NOTE: Air conditioner can be either on or off. @@@@ 3. @@@@When your air conditioner is operating normally, you may hear sounds such as: Droplets of water hitting the condenser, causing a pinging or clicking sound.

Vibrations or noise due to poor wall or window construction. Your new air conditioner is designed to give you many years of dependable service. This section tells you how to clean and care for your air conditioner properly. A clean filter helps remove dust, lint, and other particles from the air and is important for best cooling and operating efficiency. Check the filter every 2 weeks to see whether it needs cleaning.

NOTE: Do not operate the air conditioner without the filter in place. Remove the air filter by opening the front panel and removing the air filter. Use a vacuum cleaner to clean air filter. If the air filter is very dirty, wash it in warm water with a mild detergent. Do not wash the air filter in the dishwasher or use any chemical cleaners.

Air dry the air filter completely before replacing to ensure maximum efficiency. Close the front panel. Your air conditioner needs annual maintenance to help ensure steady, top performance throughout the year. Clean the front panel with a soft, . When calling, please know the purchase date and the complete model and serial number of your appliance. This information will help us to better respond to your request. You can find this information on the model and serial number label. See "Electrical Requirements" for the location of the model and serial number label. Please record the model and serial number information below. Also, record the purchase date of your appliance and the store's name, address, and telephone number.

Model Number _____ Serial Number _____ Purchase Date _____ Store Name _____ Store Address _____ Store Phone _____

Keep this book and the sales slip together for future reference. @@@@Com or call Haier America toll free 1-877-337-3639. Manufacturer-authorized service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. If you need further assistance, you can write with any questions or concerns to: Haier America 1356 Broadway New York, NY 10018 Please include a daytime phone number in your correspondence. If you need further assistance, you can write with any questions or concerns to: Haier America 1356 Broadway New York, NY 10018 Please include a daytime phone number in your correspondence. Manufacturer-authorized service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the Canada. This warranty covers all defects in workmanship or material for the mechanical and electrical parts (including labor costs) contained in this product for a period of 12 months from the date of purchase. for commercial or rental application , the warranty is 90 days. You must keep and be able to provide your original sales receipt as proof of the date of purchase. The sealed system and compressor (hermetic compressor, condenser and evaporator) contained in this product is for a period of 5 years from the date of purchase (excluding labor costs after the initial 12-month period).

In commercial or rental use, the additional limited compressor warranty is for 1 year and 9 months (excluding labor costs after the initial 90-day period). You must keep and be able to provide your original sales receipt as proof of the date of purchase. Haier America will repair or replace any mechanical, electrical part or the compressor, which proves defective in normal household use for a period of 12 months. Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance or incorrect current or voltage. Damage from other than household use.

Damages from service by other than an authorized dealer or service center. decorative trims or replaceable light bulbs. Labor, service, transportation and shipping charges for the removal of defective parts and installation of replacement parts beyond the initial 12-month period. 9. Credit or refund for products over 30 days past date of purchase, or for any loss or injury caused by the product or defects to the product including but not limited to incidental or consequential damages.

10. Food loss for food spoiled as a direct result of mechanical failure of a product or of any delay in providing service, repair or replacement. The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages. Some states do not allow the exclusion of incidental or consequential damages, so this limitation may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty covers units within the continental United States, Canada and Puerto Rico. .



[You're reading an excerpt. Click here to read official HAIER ESA410K-L user guide](http://yourpdfguides.com/dref/3624599)
<http://yourpdfguides.com/dref/3624599>