



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HBF 1055 TVE. You'll find the answers to all your questions on the HAIER HBF 1055 TVE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER HBF 1055 TVE**  
**User guide HAIER HBF 1055 TVE**  
**Operating instructions HAIER HBF 1055 TVE**  
**Instructions for use HAIER HBF 1055 TVE**  
**Instruction manual HAIER HBF 1055 TVE**

**Front Load Clothes Washer**

**Lavadora de Ropa Carga Frontal**



User Manual  
Model # HBF1055TVE  
Guide de l'Utilisateur  
Modèle # HBF1055TVE  
Manual del Usuario  
Para Modelo de # HBF1055TVE

**Haier.**

Quality · Innovation · Style



[You're reading an excerpt. Click here to read official HAIER HBF 1055 TVE user guide](http://yourpdfguides.com/dref/3981421)  
<http://yourpdfguides.com/dref/3981421>

**Manual abstract:**

Read all instructions before using the appliance. 2. Use this appliance only for its intended purpose as described in this use and care guide. 3. This appliance must be properly installed in accordance with the installation instructions (see pages 7-11). 4. Replace immediately worn power cords and loose plugs/power outlets. 5. Before the appliance is removed from service or discarded, remove the door. 6.

Do not operate your appliance in the presence of explosive fumes. 7. Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode. 8. Do not add gasoline, dry-cleaning solvents or other flammables or explosive substances to the washer.

These substances give off vapors that could ignite or explode. 9. Do not reach into the appliance if the tub or agitator is moving. 10. Do not tamper with controls.

11. To reduce risk of injury do not allow children to play in or on the appliance. Close supervision of children is necessary when the appliance is used near children. 12. Do not install or store this appliance where it will be exposed to the weather. 13. Hydrogen gas may be produced if the water heater has not been used in more than 2 weeks. This could be explosive and can explode under certain circumstances. @@ this will let the trapped hydrogen escape. @@

14.

@@This appliance must be grounded. @@This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Warning Improper connections of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Risk of child entrapment. Before you throw away your old appliance, take off the door so that children may not easily get trapped inside. Thank you for purchasing our Haier product. This easy-to-use manual will guide you in getting the best use of your washer.

Remember to record the model and serial number.

They are on a label in back of the washer. Model number Serial number Date of purchase Staple your receipt to your manual. You will need it to obtain warranty service. This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounded plug. The plug must be inserted into an outlet that is properly installed and grounded. Improper use of the plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. This appliance must be plugged into at least 15 AMP 120 VOLT, 60 HZ GROUNDED OUTLET.

Note: Where a standard two-prong outlet is encountered, it is the personal responsibility and obligation of the consumer to have it replaced with a properly grounded three-prong outlet. Extension Cords: We do not recommend that you use an extension cord. Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored re-plug power cord to AC outlet. If outage is for a prolonged period, clean washer before using it again. You will need to have the following tools to help you in the installation of your washer: · Inspect and remove any remains of packing, tape or printed materials before using the washer. Transportation Bolts must be removed before using the machine. Once removed, save them so when moving you can reinstall to protect the machine from damage during shipping. Water inlet hoses and other accessories are packed and placed in the drum.

Upon opening of the package, water drops may be seen on the plastic bag and the porthole. This is a normal phenomenon resulting from water tests in the factory. Remove three transportation bolts as shown in figure 2A. The bolts protect the appliance from shock during transportation. The steps below should be followed before using the appliance: 1. remove the back plate of the washing machine. To remove this you must remove three screws holding the panel. 2.

Remove the three bolts from the rear of the washing machine. Then remove the rubber hose which are behind the transportation bolts inside the unit.

Fill the holes left by the bolts with plastic plugs. (Attention: The bolts and rubber hose should be kept in a safe place for later use. Leveling the washing machine: There are adjustable feet under the bottom of the washing machine. Before use, the washing machine should be adjusted, as shown in figure 3, so that it is level. Leveling legs can be adjusted by turning them counterclockwise to raise your washer or clockwise to lower your washer.

Connect the straight coupling of the inlet hose to the water tap and make sure to tighten it. Install the pressure regulator to each inlet valves of the unit. Make sure the flat rubber washer is placed in the pressure regulator. Please be sure that the COLD inlet hose is connected with the valve for cold water (marked with "C"). Please be sure that the HOT inlet hose is connected with the valve for hot water (marked with "H").

A flat rubber washer must be present inside each end of the inlet hoses. The height of the pipe for the water drainage hose should be between 2'6" to 3'3". The water drain hose must be securely placed on the clip on the back of the washing machine. Use the water drainage support (gooseneck) supplied as an accessory for proper installation. If the water drain hose needs to be extended, it should not be extended more than 8'2". Make sure local city codes are followed. Note: "Y Adapter" shown in below figure is only for illustration. It is not provided in the box as an accessory. If you need to utilize this type of hookup, you can purchase a "Y Adapter" from your nearest hardware store. Warning - To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

Washing Program To set the desired wash program, turn the knob to "0" first. this will reset the timer. Then select a program from the list on the detergent dispenser. @@The maximum speed will vary when a different program is selected. This option could be used for heavy fabrics or special care items.

@@@During a wash cycle, press this button to pause operation. Door Light The light will illuminate when the door is locked. @@The wash program ends and the washing machine stops operation. @@"o" Means softer can be added when necessary. @@@@Do not use liquid detergent in this cycle.



[You're reading an excerpt. Click here to read official HAIER HBF](http://yourpdfguides.com/dref/3981421)

[1055 TVE user guide](http://yourpdfguides.com/dref/3981421)

<http://yourpdfguides.com/dref/3981421>

@@Here water will be hot during the process to clean clothes. @@@@ this cycle is approximately 96 minutes. @@ this cycle is approximately 90 minutes. @@@@ this cycle is approximately 80 minutes. @@@@ this cycle is approximately 70 minutes. @@@@ total time for this cycle is approximately 50 minutes long. @@ this cycle is approximately 36 minutes long. @@Separate heavy clothes from light clothes. Carefully check all pockets and cuffs for small items. They can easily slide into the tub and damage the tub.

Do not overload your washer. Close the door properly after loading clothes. You will see that there are three compartments. Do not exceed the level in the compartment to avoid overflow. @@ Do not use powder form of softener into dispenser, or it will clog up the dispenser. This dispenser is only designed for liquid form. When pre-wash cycle is selected do not use liquid detergent. low-Sudsing detergent is recommended for front load style washers. This type of detergent prevents damage to your washing machine, which may be caused by excess amount of suds entering the condensing compartment. Note: You can use less or more detergent depending on the size of the load, water type in your area whether it is soft or hard and whether the clothes are heavily soiled or lightly soiled.

To set the desired wash program, turn the knob to "0" first. this will reset the timer. Then select a program from the list on the detergent dispenser. now press the "Pause/Start" button to start operation. Caution: If you want to choose another program, first turn project knob to "0", then turn off the power. Wait 2-3 minutes after the washing process is finished. Only then can the door be opened. Collect clothes for one full wash load. Choose a proper spin speed. 6. Do not use more detergent than required. 7. Softening agent makes clothes feel softer and easier to iron. Power-off memory function: This machine has a power-off memory function. In case of abrupt power failure or if the power must be cut off during a program cycle, the present settings will be saved, and operation will resume when the power is switched on again.

The following sounds are normally heard during the operation of the washer: Tumbling sounds: This is normal as the heavy wet clothes in the washer are continuously being tossed around. Air rushing noise: This happens when the washer tub spins at a very high RPM. Wash and rinse cycles going on and off will also make clicking sounds. Warning: Always unplug your appliance to avoid electric shock before cleaning. Ignoring this warning may result in death or injury.

Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage. To avoid any . Spots or stains on your clothes: This is due to incorrect use of fabric softener. You may need to read proper instructions on the detergent container and follow proper directions for using the softener. Clothes are grayed or yellowed: This is due to not pouring enough detergent for large loads. You may have to add more detergent to the load. Clothes are ripped & have holes/excessive wear & tear: This is due to sharp objects such as pins and belt buckles left in pockets. You will need to remove small loose sharp objects. fasten belts , zippers , metal snaps etc. Trouble messages: Judge the malfunctions from the door lock light.

Error 1: The door lock light does not illuminate. Error 2: The door lock light flashes 2 times and stops for 4 seconds repeatedly Cause: Drainage error, water not emptied within 4 minutes. Error 3: The door lock light flashes 5 times and stops for 4 seconds repeatedly. cause: Water level not met in 8 minutes. Correction: Make sure that tap is turned on, and water pressure is normal. if problem still exists , please contact an authorized service personnel. Error 4: The door lock light flashes 6 times and stops for 4 seconds repeatedly. The door lock light flashes 7 times and stops for 4 seconds repeatedly. The door lock light flashes 8 times and stops for 4 seconds repeatedly. In Home Service Full ONE Year Warranty For 12 months from the date of original retail purchase, Haier will repair or replace any part free of charge including labor that fails due to a defect in materials or workmanship.

Limited Warranty After one year from the original retail purchase date, Haier will provide a part at no cost, as indicated below, to replace said part as a result of a defect in materials or workmanship. Haier is solely responsible for the cost of the part. All other costs such as labor, trip charge, etc are the responsibility of the owner. Second through Fifth Year Haier will provide the cabinet assembly should the cabinet rust through. Second through Tenth Year Haier will provide the inner stainless steel wash tub.

NOTE: This warranty commences on the date the item was purchased and the original purchase receipt must be presented to the authorized service representative before warranty repairs are rendered. Exceptions: Commercial or Rental Use Warranty 90 days labor from date of original purchase 90 days parts from date of original purchase No other warranty applies For Warranty Service Contact your nearest authorized service center. all service must be performed by a Haier authorized service center. For the name and telephone number of the nearest authorized service center please call 1-877337-3639.

Before calling please have available the following information: Model number and serial number of your appliance.

The name and address of the dealer you purchased the unit from and the date of purchase. This warranty covers appliances within the continental United States, Puerto Rico and Canada. What is not covered by this warranty: Replacement or repair of household fuses, circuit breakers, wiring or plumbing. A product whose original serial number has been removed or altered. @@@@ damage from incorrect electrical current , voltage or supply. @@Damage from other than normal household use. any transportation and shipping charges. @@This warranty does not cover incidental or consequential damages, so the above limitations may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state.

No instale y no use este aparato en una area donde la temperatura de ambiente es más bajo que el punto de congelación. If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639. .



[You're reading an excerpt. Click here to read official HAIER HBF 1055 TVE user guide](http://yourpdfguides.com/dref/3981421)  
<http://yourpdfguides.com/dref/3981421>