




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HDY6-1C. You'll find the answers to all your questions on the HAIER HDY6-1C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER HDY6-1C**  
**User guide HAIER HDY6-1C**  
**Operating instructions HAIER HDY6-1C**  
**Instructions for use HAIER HDY6-1C**  
**Instruction manual HAIER HDY6-1C**

**Front Load Electric Dryer**  
**Secheuse Electrique a Chargement Frontal**  
**Secadora eléctrica con carga frontal**

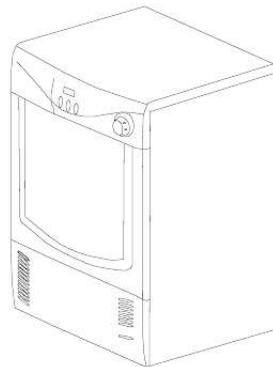

User Manual  
Model # HDY6-1 / HDY6-1C  
Guide de l'Utilisateur  
Modèle # HDY6-1 / HDY6-1C  
Manual del Usuario  
Para Modelo de # HDY6-1 / HDY6-1C

**Haier.**

Quality · Innovation · Style



[You're reading an excerpt. Click here to read official HAIER HDY6-1C user guide](http://yourpdfguides.com/dref/3981445)  
<http://yourpdfguides.com/dref/3981445>

### Manual abstract:

Read all instructions before using the appliance. @Do not allow children to play on or in the appliance. @@@Do not reach into the appliance if the drum is moving. Do not install or store this appliance where it will be exposed to water and/or to the weather. Do not tamper with controls. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have skills to carry out. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product. Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials. 11. Clean lint screen before or after each load.

12. Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust and dirt. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. If material has been used with any flammable liquids or solids it should not be used in the dryer until all traces of the flammable liquids and its fumes have been removed.

16. This dryer must be properly installed in accordance with the installation instructions before it is used. Proper grounding must be ensured to reduce the risk of electric shock and fire. Check with a qualified electrician or service personnel if you are in doubt as to whether the dryer is properly grounded. 18.

Use the dryer only for its intended purpose, drying clothes. 19. Always disconnect dryer from electrical supply before attempting any service. Disconnect power cord by grasping the plug, not the cord. 20. Replace worn power cords and/or loose plugs. 21. To reduce the risk of electric shock or fire, do not use extension cords or adapters to connect dryer to electrical power source. Risk of child entrapment. Before you throw away your old dryer, take off the door so that children may not easily get trapped inside.

Thank you for using our Haier product. This easy-to-use manual will guide you in getting the best use of your dryer. Remember to record the model and serial number. They are on a label in back of the dryer. Staple your receipt to your manual. Model number Serial number Date of purchase You will need it to obtain warranty service. As dry cleaning solvents, gasoline, vegetable and cooking oils are highly hazardous materials, items soaked in or spotted with such should not be used in the dryer. Items may still contain a substantial amount of the hazardous material after being washed. When such items are exposed to heat they could ignite. As clothes are stacked and piled up in the dryer the heat cannot escape.

Due to this, items become hot enough to possibly ignite. Washing in hot water with extra detergent would reduce but not eliminate the risk of fire. Select a suitable location for the dryer on a hard, even surface away from direct sunlight or heat source, e. Any floor unevenness should be corrected with the leveling legs located on the bottom of the dryer. This includes the foam base and all adhesive tape holding the dryer accessories inside and outside.

2. Inspect and remove any remains of packaging, tape or printed materials before using the dryer. To ensure that the dryer is operating efficiently, attention must be paid to the following: Â· the dryer must be horizontally installed. Its bottom is equipped with adjustable legs. Adjust these 4 legs to level before operation.

â· Check whether there is any damage to the dryer during transportation. Any damaged dryer must not be installed. â· The dryer must be kept away from flammable or detonable substances. â· The surrounding environment must be dry and ventilated. â· Do not install the dryer on any carpet. â· To allow the dryer to perform better, the ambient temperature should not be lower than 50Â°C or higher than 95Â°F. It is recommended to extract the air outdoors if there is a venting hole where the dryer is installed. please use the attached extension hose , connecting sleeve and hose clip. Before connecting the machine to the power supply, please connect the small-diameter end of the connecting sleeve to the air exit, and large diameter end of the sleeve to the air exit, and large diameter end of the sleeve to the extension hose, and tighten it up with a flat screwdriver. Stretch the extension hose to join it with the venting hole (if no venting hole is available, just stretch the extension hose out through the window).

Keep the hose level and straight. Put into the venting hole (or out through the window) To reverse the door opening of your dryer, follow the below procedures. a. Using a Phillips head screwdriver, remove the 4 screws that fix the door hinge to the cabinet. This will un-attach the door from the cabinet. Remove the 2 hinge covers from the opposite side of the door and in its place attach the just-removed door hinges. Unscrew the 2 screws that attach the door latch to the door, and fix it on the opposite side after removing the door latch cover. Using a putty knife, remove the 4 hinge screw covers. In an area exposed to dripping water or outside weather conditions. â· In an area where it will come in contact with curtains, drapes, or anything that will obstruct the flow of combustion and ventilation air.

Floor must be solid with a maximum slope of 1inch (2. A dryer installed in a bedroom, bathroom, recess or closet must be exhausted outdoors. â· Your dryer needs space around it for proper ventilation. 2 square cm) of opening, equally divided at the top and bottom of the door, is required. Air openings are required to be unobstructed when a door is installed.

Dryer must be exhausted outside (outdoors, not beneath the mobile home) using metal ducting that will not support combustion. If dryer is exhausted through the floor and area beneath the mobile home is enclosed, the exhaust system must terminate outside the enclosure with the termination securely fastened to the mobile home structure. Installation must conform to current Manufactured Home Construction & Safety Standard (which is a Federal Regulation Title 24 CFR-Part 32-80) or when such standard is not applicable, with American National Standard for Mobile Homes. The following are specific requirements for proper and safe operation of your dryer. Failure to follow these instructions can create excessive drying times and fire hazards.

Excessive lint can build up inside exhaust system and create a fire hazard and restrict air flow. restricted air flow will increase dryer times. If your present system is made up of plastic duct or metal foil duct, replace it with a rigid or flexible metal duct. Ensure present duct is free of any lint prior to installing dryer duct. 2. If the dryer is not exhausted outdoors, some fine lint will be expelled into the laundry area.



[You're reading an excerpt. Click here to read official HAIER](http://yourpdfguides.com/dref/3981445)

[HDY6-1C user guide](http://yourpdfguides.com/dref/3981445)

<http://yourpdfguides.com/dref/3981445>

An accumulation of lint in any area of the home can create a health and fire hazard. Do not allow combustible material (for example: clothing, draperies/curtains, paper) to come in contact with exhaust system. The dryer must not be exhausted into a chimney, a wall, a ceiling, or any concealed space of a building which can accumulate lint, resulting in a fire hazard. 4.

Exceeding the length of duct pipe or number of elbows allowed in the "Maximum Length" charts can cause an accumulation of lint in the exhaust system. Plugging the system could create a fire hazard, as well as increase drying times. 5. Do not screen the exhaust ends of the vent system, or use any screws or rivets to assemble the exhaust system. Lint can become caught in the screen, on the screws or rivets, clogging the duct work and creating a fire hazard as well as increasing drying times. Use an approved vent hood to terminate the duct outdoors, and seal all joints with duct tape. All male duct pipe fittings must be installed downstream with the flow of air. Explosion hazard: Do not install the dryer where gasoline or other flammables are kept or stored. Failure to do so can result in death, explosion, fire or burns. When the dryer stops, the dampers automatically close to prevent drafts and the entrance of insects and rodents. to avoid restricting the outlet, maintain a minimum of 12 inches (30.5 cm) clearance between the vent hood and the ground or any other obstruction. The vent flap should be able to move freely. After installation is completed, the following method must be used to determine if the exhaust system is acceptable: 1.

The system back pressure must not be higher than 0.75 inches of water column. If the system back pressure is less than 0.75 inches of water column, the system is acceptable. If the manometer reading is higher than 0.75 inches of water column, the system is too restrictive and the installation is unacceptable.

Although vertical orientation of the exhaust system is acceptable, certain extenuating circumstances could affect the performance of the dryer: 1. Only the rigid metal duct work should be used. 2. Venting vertically through a roof may expose the exhaust system to down drafts causing an increase in vent restriction. 3. Running the exhaust system through an area not insulated may cause condensation and faster accumulation of lint. The exhaust system should be inspected and cleaned a minimum of every 18 months with normal usage. The more the dryer is used, the more often you should check the exhaust system and vent hood for proper operation. @@@@This appliance must be properly grounded. Electrical shock can result if the dryer is not properly grounded.

Follow the instructions in this manual for proper grounding. 2. Do not use an extension cord with this dryer. @@@@Approved strain relief must be installed onto power cord. @ 4. @@@@Green ground screw silver terminal Green neutral ground wire nut tighten nut to these threads Remove the screws securing the terminal block access cover and the strain receptacle can withstand the maximum power load to the dryer. @@@@Note: The average load will fill the drum 1/3 to 1/2 full. @@@@You may have to remove some portion of clothes and dry that separately. Your clothes may be wrinkled and take long time to dry. This may not be an efficient way to dry your clothes.

Dry items of similar fabric, weight and construction in the same load. Separate clothes that shed lint from those that attract lint. If your clothes have buckles, buttons and trim, make sure that they are HEATPROOF. â To prevent snagging and tangling, make sure that you close zippers, fasten hooks, tie strings and sashes. â Check if there are any stains on clothes that may not have been removed during washing.

Sometimes dryer heat may permanently set some stains on clothes. When drying small items, place them in a heatproof mesh bag to prevent from tangling, getting stuck in small drum holes. This is very convenient for easy removal of small items. â Always check that the lint filter is clean and in place properly to collect the lint from clothes. â When drying large items such as blankets, bed sheets, draperies and curtains try to dry 2 to 3 at a time.

â Do not over dry clothes. Turn this knob to choose the drying program you desire. This type of dryer has 15 program options available for you to choose. for description of specific programs, refer to the list of programs on Page 23. At the same time, this knob also serves as a power switch. When it is turned to "OFF" the power supply turns off; when the drying program is selected, the power supply turns on. B - Start / Pause Button After turning on the power, select the drying program you desire. Gently touch this button to start the dryer. Gently touch this button again during the operation of the dryer to pause. C - Low Temp Button Once this function is selected, the corresponding indicator light will be on and the low power heater will operate.

During the operation of a program, the drying temperature will decrease so as to have a better care of the delicate laundry. d - Wrinkle Saver Button The dryer will start in the "Wrinkle Saver" Cycle. Here, after the drying cycle is complete, the dryer's drum will rotate at a set interval to prevent wrinkles from setting in the clothes. To avoid using this feature press the wrinkle saver button before the program starts. Note: During the operation, with the variation of the factors such as the moisture content, the actual remaining time will be automatically adjusted until the preset drying result has been achieved and the program is complete. f - Indicator Light for Drying When this light is on, it indicates that the dryer is drying normally. G - Indicator Light for Air Dry / Cool Down When this light is on, it indicates that the dry cycles in the cold air cycle and will be complete soon. C + D - Composite Button and Child Lock Function

During the operation of a program, you may press and hold down both buttons for 3 seconds to set up the child lock function if necessary. At this time, the display screen shows the remaining time and the lock alternatively, and the control panel will be locked. Press and hold down both buttons for 3 seconds once again and the child lock will release.

Do not put those that cannot be dried by a machine into the dryer to dry them, particularly delicate fabrics. Too high temperatures may cause damage to them. Turning on Power Operating power supply is (220-240)V~60Hz. To save energy and achieve a better drying result, please spin dry the laundry during washing as dry as possible. Place the laundry evenly into the drum after shaking it loose.

Note: Do not put excess laundry into the dryer to avoid damage to the dryer and laundry. Low Temp Setting For delicate laundry that needs special care, choose this function. Once this function is selected, the drying program will operate with a low heating power and the drying temperature will be low too.



[You're reading an excerpt. Click here to read official HAIER HDY6-1C user guide](http://yourpdfguides.com/dref/3981445)  
<http://yourpdfguides.com/dref/3981445>

*Wrinkle Saver Setting You may choose this function to prevent wrinkles from setting in the clothes. Program Completion Before the drying program comes to an end, the dryer will enter in the cold air cycle where the heating will stop.*

*After the program is complete, the display screen will display "End" and a beeping sound will alert you. open the door to remove the laundry. When wrinkle saver function is chosen, if the laundry is not removed in time after the drying program is complete, the dryer will start in the anti-wrinkle protection cycle automatically. In the anti-wrinkle protection cycle, the dryer's drum will run in a set interval to keep your laundry loose. 8. Turn off the Dryer Turn the program knob to the "OFF" position to cut off the power supply and turn off the dryer. The following sounds are normally heard during the operation of the dryer: A· tumbling sounds. This is normal as the heavy wet clothes in the dryer are continuously being tossed around. This happens as the dryer drum spins at very high RPM and the air is rushing through the dryer drum. Keep the lint screen clean and exhaust the dryer properly.*

*â· Sort load batches properly and select proper temperature and cycle settings. â· Avoid overloading, adding wet clothes to a partially dry load, or over drying. â· If you have multiple loads to dry, try to dry one load after another right away to take an advantage of a warm dryer. This way you already have a warm dryer and you save time for drying. â· Do not open door needlessly because it causes warm/hot air to escape which prolongs drying time. â· Use dryer during low humidity because it will be a normal drying time due to less moisture in the air, rather than during high humidity days where the air is very moist. Cleaning the Surface Wipe off the dust from the body of the dryer and the surface of the main control panel using a soft cleaning cloth. Remember not to use any organic solvent or corrosive agent in cleaning to avoid damage to the machine. 2. Cleaning the Lint Filter To ensure good ventilation during drying, the lint filter must be cleaned once every drying program is complete.*

*open the door to remove the lint filter from the machine. Clean off the lint on the filter and handle using a wet towel. After cleaning, put the filter back in place. 3. Cleaning the Drum After the dryer has operated for some time, fabric caring agents or calcium contained in the water will form an almost invisible segregation layer on the inside of the drum.*

*This makes the dryer not able to reliably and accurately identify the dryness of the laundry. @@Check if the electrical wall receptacle is of proper voltage. @@@@Heavy clothes may need to be separated from regular clothes. @@ Dryer making noise when drying: Coins, loose change, buttons and other heavy objects could make noise. In case of an improper operation or trouble with the machine when it operates, the code corresponding to the problem will be displayed on the display screen: Code E1 E2 Category Prompt Code Trouble Code Cause The door is not closed tightly There is no change in the temperatures of the laundry in the tub The laundry is not dried The thermal sensor open-circuited or short circuited Solutions Shut the door tightly and restart the machine Contact a professional serviceman Note: All information except for E1 requires turning off the power and then restarting the machine to cancel the code.*

*Full ONE Year In-Home Warranty For 12 months from the date of original retail purchase, Haier will repair or replace any part free of charge including labor that fails due to a defect in materials or workmanship. This warranty covers appliances within the continental United States, Puerto Rico and Canada.*

*What is not covered by this warranty: Replacement or repair of household fuses, circuit breakers, wiring or plumbing A product whose original serial number has been removed or altered Premium service charges not specifically identified as normal, such as outside normal service area or hours. Damage to clothing*

*Damage incurred in shipping Damage caused by improper installation or maintenance Damage from misuse, abuse accident, fire, flood, or acts of nature Damage from service other than an authorized Haier dealer or service center Damage from incorrect electrical current, voltage or supply Damage resulting from any product modification, alteration or adjustment not authorized by Haier Adjustment of consumer operated controls as identified in the owners manual*

*Hoses, knobs, lint trays and all attachments, accessories and disposable parts Labor, service transportation, and shipping charges for the removal and replacement of defective parts beyond the initial 12-month period Damage from other than normal household use Any transportation and shipping charges.*

*THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages, so the above limitations may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. After one year from the original retail purchase date, Haier will provide a part at no cost, as indicated below, to replace said part as a result of a defect in materials or workmanship.*

*Haier is responsible solely for the cost of the part. All other costs such as labor, trip charge, etc are the responsibility of the owner. Third through Tenth Year*

*Haier will provide the cabinet assembly should the cabinet rust through. NOTE: This warranty commences on the date the item was purchased and the original purchase receipt must be presented to the authorized service representative before warranty repairs are rendered. Exceptions: Commercial or Rental*

*Use Warranty 90 days labor from date of original purchase. excludes in-home trip charge. 90 days parts from date of original purchase. For the name and telephone number of the nearest authorized service center please call 1-877-337-3639. Before calling please have available the following information: Model number and serial number of your appliance (found on the rear of the unit on the upper left hand side). The name and address of the dealer you purchased the unit from and the date of purchase.*

*If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639. .*



[You're reading an excerpt. Click here to read official HAIER](#)

[HDY6-1C user guide](#)

<http://yourpdfguides.com/dref/3981445>