



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HLP21N. You'll find the answers to all your questions on the HAIER HLP21N in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HLP21N
User guide HAIER HLP21N
Operating instructions HAIER HLP21N
Instructions for use HAIER HLP21N
Instruction manual HAIER HLP21N

**Space-Saving Portable Compact
Electronic 1 cubic Ft.
Top Load Washer**

**Laveuse électronique portable
compacte à chargement par le
haut 1 p.i³ /28 litres**

**Lavadora electrónica con carga
superior, compacta y portátil
para el ahorro de espacio
de 1 pie cúbico**

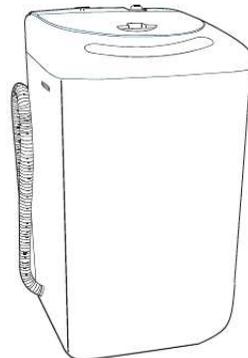

User Manual
HLP21N

Guide de l'Utilisateur
HLP21N

Manual del Usuario Modelo
HLP21N

Haier

Quality • Innovation • Style



[You're reading an excerpt. Click here to read official HAIER HLP21N user guide](http://yourpdfguides.com/dref/3981451)

<http://yourpdfguides.com/dref/3981451>

Manual abstract:

@@ Risk of child entrapment. @@Thank you for purchasing our Haier product. @@Remember to record the model and serial number. They are on a label in back of the washer. Model number Serial number Date of purchase Staple your receipt to your manual. You will need it to obtain warranty service.

Warning ⚠ To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following: 1. Read all instructions before using the appliance. Use this appliance only for its intended purpose as described in this use and care guide. Use only detergents or softeners as recommended for use in this manual and keep them out of the reach of children.

This appliance must be properly installed in accordance with the installation instructions before it is used. Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet. Replace immediately any worn power cords, loose plugs and power outlets.

Unplug your appliance before cleaning or before making any repairs.

If your old appliance is not being used, we recommend that you remove the door. this will reduce the possibility of danger to children. Do not operate your appliance in the presence of explosive fumes. Do not use this appliance to wash clothes that have been soaked, spotted or washed in gasoline, dry cleaning solvents or any other explosive or flammable substances that may ignite and explode. 11.

Clothes or rags used to clean flammable or explosive materials should not be washed in this appliance until all traces of this material have been removed. 12. Do not add or mix any flammable or explosive substances to the wash. 13. Do not try to remove clothes while the tub is moving. Allow it to come to a complete stop before reaching in. 14. The appliance's loading door must be closed when the tub is spinning. 15. Do not operate your appliance when parts are missing or broken.

16. Do not use this appliance for commercial uses. 17. Do not operate this appliance unless all enclosure panels are properly in place. 18. Do not tamper with controls. 19. To reduce the risk of injury, do not allow children to play in or on the appliance. Close supervision of children is necessary when the appliance is used near children. This appliance must be connected to a proper electrical outlet with the correct electrical supply.

21. Proper grounding must be ensured to reduce the risk of shock and fire. **DO NOT CUT OR REMOVE THE GROUNDING PLUG.** If you do not have a three-prong electric receptacle outlet in the wall, have a certified electrician install the proper receptacle. Hydrogen gas may be produced if the water heater has not been used in more than 2 weeks.

this may be explosive under certain circumstances. If this is the case turn on all the hot faucets and let the hot water run for a few minutes before using this appliance. this will let the trapped hydrogen escape. Avoid accidents during this process by refraining from turning ON any electrical appliances, smoking, lighting a match/lighter, or using flames. 23.

Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-repair instructions, which you understand and have the skill to carry out. Note: If for any reason this product requires service, we strongly recommend that a certified technician perform the service. To reduce the risk of electric shock or fire, do not use extension cords or adapters to connect the unit to an electrical power source. You will need to use the following tools when installing your washer: This appliance must be grounded. It is equipped with a 3-wire cord having a grounded plug. The plug must be plugged into an outlet which is properly installed and grounded. warning! Improper use of the grounded wire can result in the risk of electric shock. consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug. Avoid the use of an extension cord because it may overheat and cause a risk of fire.

However, if it is necessary to use an extension cord: A. Use only 3-wire extension cord with 3-blade grounding plug. b. The marked rating of the extension cord must be equal to or greater than the rating of this appliance. c. It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on children or tripped over. Do not remove any prong from the power cord. Do not, under any circumstances, cut, remove, or bypass the grounding prong. Power supply cord with 3-prong grounding plug Attempting any maintenance or cleaning: To minimize the possibility of electric shock, unplug this appliance from the power supply or disconnect the dryer at the household distribution panel by removing the fuse or switching off the circuit breaker before attempting any maintenance or cleaning (except the removal and cleaning of the lint filter). Note: Pressing the Power ON/OFF button to an off position or pressing Start / PAUSE button, does NOT disconnect the appliance from the power supply.

This appliance must be plugged into at least a 15 AMP 110-120 VOLT 60 HZ GROUNDED OUTLET. This includes the foam base and all adhesive tape holding the washer accessories inside and outside. Slide out and remove the bottom Styrofoam that is used to protect the washer from shipping damage due to vibrations and shock. 2. Inspect and remove any remaining packing, tape or printed materials before using the washer.

Note: The bottom panel is located between the top foam used for protection and box. Check to make sure that the accessories are present and in good condition. If you find that they are not in good condition or are missing, please contact our customer service department for assistance. Our Toll-Free number is 1-877-337-3639. Power ON/OFF Button Press in the "Power On/Off" button to turn on the power of the washer.

Cycle Button Choose washing cycle Normal - Normal Wash Heavy - Huge and heavy garments Quick Wash - Small wash loads that are slightly soiled 4. Make sure it is near a 120 volt outlet and a water source, like a sink, with a drain. 2. Screw on the bottom plate with the six (6) screws provided. Place drain hose in drain or inside the sink using the Drain Hook. Ensure nothing but clothing is in the washer, then plug power cord into a 15 AMP 110-120 VOLT, 60 HZ GROUNDED OUTLET ONLY. Select "NORMAL" washing using the "CYCLE" button, then press the "START" button. Select a suitable location for the washer on a hard, even surface away from direct sunlight and heat sources (e. Verify the compact washer's measurement with the location you have selected and make sure the washer will fit. ⚠ Make sure you have a grounded 120 volt outlet next to the area of the washer.

⚠ Any floor unevenness should be corrected with the leveling leg located on the bottom right corner of the washer. The washer must be placed and used at room temperatures ONLY.



[You're reading an excerpt. Click here to read official HAIER HLP21N user guide](http://yourpdfguides.com/dref/3981451)

<http://yourpdfguides.com/dref/3981451>

You must not place the washer where the temperature is at or below freezing or outside. This appliance must be stored at room temperature. Do not install or operate this appliance in an area where room temperature is below freezing. If you received this appliance when the outside temperature is below freezing, do not operate until this appliance has warmed to room temperature. Read carefully and understand all installation instructions before installing this washing machine. If after completing the process you are still unsure whether the washer has been properly installed, we recommend that you contact a qualified installer. **WARNING: DO NOT PLUG THE WASHER INTO THE A/C OUTLET** until ready for use. Always ensure your appliance is unplugged before installing or changing any parts.

The bottom panel blocks noises to provide you with the quietest performance possible during the wash cycle operation. First, lay down the washer on its front side. 2. Place the panel against the bottom of the machine. align the holes in the panel with the holes in the washer.

NOTE: Please ensure that the bottom plate is positioned properly before permanently screwing to bottom of the washer. The side marked "face to floor" must be facing you when putting the screws in. **Warning!** Using a level is best practice. unscrew and remove the fixed feet.

use the gooseneck drain hook to hold the hose in place. To avoid possible water back-up, the drain hose must reach a height of at least 31-1/2 inches minimum and 40 inches maximum. Laundry tub: Just hang hook over side of sink or for a more permanent use plastic ties. Plug in the washer to a regular 120 Volt / 60 Hz, 15 Amps outlet, only after all water and drain lines are connected. Note: Carefully inspect for any leaks around the machine and at the back. If there is a leak, check if any connections are loose. You may need to tighten any loose connections. do not remove the water absorption cushion. Check before each use to make sure it is not damaged. **CAUTION!** If after completing these steps you are still unsure whether unit has been properly installed, contact a qualified installer.

Press the **POWER** button once to turn **ON** the power to the washer. Press it again to turn the power **OFF**. start/Pause: (2) Press this button once to start the wash process. Press this button once again to pause the activity during the wash cycle. Push it again to resume the wash cycle. There are 3 main washing cycles, Normal, Heavy and Quickwash, along with a total of 7 wash operation options. Press the Water Level button to select the proper water level setting. You may select from low, medium and high water level settings depending on the wash load. function and Status Indicator Lights: (5) The function display lights indicate that a selected feature is **ON** or what the cycle is about to begin. During the wash cycle, a flashing light indicates the current **STATUS** of wash/rinse/spin cycle.

Turn the power **ON** by pressing the "ON" button. After the washing machine starts, you may change the cycle or program by turning **OFF** the machine and then restart chemicals, ammonia, chlorine bleach, concentrated detergent, solvents or metal scouring pads. Some of these chemicals and materials may dissolve, damage and/or discolor your appliance. Remove pins and other sharp objects from clothing to prevent scratches on interior parts. Please clean it with a brush monthly.

This will prevent damage from water leakage if the hoses are accidentally ruptured or if they become loose. To prevent mold and mildew, leave the door open so that the moisture inside the machine can evaporate. Reinstall the foam base/Styrofoam at the bottom of the unit to prevent internal parts from becoming damaged due to vibrations and shock when the washer is being moved to another location. The following sounds are normally heard during the operation of the washer: Tumbling sounds can be heard as heavy wet clothes in the washer are tossed around continuously. Air rushing noise is the result of the washtub spinning at a very high RPM.

Clicking sounds are caused by the wash and rinse cycles turning **ON** and **OFF**. Before calling for service, determine the symptoms and follow the suggested solutions: Washer does not operate: Check if the electrical wall receptacle is of proper voltage. Check if the circuit breaker needs to be reset or if the fuse needs to be replaced. You may have to close the door properly. You may need to press the button to set it in the **ON** position. Press this button to start the wash process. The clothing sensor is checking to verify that there are clothes inside the washtub. The pulsator pauses during incoming water flow in the wash and rinse cycle. this is normal. This prevents splashing during water inlet.

The washer may need to be reloaded and the clothes may need to be rebalanced. problems with water: Not enough water is coming in - The water faucet may need to be fully turned **ON**. This may cause the wash program to pause for a few minutes after water inlet. Your home drain may be clogged. You may need to tighten the hose, check the plumbing or call a plumber. Water may also leak if the machine is overloaded or if too much detergent is used. You may need to connect the drain hose properly. Water flows out of the drain hose during the first use of the machine - This may be the water left in the tub after the factory inspected the unit to test its performance in order to ensure the best quality. Wash load may need to be rebalanced, as the load may be uneven. Coins, loose change, buttons or other heavy objects may be making the noise.

A squeaking sound may be due to an overloaded wash tub. Do not mix heavy clothes such as work clothes with light clothes such as blouses, light shirts and delicate items. Clothes have soap residue The detergent may not be dissolving in the water. Check the water temperature or add detergent as the washtub is being filled with water (before you load your clothes) to avoid soap residue on clothes. Clothes are ripped or have holes - Sharp objects such as pins and belt buckles were left in the washtub.

You must remove small, loose, sharp objects. fasten belts, zippers, metal snaps etc. Check if you are using undiluted bleach. Move the laundry around to equalize the load. Haier is solely responsible for the cost of the part.

All other costs such as labor, trip charge, etc are the responsibility of the owner. Second through Fifth Year Haier will provide the outer washtub and related outer tub assembly parts should the part fail to hold water. Second through Seventh Year Haier will provide the inner stainless steel wash tub if defective in material or workmanship. Note: This warranty commences on the date the item was purchased and the original purchase receipt must be presented to the authorized service representative before warranty repairs are rendered.



[You're reading an excerpt. Click here to read official HAIER HLP21N user guide](http://yourpdfguides.com/dref/3981451)
<http://yourpdfguides.com/dref/3981451>

Exceptions: Commercial or Rental Use Warranty 90 days labor from date of original purchase 90 days parts from date of original purchase No other warranty applies For Warranty Service Contact your nearest authorized service center. all service must be performed by a Haier authorized service center. For the name and telephone number of the nearest authorized service center please call 1-877-337-3639. Before calling please have available the following information: Model number and serial number of your appliance. The name and address of the dealer you purchased the unit from and the date of purchase.

This warranty covers appliances within the continental United States, Puerto Rico and Canada.

What is not covered by this warranty: Replacement or repair of household fuses, circuit breakers, wiring or plumbing. A product whose original serial number has been removed or altered. Any service charges not specifically identified as normal such as normal service area or hours. Damage from service other than an authorized Haier dealer or service center. damage from incorrect electrical current , voltage or supply. Damage resulting from any product modification, alteration or adjustment not authorized by Haier. Damage from other than normal household use. any transportation and shipping charges.

THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages, so the above limitations may not apply to you.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state. Welcome to the world of Haier Compact Portable Laundry! The HLP140 is a Vented Dryer that mounts over any of Haier's family of Compact Portable washers. You can install them anywhere! Do not, under any circumstances, cut, remove, or bypass the grounding prong. If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.



[You're reading an excerpt. Click here to read official HAIER HLP21N user guide](http://yourpdfguides.com/dref/3981451)

<http://yourpdfguides.com/dref/3981451>