



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HMS-1250. You'll find the answers to all your questions on the HAIER HMS-1250 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HMS-1250
User guide HAIER HMS-1250
Operating instructions HAIER HMS-1250
Instructions for use HAIER HMS-1250
Instruction manual HAIER HMS-1250



[You're reading an excerpt. Click here to read official HAIER HMS-1250 user guide](http://yourpdfguides.com/dref/3244252)
<http://yourpdfguides.com/dref/3244252>

Manual abstract:

The symbol on the product or on its packing indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Please read these instructions carefully before using this appliance. The instructions contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance. This is normal phenomenon resulting from water tests in the factory. This diagram may be slightly different from the layout of the washing machine you have just purchased due to technical improvements. Use a separate earthed socket for the power supply.

Make sure that the fuses in the power circuit are rated for 15A. Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.

Check that hose joints and connections are firm and no water can leak. If joints are loose or there is leakage, turn off the water supply and refix. Do not use the washing machine until the hoses are properly fixed. Touch or use the appliance when barefoot or with wet or damp hands or feet.

Use flammable detergent or dry cleaning agent. Use any flammable sprays in close vicinity to the appliance. Allow children or infirm persons to play with the appliance or packing materials. Install the appliance outdoors in a damp place, or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally. If necessary, put small items into a net bag or pillow.

Wipe clean the lower part of the porthole. Touch the washer door during the washing process - it gets hot! Place heavy objects or sources of heat or damp on top of the appliance. Open the detergent distribution drawer during the wash cycle. The door is fitted with a self-lock device and will open shortly after the washing procedure is ended.

Cover the washing machine with plastic cover so that inside dampness cannot be kept in. When open the shrink package, you will find a calcium plastic board which is laid on the top of washing machine as shown in fig. 1. The board is used for reducing noise by pasting it under the cabinet when setting as shown in fig. The transportation bolts are designed for clamping anti-vibration components inside of the washing machine during the transportation process.

Remove the three bolts on the rear side and take out the synthetic stabilisers from within the machine. Fill the holes left by the bolts with blanking plugs. note: 1. When you replace the back cover, the convexity must face to outside, and you have to insert the back cover from the two gaps as shown in fig. There are adjustable feet under the bottom of the washing machine.

Before use, they should be adjusted so that the machine is level. This will minimise vibrations and thus noise during use. it will also reduce wear and tear. We recommend using a spirit level to level the appliance. Apply inlet hose to a water tap with cold, fresh water. note: Use the hose-set supplied with the appliance. Old hose-sets should not be reused. And should be securely fixed and leak-free. The voltage should meet the requirement. there are 11 programs available.

After a program is selected, the corresponding light will go on. Touch it again to resume operation. Touch this button lightly to select the desired speed. When a speed is set, it will be displayed on the screen. Wash using the default settings if there is no special requirement. the range is 0. 5-24 hours; each touch of this button increases a half hour. When the laundry is not balanced during spinning, the time may be automatically prolonged. these are normal phenomena. E+F: Combination for keyboard lock After a programme is started, press these two keys simultaneously, the sign "LOCK" and the remaining washing time are displayed on the LED alternately.

Now all the function keys except the Power switch can be locked. Press the key combination again to cancel this function. Preset spin speed 2 3 1 Recommended Laundry Heavy soiling Cotton fabrics Fast colour synthetic Woolen fabrics Cashmere fabrics Silk fabrics Medium-soil Medium-soil Attention: This program consists only main wash, without rinse and spin. The wash cycle times are intended as a guide only. The actual time used may vary due to different water pressure, initial water temperature, etc.

This washing machine is for domestic use only. Do not use it for purposes other than that for which it was designed. The water must be clean and clear. Separate white clothes from coloured ones. Wash them first by hand to check if they fade or run.

Close zippers and hooks, make sure the buttons are sewn on tightly and place small items such as socks, belts, bras, etc. Open the washer door, put in the laundry piece by piece. close the door tightly. When first using the washing machine, let it run unloaded for one program to prevent the laundry from being tainted by oil or dirty water from the washing machine. Before washing you should run the machine without laundry, but with detergent, with 60°C program. Special nonfoaming detergent produces good washing results. use specific detergents for synthetic and woollen goods. Do not use dry cleaning agents such as trichloroethylene and similar products. Note: Do not add more detergent than needed. Slide out the detergent drawer and put the required detergent and softening agent into the corresponding compartments.

push back the drawer gently. (Refer to the instructions on the drawer) Caution: For prewashing program, detergent should be added to both compartments 1 and 2. For other programs, do not add detergent to compartment 1. Turn off the water supply and unplug the power cord. Collect clothes for one full wash load. Reduce the amount of detergent or choose standard or delicate wash programs for slightly soiled clothes.

5. Choose a proper washing temperature. Modern detergents can wash with very good result already in lower temperature than 60°C. Only use higher temperature than 60°C for heavily soiled laundry.

6. Follow the dosage recommendation on the detergent package to avoid using too much detergent. Resistant material Delicate fabric Washable at 95 °C Washable at 60 °C Washable at 40 °C Washable at 30 °C Hand wash Dry clean only Wool Seal Bleachable in cold water Do not bleach Iron at 200 °C Iron at 150 °C Iron at 100 °C Don't iron Dry cleaning with any solvent Dry cleaning with pericloride Dry cleaning with aviation fuel Don't dry clean Dry flat Hung to dry Dry on clothes hanger Tumble dry, normal heat Tumble dry, reduced heat Don't tumble dry Turn off the water supply and pull out electricity plug after each wash.



[You're reading an excerpt. Click here to read official HAIER HMS-1250 user guide](http://yourpdfguides.com/dref/3244252)