




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HPAC90E. You'll find the answers to all your questions on the HAIER HPAC90E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HPAC90E
User guide HAIER HPAC90E
Operating instructions HAIER HPAC90E
Instructions for use HAIER HPAC90E
Instruction manual HAIER HPAC90E

Haier

PORTABLE AIR CONDITIONER
CLIMATISEUR PORTATIF
ACONDICIONADOR DE AIRE PORTATIL

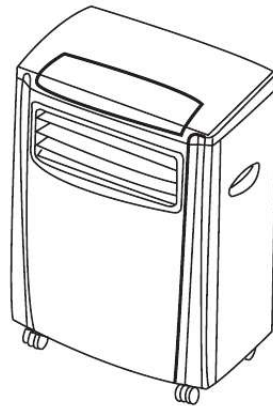

Model#
Modèle# HPAC90E
Modelo#



[You're reading an excerpt. Click here to read official HAIER HPAC90E user guide](http://yourpdfguides.com/dref/3350939)
<http://yourpdfguides.com/dref/3350939>

Manual abstract:

This manual contains useful information for you to maintain, operate, install and safely use your air conditioner. Your air conditioner cleans, cools and dehumidifies the air in your room to provide you with the ultimate level of comfort. Please read instructions carefully before using the product.

@@@Attach the sales receipt to this guide and keep for future reference. @@@Serial Number:

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... Date of Purchase:

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Dealer's Name:.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Dealers Address:

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... Dealers Phone Number:

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. TABLE RECEPTACLE RATED VOLTS AMPS 15 125/60 20 15 AND FUSE TYPES 250/60 20 30 WALL OUTLET FUSE SIZE TIME DELAY FUSE (or circuit breaker) 15 Plug 20* Plug 15 20* Plug 30 (1) English SAFETY PRECAUTIONS WARNING: Following these basic precautions will reduce the risk of fire, electrical shock, injury or death when using your air conditioner. 1) Air conditioner must be connected to proper electrical outlet with the correct electrical supply. (see table) Proper grounding must be ensured to reduce the risk of shock and fire.

DO NOT CUT OR REMOVE THE GROUNDING PRONG. If you do not have a three-prong electric receptacle outlet in the wall, have a certified electrician install the proper receptacle. The wall receptacle **MUST** be properly grounded. Do not operate air conditioner if power cord is frayed or otherwise damaged. Also avoid using it if there are cracks or abrasion damage along the length, plug connector or if the unit malfunctions or is damaged in any manner. Contact an authorized service for examination, repairs or adjustments. **DO NOT USE AN ADAPTER OR AN EXTENSION CORD.** Do not block airflow around the air conditioner. Also the exhaust hose should be free of any obstructions. Always unplug the air conditioner before servicing it or moving it. Do not install or use the air conditioner in any area where the atmosphere contains combustible gases or where the atmosphere is oily or sulphurous. Avoid any chemicals coming in contact with your air conditioner. Do not place any object on the top of the unit. Never operate the air conditioner without the filters in place. 2) 3) 4) 5) 6) 7) 8) 9) 10) Do not use the air conditioners near a bathtub, shower or wash basin.

(2) English Table Of Contents PAGE A Word From Haier.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

....I Product Registration

.....

.....

.....

.....

.....

.....

.....

5 Assembly and Installation.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..6 Operation

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..7 Product Specification

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..7 Care and Cleaning

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.8 Storage

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

8 Trouble Shooting

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....9 Warranty Information ..

.....
.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....

....10 (3) English Advantages of this Model 1.

This model is easy to operate. The manual control panel has a timer, thermostat, two speed cooling speeds and two fan speeds. 2. This portable air conditioner does not require water to be added. 3.

The unit has a unique design which evaporates the water. Therefore no condensation tank is necessary, thus avoiding you to have to wake up in the middle of the night to empty the bucket and turn on the unit. 4. @ @5. @ @6. @ @7. @ @Connect exhaust hose to the back of the unit. Extend hose to desired length and connect with window kit. USING EXHAUST DUCT SET 1. @ @2.

@ @ @ @3. @ @Plastic panel - 1 piece 2. Nozzle Fitting - 1 piece 3. Screws - 4 pieces 1 2 3 (6) English Operation 1. @ @2. @ @3. Use an 115 volt 20 amp outlet for the air conditioner. @ @Dedicate the electric line for the air conditioner alone. 4. @ @eg. baseboard heaters, stoves, etc. 5. Operate the unit on a flat surface only. 6. @ @7.

@ @ @ @ @The filter can be slid out from the back by pulling on the tab. The filter may be washed or vacuumed. Remove the excess water from the filter by gently shaking the filter. This will remove dust and particles trapped in the filter. After cleaning, reinstall the filter.

DO NOT use your air conditioner without the air filter in place. @ @ @ @ @ @ @Remove exhaust hose, clean filters, cover with plastic bag and store away.

(8) English Trouble-Shooting If air conditioner does not operate: · Check if unit is plugged in. The plug may have come loose. · Check if the electrical wall receptacle is of proper voltage. · Check if the circuit breaker needs to be reset or if the fuse needs to be replaced. · Check if the unit is in "Off" mode. · The fan control may be in "Off" position. Air conditioner working but room not cooling: · Room may have appliances that produce heat. Use an exhaust fan to remove excess heat.

· Check exhaust hose for proper installation. · Redirect the airflow. Remove any obstacles. · All doors and windows need to be closed so cool air does not escape the room. · Air filter may be blocked or may need cleaning. · Unit BTU may be too low for the required cooling area. · On extreme hot & humid days air conditioners may take a little longer to cool. (9) English Limited Warranty This warranty covers all defects in workmanship or materials for: 1. The mechanical and electrical parts (including labor costs) contained in this Haier product, for a period of 12 months, from the date of purchase, (commercial or rental application, the warranty is 90 days). THIS WARRANTY COVERS UNITS WITHIN THE CONTINENTAL UNITED STATES, CANADA AND PUERTO RICO AND DOES NOT COVER: · Damages from improper installation · Damages in shipping 2.

The sealed system and compressor contained in · Damages from misuse, abuse, accident, alter this Haier product is for a period of 5 years, from ation, lack of proper care and maintenance the date of purchase (excluding labor costs after the · Damages from service, by other than an authorinitial 12 month period). In commercial or rental ized dealer or service center use, the additional limited compressor warranty is · Labor, service, transportation and shipping for 1 year and 9 months, (excluding labor costs charges for the removal of defective parts and after the initial 90 days period). installation of a replacement part, beyond the iniYou must keep and be able to provide tial 12 month period. your original sales receipt as proof of the date of purchase. Who is covered? The original retail purchaser of this Haier product.

What will be done? Haier will repair or replace, in your home, any mechanical, electrical part or the compressor, which proves defective in normal household, use for a period of 12 months. @ @How can you get service? 1. Contact your nearest Haier authorized Service Depot. @ @2. All service must be performed, by an authorized Haier Service Depot.

@ @This warranty does not cover incidental or consequential damages. @ @Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. (10) .



[You're reading an excerpt. Click here to read official HAIER HPAC90E user guide](http://yourpdfguides.com/dref/3350939)
<http://yourpdfguides.com/dref/3350939>