



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HRF-660SAA. You'll find the answers to all your questions on the HAIER HRF-660SAA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER HRF-660SAA**  
**User guide HAIER HRF-660SAA**  
**Operating instructions HAIER HRF-660SAA**  
**Instructions for use HAIER HRF-660SAA**  
**Instruction manual HAIER HRF-660SAA**

# Haier

Inspired living

## Refrigerator/Freezer Combi

### User's Guide

**HRF-663DTA2\***  
**HRF-663DTB2\***  
**HRF-663DSA2\***  
**HRF-663DSB2\***  
**HRF-660SAA**  
**HRF-660S**

\*=**blank, WW, HS, SS, S2**

Thank you very much for choosing to purchase a Haier-brand refrigerator. This User's Guide will help you properly install and operate your newly acquired appliance.

For future reference, please write down the model and serial number in the spaces provided below.

You can retrieve that information from the product label attached to the inside of the refrigerator.

Model number:  
Serial number:  
Date of purchase:



[You're reading an excerpt. Click here to read official HAIER HRF-660SAA user guide](http://yourpdfguides.com/dref/3203459)  
<http://yourpdfguides.com/dref/3203459>

**Manual abstract:**

*This User's Guide will help you properly install and operate your newly acquired appliance. For future reference, please write down the model and serial number in the spaces provided below. You can retrieve that information from the product label attached to the inside of the refrigerator. Model number:*

*Serial number: Date of purchase: Contents Before operation Components .....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*.....1 Precautions ...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*2-4 Preparations.....*

.....

.....

.....

.....

.....

.....

.....

.....

*..5-6 Door removal...*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*..7-8 Setting up the Refrigerator/Freezer Combi .....*

.....

.....

.....

*.....9 Start-up.*

.....

.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

.....10 Digital display operation .

.....  
.....  
.....  
.....  
.....  
.....

.....11-13 Notes on the refrigerator compartment Refrigerator compartment...

.....  
.....  
.....  
.....  
.....  
.....

...14-16 Notes on refrigeration .....

.....  
.....  
.....  
.....  
.....  
.....

17 Tips on refrigeration .....

.....  
.....  
.....  
.....  
.....  
.....

18 Notes on the freezer compartment Freezer compartment.....

.....  
.....  
.....  
.....  
.....  
.....

.....19 Notes on freezing .

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....20 Defrosting Cleaning Inoperation Defrosting ..*

.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....21 Cleaning .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....21 Inoperation ...*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....22-23 Troubleshooting & Customer Service Troubleshooting ....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....24-25 Customer service ...*

.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..26-27 Before start-up, be sure to read the User's Guide. Keep the User's Guide in a safe place. Components Freezer Refrigerator compartment Bottle cover Light Light Shelves Shelves Ice tray Bottle rack Bottle rack Veggie drawer cover Freezer drawers Veggie drawer Note The power plug must remain accessible after setting up the appliance.

If damaged, the power cord of this appliance must be replaced by the maker, their customer service or an equally qualified person so as to prevent any hazards. Check the appliance for damages sustained during transportation. Do not connect the appliance if it is damaged. In case of damage, contact your supplier. Make sure that no part of the refrigerant circuit is damaged when transporting and setting up the appliance. Should the refrigerant circuit have been damaged, keep away all sources of fire or sparks and thoroughly air the room. Children frequently do not recognise the hazards related to handling household appliances. @ @ Do not let children play with the appliance. @ @ @ @ @ For that reason, we hope that you can accept our right to change their appearance, equipment or operation. 1 Precautions This appliance requires a 220-240V/50Hz power supply.

If the voltage is outside of the 187-242V range, malfunctions and damages of the controls, thermostat or compressor may result, unless a regulator of at least 750W was installed. A dedicated grounded outlet is required. The appliance is equipped with a standard shockproof plug, whose grounding should not be disabled. The power plug of the appliance should always be accessible. Do not damage the power cord. \*Never pull the plug out by the cord; always grab and pull the plug \*Do not place the power cord under the appliance or walk on it. \*Be sure not to damage the power cord when moving the appliance away from the wall. If the power cord is damaged or the plug cracked or worn, the power cord must be replaced with a matching one, available from the maker or their customer service. The power cord may only be replaced by the maker, their customer service or an equally qualified person. In the case of a gas or other flammable leak: \*Close the valve.

\*Open the doors and windows. \*Do not pull out or insert the power cord of the appliance. Pull out the power plug: \*Before cleaning or repair \*When replacing a burned-out bulb 2 Precautions Never place flammable, explosive or corrosive This appliance is intended strictly for storing materials in the refrigerator. and freezing foods. It is not suitable for storing such things as vaccines, bacteria or chemical samples, which have demanding temperature requirements.

Do not store fuel and other flammable products near this appliance. Do not put microwave ovens, voltage regulators or power strips on this appliance. Do not operate electrical devices and such inside the refrigerator (except if instructed to do so by the maker). To avoid injuries, do not let children climb on or hang from the appliance door. Once the appliance has been started up, do not touch the inside of the freezer compartment with wet hands, otherwise they may get stuck on the surface.

3 Precautions To avoid injury, keep fingers away from the Do not pour water onto the appliance or set it up door crack when opening or closing the doors. in wet areas. Keep children away from the appliance doors being opened and closed. Refrigerators may only be repaired or altered by Keep bottles and tins out of the freezer. They professionals. Improper repair may cause could burst when the content freezes. considerable damage. Please contact your dealer or our customer service should your appliance require repair or modification. Pull out the power plug in the case of a power When disposing of the appliance, remove the outage, repair or cleaning. door or door seal and shelves to prevent playing children from locking themselves in and putting their lives at risk.

4 Preparations Unpacking Remove the entire packing material, including the foam underlay and pieces of tape used to hold accessories in place. Separating and counting the included accessories. Check the items in the box against the packing list. In case of a mismatch, please contact your supplier. Setting up the appliance in a suitable area. (Details under "Setting up".) Attaching the toe moulding Open the refrigerator and freezer doors, remove the moulding from the refrigerator compartment, and then affix it as shown in the illustration. 5 Preparations Installing the door handle First, screw part 2 into the threaded hole in the door (part 1); there are two screws per door. Next, press part 3 with its larger opening onto part 2. Finally, pull part 3 down in order to attach it firmly to the door.

Cleaning interior It is recommended to clean the interior before starting up the appliance. (Details under "Cleaning".) Standing still After cleaning, let the appliance stand still for at least six hours before turning it on to start it up. 6 Door removal Removing the door If your house door is too narrow, remove the refrigerator door and carry the refrigerator in narrow side first. Remove the toe moulding.

Toe moulding Remove the freezer compartment door. 1) Unscrew the hinge covers. Disconnect all wires except for the grounding wire. 2) Remove the screws from the upper hinge following the direction as indicated by Arrow (1). Then remove the upper hinge following the direction as indicated by Arrow (2).

Upper (hinge) Hinge cover Wires Grounding wire Upper hinge Screw 3) Lift the freezer compartment door to remove it. Lower hinge 7 Door removal Remove the refrigerator compartment door. 1) Loosen the hinge cover bolts, and then remove the cover. Wires 2) Remove the screws from the upper hinge following the direction as indicated by Arrow (1). Then remove the upper hinge following the direction as indicated by Arrow (2). Upper hinge Screw 3) Lift the refrigerator compartment door to remove it. Lower hinge Slide the refrigerator through the door opening. Slide the refrigerator through the door opening as shown in the illustration.



[You're reading an excerpt. Click here to read official HAIER HRF-660SAA user guide](http://yourpdfguides.com/dref/3203459)  
<http://yourpdfguides.com/dref/3203459>

Reinstall the door. Bring the doors in the house, and then reinstall them by reversing the removal steps.

8 Setting up the Refrigerator/Freezer Combi Be sure to choose a flat and level setup location. Use sturdy and fireproof supports to correct an unevenness in the floor. Turning an appliance foot clockwise raises the appliance, turning it anticlockwise lowers the appliance. Door adjustment If the freezer compartment door is lower than that of the refrigerator compartment, insert the wrench in the groove of the left screw and turn it in the direction of the arrow until both doors are the same height. Height difference Height difference Wrench Left screw If the freezer compartment door is lower than Protect the setup location against direct sunlight that of the refrigerator compartment, insert the wrench in the groove of the left screw and turn it or heat sources. in the direction of the arrow until both doors are the same height. Height difference Height difference Wrench Right bolt Avoid a damp setup location.

@@@FRZ FRZ. Temp REF. @@FRZ FRZ.

Temp REF. @@@@FRZ FRZ. Temp REF. @@Press key B, upon which indicator F lights up and the Superfrost action is tue that the front of the veggie drawer cover is located on the inside of the veggie drawer. Remove the veggie drawer before removing its cover.

@@Remove the screws under the cover. @@@@Refrigeration promotes their decomposition. Do refrigerate unripe fruits. Caution: Do not use the egg tray as an ice cube tray and never place it in the freezer or Superfrost area to prevent it from cracking. 18 Freezer compartment Use the freezer compartment for long-term food storage A low temperature in the freezer compartment is necessary for long-term food storage.

Do not exceed the maximum length of storage indicated on the package. Removing and cleaning glass shelves First, lift the rear of the shelf in direction (1), and then pull the shelf out in direction (2). Finally, tilt the shelf in direction (3) and remove it once the door is open 90°. Interior light and replacement of bulb

Bulb specifications: 220-240 V / 25 W Socket: E27 (Do not use a replacement bulb of more than 25 W.) Replacing the bulb Pull out the power plug or neutralise the fuse. @@Twist the bulb anticlockwise, and then remove it. Install a new bulb of equal specifications. Re-install the cover. Adjusting and cleaning bottle rack Hold both sides of the bottle rack and pull it out in directions (1) and (2). Clean the bottle rack, and then re-place it or adjust its position.

Caution: Frozen foods (such as ice cream) should not be placed in the bottle rack but rather inside the freezer compartment to avoid that they spoil as a result of being exposed to the temperature changes from opening and closing the door. 19 Notes on freezing Let warm foods and drinks cool down to room temperature before putting them in the freezer compartment. Pack the food into portions of up to 2.5 kg suitable for your household. As a result, the portions will freeze faster and the quality after thawing remain optimal for preparation. Package the food before freezing it. The packages should be dry to prevent their sticking together. Use only freezer-compatible packing material; this should be strong, taste-neutral, air- and watertight so as to minimize taste contamination and loss of quality. Always write the content and freezing date on the packing, and do not exceed the recommended length of storage so as to prevent loss of quality. Remove only the required amount to be thawed.

Never place more fresh food in the freezer at Thawed foods must never be frozen again. one time than the maximum freezing capacity. 20 Defrosting · Cleaning Defrosting The appliance defrosts automatically. Cleaning Clean the refrigerator regularly to prevent odour build-up. For safety reasons, first unplug the power cord.

Clean the appliance using a soft rag or sponge and lukewarm water, to which you may add a little bit of a neutral dishwashing liquid. Dry off surface water with a rag. Caution: Do not use pointed objects, metal brushes or the following chemical solvents: abrasive cleansers, varnish, amyl acetate, hot water, acid, alkaline cleaners, etc. Caution: Do not pour water onto the appliance. Use a rag or sponge to clean and dry the controls and lights.

Be sure to clean the door seal regularly. 21 Inoperation In the event of a power outage Even in the summer, foods can be kept cool for several hours during a power outage. In the event of a power outage, refrain from adding foods to the appliance and opening the doors. Caution: A temperature drop in the freezer compartment, caused by a power outage or other malfunction, reduces the storage life span and quality of the foods. If you know there will be a power outage, produce more ice cubes and place them in the top section of the refrigerator. Caution: A temperature drop in the freezer compartment, caused by a power outage or other malfunction, reduces the storage life span and quality of the foods. Putting the appliance out of operation If the appliance is to remain idle for a long period of time, you must press the power button and unplug the power cord. Clean the appliance as described. During the period of inoperation the doors must be left open to prevent odour build-up. Caution: Avoid putting the appliance out of operation, as this will shorten its life expectancy.

Caution: Wait at least five minutes before turning on the appliance after turning it off. 22 Inoperation When on vacation Before a long vacation, turn off the appliance, take out the food, remove the frost, clean the interior and leave the door open to prevent odour build-up. Transportation Unplug the power cord.

Remove all foods from the refrigerator. Secure the shelves, drawers and baskets with tape. Close the appliance door and secure it with tape. During transportation, do not tilt the appliance more than 45° (in relation to the vertical position), otherwise malfunctions of the refrigeration system may be caused.

Caution: Do not carry the appliance or let it stand horizontally. 23 Troubleshooting Long operation time and a temperature increase of housing and compressor are normal during initial operation. Some of the sounds produced during initial operation or at start-up will fade during normal operation. During initial operation, the appliance housing may become warm to prevent condensation. At start-up and during operation, the compressor may produce an audible sound when starting or stopping Click Click The sound of the refrigerant flowing through the evaporator and compressor is normal. A continuous or intermittent flowing sound after operation is normal. During the defrosting process, thaw water may drip onto the heating elements, causing audible sounds in the evaporator. Swoosh Swoosh Hiss Hiss 24 Troubleshooting When operating, the fan produces an audible sound.



[You're reading an excerpt. Click here to read official HAIER HRF-660SAA user guide](http://yourpdfguides.com/dref/3203459)  
<http://yourpdfguides.com/dref/3203459>

*The specified power consumption at an ambient temperature of 25°C with 5°C in the refrigerator and -18°C in the freezer after 24 hours of normal operation complies with government standards. Higher power consumption is normal with large amounts of food in the freezer and when the appliance door is opened frequently or for long times. Moan Moan The evaporator lines may produce audible sounds when the temperature is changing. Wipe off any condensation that may form on the exterior housing and centre beam at high humidity with a soft cloth. 25 Customer service Should a malfunction occur that you cannot resolve as described below, contact the nearest customer service.*

*In such a case, please indicate the full model name, serial number and spare part register. @@@@Normal after loading with large amounts of foods.*

*Appliance door not fully closed. Appliance door is opened frequently. Ambient temperature is high. Wrong temperature setting. See "Starting up".*

*@@Appliance door not fully closed. Appliance door is opened too frequently or for too long. Food placed too close to air outlet.*

*Unusual odour Strongly smelling food is not packed appropriately. Food has spoiled. The appliance interior needs to be cleaned. The symbol on the product or on its packaging indicates that this product is not to be treated as regular household waste. Instead, it must be taken to a recycling collection point for electrical and electronic equipment. By properly disposing of this product, you are contributing to the preservation of the environment and the wellbeing of your fellow citizens. Improper disposal is hazardous to health and environment. You can obtain further information on how to recycle this product from your municipality, your waste management service or the shop where you purchased it. 27.*



[You're reading an excerpt. Click here to read official HAIER](#)

[HRF-660SAA user guide](#)

<http://yourpdfguides.com/dref/3203459>