



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HU380S. You'll find the answers to all your questions on the HAIER HU380S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HU380S  
User guide HAIER HU380S  
Operating instructions HAIER HU380S  
Instructions for use HAIER HU380S  
Instruction manual HAIER HU380S

**IMPORTANT SAFETY**

**Precautions**

**Warning:** To reduce the risk of personal injury when using your appliance, always read the following warnings, including the following:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended purpose as described in this user manual.
3. Do not use any accessories not recommended by the manufacturer.
4. Never operate this unit if the cord is plugged into a damaged outlet, if it is not working properly or if it has been damaged or dropped into water. Return the unit to a service center for replacement.
5. Do not repair or replace any part of the appliance to attempt any servicing. **Note:** If for any reason this product requires service, we strongly recommend that you contact a service technician.
6. Replace immediately any worn, frayed, cracked, loose, plugs and power outlets.
7. Do not use this appliance for commercial uses.
8. This appliance must be connected to a proper electrical outlet with the correct electrical supply.
9. To reduce the risk of electric shock or fire, do not use extension cord or adapters to connect this unit to an electrical power source.
10. Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
11. Never touch the electrical outlet with wet hands.
12. Close the top lid to maximize when the product is used by a child.
13. Show the unit out of reach of children.
14. Keep the unit away from direct sunlight and heated surfaces. Place on a dry, flat surface.
15. Do not use while bathing.
16. Do not place this unit where it can easily fall or be dropped into water or other liquids.
17. Never reach for a product that has fallen into water. Unplug the unit immediately.
18. Never leave the unit unattended when plugged in. Always unplug the unit when not in use.

**Proper Usage**

**CAUTION**

- Turn on the unit unless the tank is filled with water.
- Never fill the tank or clean the unit with harsh solvents, cleaners or abrasives.
- Never immerse the unit completely into water. **The unit is not waterproof!**
- Unplug the unit before filling with water. Do not exceed the "Max" mark on the freshwater tank.
- If the unit is not working properly, shut it off. Call an authorized service representative for repair.
- To avoid injury, always unfastened parts may become dislodged during cleaning.


**Note:** This cleaner is not appropriate for use on delicate items (e.g., pearls and pearls), or materials such as shells, leather, cloth and wood.

- Do not use this jewelry cleaner for watches that are not water resistant.

**Digital Ultrasonic Jewelry Cleaner**

**Features and Benefits**

- Cleans Jewelry, Watches, Glasses & More
- Quick & Easy to Use
- Uses Tap Water
- Adjustable Cleaning Time
- Large 20.3 in. Capacity
- 42,000 Ultrasonic Waves per Second



The Haier Ultrasonic Jewelry Cleaner is suitable for jewelry, watches, glasses and more. Microscopic bubbles created by energy waves loosen surface dirt and dust particles for a deep cleaning that effectively and efficiently restores items to their original brilliance. Use the Ultrasonic Jewelry Cleaner to clean jewelry, pins, watches, glasses, dentures, razor heads, and camera lenses and body chains.

**User Manual Model # HU380S**

Please read instructions carefully before operating this unit. Save these instructions for future reference.

**Haier** Quality • Innovation • Style

**SAVE THESE INSTRUCTIONS For Future Use**

Thank you for purchasing the Haier product. This registration manual will guide you in getting the best use of your jewelry cleaner.

Model number \_\_\_\_\_  
 Date of purchase \_\_\_\_\_

Remember to record the date of purchase.

Supply your receipt to your manual. You will need it to obtain warranty service.



[You're reading an excerpt. Click here to read official HAIER HU380S user guide](http://yourpdfguides.com/dref/3244308)  
<http://yourpdfguides.com/dref/3244308>

**Manual abstract:**

2. 3. 4. Read all instructions before using the appliance. Use this appliance only for its intended purpose as described in this user manual. Do not use any accessories not recommended by the manufacturer. Never operate this unit if the cord or plug is damaged, if it is not working properly, or if it has been damaged or dropped into water. Return the unit to a service center for replacement. @@@@Do not use this appliance for commercial uses. This appliance must be connected to a proper electrical outlet with the correct electrical supply.

To reduce the risk of electric shock or fire, do not use extension cords or adapters to connect the unit to an electrical power source. Digital Ultrasonic Jewelry Cleaner Features and Benefits · Cleans Jewelry, Watches, Glasses & More · Quick & Easy to Use · Uses Tap Water · Adjustable Cleaning Time · Large 20.3 oz. Capacity · 42,000 Ultrasonic Waves per Second 5. 6.

7. 8. 9. The Haier Ultrasonic Jewelry Cleaner restores luster and shine to jewelry, watches, glasses and more. Microscopic bubbles created by energy waves loosen surface dirt and dust particles for a thorough cleaning that effectively and efficiently restores items to their original brilliance. Use the Ultrasonic Jewelry Cleaner to clean jewelry, pins, watches, glasses, dentures, razor heads, antique coins, keys and key chains. 10. Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet. 11. Never touch the electrical outlet with wet hands. 12. Close supervision is necessary when this product is used by or near children. 13. Store the unit out of reach of children.

14. Keep the unit away from direct sunlight and heated surfaces. Place on a dry, flat surface. 15. Do not use while bathing. 16. Do not place this unit where it can easily fall or be dropped into water or other liquids. Please read instructions carefully before operating this unit. Save these instructions for future reference. User Manual Model # HU380S Quality Innovation Style 17.

Never reach for a product that has fallen into water. Unplug the unit immediately. 18. Never leave the unit unattended when plugged in. Always unplug the unit when not in use.

Proper Usage CAUTION · Turn on the unit unless the tank is filled with water. @@ · Never immerse the unit completely into water. The unit is not waterproof! · Unplug the unit before filling with water. Do not exceed the "Max" mark on the stainless steel tank. · If the unit is not working properly, shut it off.

Call an authorized service representative for repair. @@@@Place small items to be cleaned into the basket provided. Place the basket into the water. @@@@Close the cover and plug in the unit. 4. @@@@Press the "ON" button to begin cleaning. @@Note: During cleaning, you may hear hissing noises from the unit. This normal occurrence indicates that cleaning is in progress. 1. Cover 2.

Viewing Window 3. Stainless Steel Tank 4. Power Plug and Cord 5. Basket 6. Watch Stand 6. @@To interrupt a cleaning cycle, press the "OFF" button. Press the "ON" button to continue. 7. @@Wipe the unit dry. 8.

Repeat the above steps if necessary. Check to make sure that all parts and accessories are present and in good condition. If you find that they are not in good condition or are missing, please contact our customer service department for assistance. Our Toll-Free number is 1-877-337-3639. Note: For enhanced cleaning, add 2 drops of detergent.

3 MAINTENANCE INSTRUCTIONS 4 LIMITED WARRANTY Cleaning 1. Always unplug the unit immediately after use. 2. Empty the tank after each use. 3. Wipe the tank with a dry towel. Always keep the unit clean. Note: Do not immerse the unit in water or rinse under running water as this may damage the unit. 4. Store the unit in a cool, dry location. 5. Repairs should be made only by an authorized service representative. This warranty extends only to the original retail purchaser, and excludes any damage to the product resulting from accident or misuse. The product is not warranted when used in a commercial or business environment. This item is warranted to be free from defects in materials or workmanship for a period of one (1) year from the original date of purchase under normal household use.

Within the warranty period, we will replace the product. IMPORTANT! @@ · Remove the label from the bottom of the unit. @@Please be sure to include your return address. @@The warrantor expressly disclaims liability for any special, incidental, indirect, or consequential damages in connection with the purchase or use of this product or costs over the original purchase price. Any implied warranties arising by operation of law shall be limited in duration to the terms of this warranty. Haier Return Center 475 Commercial Avenue Palisades Park, NJ 07650 Haier Return Center 525 South Lemon Avenue Walnut, CA 91789 This warranty gives you specific legal rights and you may have other rights, which vary by jurisdiction. .



[You're reading an excerpt. Click here to read official HAIER HU380S user guide](http://yourpdfguides.com/dref/3244308)  
<http://yourpdfguides.com/dref/3244308>