



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HWD 1500. You'll find the answers to all your questions on the HAIER HWD 1500 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HWD 1500
User guide HAIER HWD 1500
Operating instructions HAIER HWD 1500
Instructions for use HAIER HWD 1500
Instruction manual HAIER HWD 1500

Front Load Clothes Washer & Dryer Combo
Combi laveuse à chargement frontal & Sécheuse
Combo de Lavadora y Secadora de Ropa con Carga Frontal



User Manual
Model # HWD1500
Guide de l'Utilisateur
Modèle # HWD1500
Manual del Usuario
Para Modelo de # HWD1500

Haier.

Quality • Innovation • Style



[You're reading an excerpt. Click here to read official HAIER HWD 1500 user guide](http://yourpdfguides.com/dref/3981489)

<http://yourpdfguides.com/dref/3981489>

Manual abstract:

2. Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet. 6. Replace immediately worn power cords, loose plugs/power outlets. 7. Unplug your appliance before cleaning or before making any repairs. 8. If your old appliance is not being used, we recommend that you remove the door. Do not operate your appliance in the presence of explosive fumes. 10. Do not use this appliance to wash clothes soaked, spotted or washed in gasoline, dry cleaning solvents or any other explosive or flammable substances that could ignite and explode. 11. Clothes or rags used to clean flammable or explosive materials should not be washed in this appliance till all traces of this material has been removed, to avoid an accident. 12. Do not add or mix any flammable or explosive substances to the wash. 13. Do not operate your appliance when parts are missing or parts are broken. 14. Do not use this appliance for commercial clothes washing. 15. Do not operate this appliance unless all enclosure panels are properly in place. 16. Do not tamper with controls. 17. To reduce risk of injury do not allow children to play in or on the appliance. Close supervision of children is necessary when the appliance is used near This appliance must be connected to proper electrical outlet with the correct electrical supply.

19. Proper grounding must be ensured to reduce the risk of shock and fire. If you do not have a three-prong electric receptacle outlet in the wall, have a certified electrician Hydrogen gas may be produced if the water heater has not been used in more than 2 weeks. this could be explosive under certain circumstances. If this is the case, before using this appliance turn on all the hot faucets and let the hot water run for a few minutes. this will let the trapped hydrogen escape. During this process do not turn on an electric appliance, smoke, light a match/lighter or use a flame to avoid an accident, as hydrogen gas is flammable and can explode. 21. Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode. 22.

Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-repair instructions that you understand and have skills to carry out. 23. Do not place items exposed to cooking oils in your dryer. Risk of child entrapment. Before you throw away your old appliance, take off the door so that children may not easily get trapped inside. Thank you for purchasing our Haier product. This easy-to-use manual will guide you in getting the best use of your washer and dryer combo. Remember to record the model and serial number. They are on a label in back of the unit.

Model number Serial number Date of purchase Staple your receipt to your manual. You will need it to obtain warranty service. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounded plug. The plug must be inserted into an outlet that is properly installed and grounded. Improper use of the plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. This appliance must be plugged into at least 15 AMP 120 VOLT, 60 HZ GROUNDED OUTLET. Note: Where a standard two-prong outlet is encountered, it is the personal responsibility and obligation of the consumer to have it replaced with a properly grounded three-prong outlet. Extension Cords: We do not recommend that you use an extension cord.

Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored re-plug power cord to AC outlet. If outage is for a prolonged period, clean washer before using it again. Transportation Bolts must be removed before using the machine. Remove three transportation bolts as shown in figure 2A. The bolts protect the appliance from shock during transportation. The steps below should be followed before using the appliance: 1. remove the back plate of the washing machine. To remove this you must remove three screws holding the panel.

Remove the metal bracket and save in a safe place for later use. Fill the holes left by the bolts with plastic plugs. Leveling the washing machine: There are adjustable feet under the bottom of the washing machine. Before use, the washing machine should be adjusted, as shown in figure 3, so that it is level. Leveling legs can be adjusted by turning them counterclockwise to raise your washer or clockwise to lower your washer.

Connect the straight coupling of the inlet hose to the water tap and make sure to tighten it. Connect the elbow coupling of the inlet hose to the pressure regulator and make sure to tighten it. note: Please be sure that the COLD inlet hose is connected with the valve for cold water (marked with "C"). Please be sure that the HOT inlet hose is connected with the valve for hot water (marked with "H"). Note: A flat rubber washer must be present inside each end of the inlet hoses.

(use new hose sets, old hose sets should not be reused) The height of the pipe for the water drainage hose should be between 2'6" to 3'3". The water drain hose must be securely placed on the clip on the back of the washing machine. Use the water drainage support (bracket) supplied as an accessory for proper installation. If the water drain hose needs to be extended, it should not be extended more than 8'2". Make sure local city codes are followed. Note: "Y Adapter" shown in below figure is only for illustration. It is not provided in the box as an accessory. If you need to utilize this type of hookup, you can purchase a "Y Adapter" from your nearest hardware store. During a wash cycle, press this button to pause operation.

press again to resume operation. You could choose from Max; High; Medium; Low to No Spin. The maximum speed will vary when a different program is selected. An indicator will light up showing its activation. When the unit goes in the dry mode the light will flash. NOTE: Drying cycle is not available in all wash cycles. The indicator light will light up. At the end of the cycle the display light will turn off.

The wash cycle will begin at a later time of your choosing. Now you can cancel the delay function without powering off the combo. Door lock and child lock functions will be lit when activated. Door Light A lock light will illuminate when the door is locked. 12. Now the selected cycles cannot accidentally be changed by anyone.



[You're reading an excerpt. Click here to read official HAIER HWD](http://yourpdfguides.com/dref/3981489)

[1500 user guide](http://yourpdfguides.com/dref/3981489)

<http://yourpdfguides.com/dref/3981489>

@@@ Separate heavy clothes from light clothes. Carefully check all pockets and cuffs for small items. They can easily slide into the tub and damage the tub. Do not overload your washer.

Close the door properly after loading clothes. You will see that there are three compartments. Do not exceed the level in the compartment to avoid overflow. @@@ This dispenser is only designed for liquid form. When pre-wash cycle is selected do not use liquid detergent. low-Sudsing detergent is recommended for front load style washers. @@@@ the selected cycle will be illuminated on the control panel. The spin speed and the wash/rinse temperature are preset for each of the cycles. now you could select the "Drying" program and press the "Start/Pause" button to start the wash. If after selecting the cycle you want to change the spin speed and the wash/rinse operate until this appliance has warmed to room temperature.

Do not install or operate this appliance in the area where room temperature is below freezing. Warning code Err1 Problem = reason Action to take
Warning and stop running Warning and stop running Solution Check if the electrical wall outlet is of proper voltage. Check if the circuit breaker needs to be reset or if the fuse needs to be replaced. Check if the washer is overloaded: load may need to be re-balanced and clothes may need to be redistributed. You may have to close the door properly. problems with water: · Not enough water coming out: Water faucet may need to be turned on fully. Hot water needs to be at a temperature at least 120°F -140°F (49°C -60°C). Check to make sure the inlet hoses are properly connected. @@ Your home drain may be clogged or having constant water pressure. You may need to tighten hoses; check the plumbing or call a plumber.

@@ You may need to connect the drain hose properly. check the position of the drain hose. @@ Washer load may need to be re-balanced, as the load may be uneven. Coins, loose change, buttons or other heavy objects could make noise (read Operating Guide Normal Operating Sounds). Vibration Noise: Due to not leveling washer properly on the floor and uneven distribution of clothes in the tub.

Clothes are too wrinkled: This is due to improper sorting, overloading and washing in too hot water repeatedly. avoid overloading and resort your load. Do not mix heavy clothes such as work clothes with light clothes such as blouses, light shirts and delicate items. You may need to wash in warm or cold water. Spots or stains on your clothes: This is due to incorrect use of fabric softener.

You may need to read proper instructions on the detergent container and follow proper directions for using the softener. Clothes are grayed or yellowed: This is due to not pouring enough detergent for large loads. You may have to add more detergent to the load. Clothes are ripped & have holes/excessive wear & tear: This is due to sharp objects such as pins and belt buckles left in pockets. You will need to remove small loose sharp objects. Check if the circuit breaker needs to be reset.



[You're reading an excerpt. Click here to read official HAIER HWD 1500 user guide](http://yourpdfguides.com/dref/3981489)
<http://yourpdfguides.com/dref/3981489>