



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HWD1000. You'll find the answers to all your questions on the HAIER HWD1000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HWD1000
User guide HAIER HWD1000
Operating instructions HAIER HWD1000
Instructions for use HAIER HWD1000
Instruction manual HAIER HWD1000

**Front Load Clothes Washer & Dryer
Combo**

**Lave-Linge Sechant a Chargement
Frontal**

Lavadora y Secadora de Carga Frontal



**User Manual
Model # HWD1000**

**Guide de l'Utilisateur
Modele # HWD1000**

**Manual del Usuario
Para Modelo de HWD1000**

Haier

Quality • Innovation • Style



[You're reading an excerpt. Click here to read official HAIER HWD1000 user guide](http://yourpdfguides.com/dref/3244337)
<http://yourpdfguides.com/dref/3244337>

Manual abstract:

2. Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet. 6. Replace immediately worn power cords, loose plugs/power outlets. 7. Unplug your appliance before cleaning or before making any repairs. 8. If your old appliance is not being used, we recommend that you remove the door. Do not operate your appliance in the presence of explosive fumes. 10. Do not use this appliance to wash clothes soaked, spotted or washed in gasoline, dry cleaning solvents or any other explosive or flammable substances that could ignite and explode. 11. Clothes or rags used to clean flammable or explosive materials should not be washed in this appliance till all traces of this material has been removed, to avoid an accident. 12. Do not add or mix any flammable or explosive substances to the wash. 13. Do not try to remove clothes while the tub is moving. Let it come to a complete stop before use. 14. The appliance loading door must be closed when tub is spinning. 15. Do not operate your appliance when parts are missing or parts are broken. 16. Do not use this appliance for commercial clothes washing. 17. Do not operate this appliance unless all enclosure panels are properly in place. 18. Do not tamper with controls. 19. To reduce risk of injury do not allow children to play in or on the appliance. Close supervision of children is necessary when the appliance is used near children. 20. This appliance must be connected to proper electrical outlet with the correct electrical supply. 21. Proper grounding must be ensured to reduce the risk of shock and fire. **DO NOT CUT OR REMOVE THE GROUNDING PLUG.** If you do not have a 1 Three-prong electric receptacle outlet in the wall, have a certified electrician install the proper receptacle. Hydrogen gas may be produced if the water heater has not been used in more than 2 weeks. this could be explosive under certain circumstances. If this is the case, before using this appliance turn on all the hot faucets and let the hot water run for a few minutes. this will let the trapped hydrogen escape. During this process do not turn on an electric appliance, smoke, light a match/lighter or use a flame to avoid an accident, as hydrogen gas is flammable and can explode. 23. 24. 25. 26. Clean button trap before and after each load. 27. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. 28. To reduce the risk or electric shock or fire, do not use extension cords or adapters to connect the unit to electrical power source. Risk of child entrapment. Before you throw away your old appliance, take off the door so that children cannot easily get trapped inside. Thank you for purchasing our Haier product. This easy-to-use manual will guide you in getting the best use of your washer & dryer combo unit.

Remember to record the model and serial number. They are on a label in back of the unit. Model number Serial number Date of purchase Staple your receipt to your manual. You will need it to obtain warranty service. You will need to have following tools to help you in the installation of your Washer: **Warning:** To reduce the risk of fire, this appliance must be fastened or otherwise secured to an uncovered floor. It is because of the water testing before leaving the factory. The packing bolts protect the appliance from impact damage during transportation. Follow the steps below before using the appliance. Remove the three packing bolts from the rear panel of the washing machine, the rubber hose and then the shock absorption steel channel. Fill the left holes by the packing bolts with plastic plugs.

Attention: The packing bolts and rubber hose should be kept in a safe place for later use. Do not let children touch. Before use, adjust the feet until the appliance is leveled, as shown in Fig. Connection of water inlet hose and washing machine (Use new hose-set, old hose-set should not be reused.

Fix the water drainage hose support with waterproof string.

Check the following items before connecting to the power supply. This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipped-ground conductor and a ground plug. The plug must be plugged into an appropriate outlet that is properly installed with accordance to local codes and regulations.

WARNING: Improper connection of the equipped-ground conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance. **WARNING:** Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel Do not contact the following parts while the appliance is energized: electromagnetic valve, computer board, door lock, drain pump, drying motor, capacity bracket assembly, etc. **WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance. This button controls On/Off power of the unit. Touch this button and you can select the washing programs as you wish from top to bottom in proper order. the backlight is bright while the program is selected. The machine will carry out the standard program if there is no program to be selected.

The sequence of dry program follows each time the button is selected after the washing program is set: Whole auto dry program. At this moment you can select either 60 min or 30 min program. You can not select dry function while you have already selected the heavy or delicate program. The different spinning speeds can be selected by touching this button. The spinning speed is 1000 rpm (800 rpm for night washing) if the dry function is selected. The time can be changed when button is pressed and 6 times are the maximum amount. Each time this button is pressed, washing period will increase. Setting the finished time of the scheduled washing by touching this button. the defaulted time for the scheduled washing is 9 hour. This display is used for providing washing time to the user.

Touch this button to set washing cycle with cold or hot water. These can be unlocked if the button is pressed for another 3 seconds. The prewash function can be added into the washing program. We suggest using the first gear when the quantity is less then 2 lbs. ; use the second gear when the quantity is less then 6 lbs.

, and use the last gear when the quantity more then 6 lbs. The set program is carried out while this button is pressed. Press this button again if you want to resume the operation. Physical part that allows user to see what is happening inside.



[You're reading an excerpt. Click here to read official HAIER HWD1000 user guide](http://yourpdfguides.com/dref/3244337)
<http://yourpdfguides.com/dref/3244337>

2 physical parts that can be adjusted in height for user needs.

Physical part where user can place detergent or softener. @@@@ there are many brands of detergent in the market. @@@@ Separate white clothes from colors. @@@@ note: 1. @@@@ caution: 1. Do not add liquid detergent into partition 1 and 2. 2. @@ 3. Do not overuse softening agent as this may damage artificial fabrics. @@ â Check if the circuit breaker needs to be reset or if the fuse needs to be replaced.

Check if the washer is overloaded: load may need to be re-balanced and clothes may need to be redistributed. You may have to close the door properly. Not enough water coming out: Water faucet may need to be turned on fully. Check water level selection, it may need to be readjusted. Hot water needs to be at a temperature at least 120Â°F (49Â°C) to 140Â°F (60Â°C). Check to make sure the inlet hoses are properly connected. Water leaks: This is due to not properly installed drain hose or fill hoses. Your home drain may be clogged. You may need to tighten hoses, check the plumbing or call a plumber for service. â Water pumped out before the cycle is completed: It happens if you open the door in the middle of cycle.

â Water will not drain: This may be because drain hose was not installed properly. check the position of the drain hose. In order to drain properly, make sure that top of drain outlet is less than 4 ft. Washer load may need to be re-balanced, as the load may be uneven. â Coins, loose change, buttons or other heavy objects could make noise (read Operating Guide Normal Operating Sounds).

@@@ avoid overloading and resort your load. @@ You may need to wash them in warm or cold water. Check water temperature or you need to add detergent as wash tub is being filled with water before you load your clothes to avoid soap residue on the clothes. â Spots or stains on your clothes: this this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages, so the above limitations may not apply to you.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state. Garantie limitée Un an apre la date d'achat originale, Haier vous fournira n'importe quelle piece gratuit, comme indique ci dessous, et remplacera les pieces qui sont endommagees. Seconde jusqu'a la cinquieme annee Haier vous fournira le baquet exterieur et toutes les pieces d'assemblage du baquet si ces pieces ne retiennent pas l'eau. Staple your receipt to your manual. You will need it to obtain warranty service. You can not select dry function while you have already selected the heavy or delicate program. If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639. .



[You're reading an excerpt. Click here to read official HAIER](#)

[HWD1000 user guide](#)

<http://yourpdfguides.com/dref/3244337>