



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HWF05XCK-T. You'll find the answers to all your questions on the HAIER HWF05XCK-T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HWF05XCK-T
User guide HAIER HWF05XCK-T
Operating instructions HAIER HWF05XCK-T
Instructions for use HAIER HWF05XCK-T
Instruction manual HAIER HWF05XCK-T

Haier

ROOM AIR CONDITIONER
Use & Care Guide

ACONDICIONADOR DE AIRE PARA HABITACIÓN
Manual de Uso y Cuidado

CLIMATISEUR DE PIÈCE
Guide d'utilisation et d'entretien



Model:
HWF05XCK HWF05XCK-L
HWF05XCK-T HWF05XCK-E

For questions about features, operation/performance, parts,
accessories or service call: 1-877-337-3639

Si tiene preguntas respecto a las características, funcionamiento,
rendimiento, partes, accesorios o servicio técnico,
llame al: 1-877-337-3639

Au Canada, pour assistance, installation ou service,
composez le : 1-877-337-3639

No.0010518324



[You're reading an excerpt. Click here to read official HAIER
HWF05XCK-T user guide
http://yourpdfguides.com/dref/3624577](http://yourpdfguides.com/dref/3624577)

Manual abstract:

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING. You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. **IMPORTANT SAFETY INSTRUCTIONS WARNING:** To reduce the risk of fire, electrical shock or injury when using your air conditioner, follow these basic precautions: plug into a grounded 3 prong outlet. Do not remove ground prong.

Use two or more people to move and install air conditioner. Read and follow the instructions provided with any tools listed here. Check that all parts are included in parts package. Make sure you have everything necessary for correct installation. The location should provide: Grounded electrical outlet within 6 ft (183 cm) of where the power cord exits the air conditioner.

NOTE: Do not use an extension cord. Free movement of air in room to be cooled. Adequate wall support for weight of air conditioner. Air must be able to pass freely through the cabinet louvers. The electrical ratings for your air conditioner are listed on the model and serial number label.

@@ specific electrical requirements are listed in the chart below. @@This air conditioner must be grounded. @@@@If a mating outlet is not available, it is the customer's responsibility to have a properly grounded 3 prong outlet installed by a qualified electrical installer. **NOTE:** Your air conditioner's device may differ from the one shown. This room air conditioner is equipped with a power supply cord required by UL. This power supply cord contains state-of-the-art electronics that sense current leakage. Plug power supply cord into a grounded 3 prong outlet. 2. Press RESET (on some devices, a green light will turn on).

3.

Press TEST (listen for click; Reset button will trip, and on some devices, a green light will turn off). 4. Press and release RESET (listen for click; Reset button will latch, and on some devices, a green light will turn on). The power supply cord is ready for operation. **NOTES:** The Reset button must be pushed in for proper operation. The power supply cord must be replaced if it fails to trip when the test button is pressed or fails to reset. Do not use the power supply cord as an off/on switch. A damaged power supply cord must be replaced with a new power supply cord obtained from the product manufacturer and must not be repaired. Remove tape and glue residue from surfaces before turning on the air conditioner. Rub a small amount of liquid dish soap over the adhesive with your fingers.

These products can damage the surface of your air conditioner. **NOTE:** Your model may differ from the one shown. Slide the side curtain frame as close to the air conditioner as necessary to lock the side curtain to the frame. Mark the center line on the inside windowsill. Slide the side curtain down the track until the curtain is aligned with the top and bottom of the air conditioner cabinet.

Install the Window lock bracket behind the inner windowsill, with the short side of Window lock bracket as shown. Use the 2 wood screws 31/32" provided.

The Window lock bracket helps to hold unit securely in place. Be sure to place Window lock bracket edge flush against back of inner sill. 3.

Slide the side curtain frame into the top channel on the top of the air conditioner and the track on the bottom of the air conditioner. Pull the left-hand curtain out until it fits into the window channel. 2. Use a 1/8" drill bit to drill a starter hole through the top hole in the side curtain and into the window sash. Be sure your air conditioner does not fall out of the opening during installation or removal. The place where the power cord exits the air conditioner should be no more than 6 ft (183 cm) from a grounded outlet. Do not block the louvers in the front panel. Do not block the louvers on the outside of the air conditioner.

Make sure the bottom guide of the air conditioner drops into the notches of the basepan angle. Lower the window sash behind the top channel to hold the cabinet in place **NOTE:** Your model may differ from the one shown.

Insert one of the 31/32" screws through the top hole of the lefthand curtain and into the window sash. @@@@Window sash behind top channel C. @@@@ 3. @@@@This section explains proper air conditioner operation. @@@@Low speed fan operate with optional cooling. **HIGH** High speed fan operate with optional cooling. this automatically controls the temperature of indoor air. @@@@ 3. Use a vacuum cleaner to clean air filter.

@@@@@Close the front panel.

the air filter is removable for easy cleaning. @@Check the filter every 2 weeks to see whether it needs cleaning. **NOTE:** Do not operate the air conditioner without the filter in place. @@Clean the front panel with a soft, damp cloth. 3.

Air dry the front panel completely. @@Before calling for service, try the suggestions below to see whether you can solve your problem without outside help. @@If the problem continues, call an electrician. see "Electrical Requirements." The Power button has not been pressed or the Mode control knob is turned to Off.

Wait for power to be restored. Air conditioner seems to run too much The use of more efficient components may cause the air conditioner to run longer than an older model, but the total energy consumption will be less. Newer air conditioners do not emit the "blast" of cold air you may be accustomed to from older air conditioners, but this is not an indication of lesser cooling capacity or efficiency. refer to the efficiency rating (EER) and capacity rating (in Btu/h) marked on the air conditioner. The air conditioner is in a heavily occupied room, or heat producing appliances are in use in the room. Use exhaust vent fans while cooking or bathing and try not to use heatproducing appliances during the hottest part of the day. A higher capacity air conditioner may be required, depending on the size of the room being cooled. Air conditioner cycles on and off too much or does not cool room in cooling mode Air conditioner blows fuses or trips circuit breakers Too many appliances are being used on the same circuit. unplug or relocate appliances that share the same circuit. Time-delay fuse or circuit breaker of the wrong capacity is being used.

Replace with a time-delay fuse or circuit breaker of the correct capacity. Do not use an extension cord with this or any other appliance. You are trying to restart the air conditioner too soon after turning off the air conditioner. Wait at least 3 minutes after turning off the air conditioner before trying to restart the air conditioner.



[You're reading an excerpt. Click here to read official HAIER](http://yourpdfguides.com/dref/3624577)

[HWF05XCK-T user guide](http://yourpdfguides.com/dref/3624577)

<http://yourpdfguides.com/dref/3624577>

The air conditioner is not properly sized for your room. check the cooling capabilities of your room air conditioner. Room air conditioners are not designed to cool multiple rooms. There is excessive heat or moisture (open container cooking, showers, etc.) in the room. Use a fan to exhaust heat or moisture from the room.

Try not to use heatproducing appliances during the hottest part of the day. the louvers are blocked. Install the air conditioner in a location where the louvers are free from curtains, blinds, furniture, etc. The outside temperature is below 65°F (18°C). Do not try to operate your air conditioner in the cooling mode when the outside temperature is below 65°F (18°C).

The temperature of the room you are trying to cool is extremely hot. Allow extra time for the air conditioner to cool off a very hot room. Windows or doors to the outside are open. close all windows and doors. The Temperature control is not at a cool enough setting.

Disturbances in your electrical current can trip (Reset button will pop out) the power supply cord. @@@@ Level the air conditioner to provide a downward slope toward the outside to ensure proper drainage. see the Installation Instructions. NOTE: Do not drill a hole into the bottom of the metal base and condensate pan. " It may save you the cost of a service call. If you still need help, follow the instructions below. When calling, please know the purchase date and the complete model and serial number of your appliance. This information will help us to better respond to your request. You can find this information on the model and serial number label. See "Electrical Requirements" for the location of the model and serial number label.

Please record the model and serial number information below. Also, record the purchase date of your appliance and the store's name, address, and telephone number. Model Number _____ Date _____ Serial Number _____ Purchase _____ Store Name _____.



[You're reading an excerpt. Click here to read official HAIER HWF05XCK-T user guide](http://yourpdfguides.com/dref/3624577)
<http://yourpdfguides.com/dref/3624577>