



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HWR05XCK-L. You'll find the answers to all your questions on the HAIER HWR05XCK-L in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HWR05XCK-L
User guide HAIER HWR05XCK-L
Operating instructions HAIER HWR05XCK-L
Instructions for use HAIER HWR05XCK-L
Instruction manual HAIER HWR05XCK-L

Haier

ROOM AIR CONDITIONER
Use & Care Guide

ACONDICIONADOR DE AIRE PARA HABITACIÓN
Manual de Uso y Cuidado

CLIMATISEUR DE PIÈCE
Guide d'utilisation et d'entretien



Model:
HWR05XCK HWR05XCK-L

For questions about features, operation/performance, parts,
accessories or service call: 1-877-337-3639

Si tiene preguntas respecto a las características, funcionamiento,
rendimiento, partes, accesorios o servicio técnico,
llame al: 1-877-337-3639

Au Canada, pour assistance, installation ou service,
composez le : 1-877-337-3639

No.0010518321



[You're reading an excerpt. Click here to read official HAIER
HWR05XCK-L user guide
http://yourpdfguides.com/dref/3624591](http://yourpdfguides.com/dref/3624591)

Manual abstract:

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING. You can be killed or seriously injured if you don't immediately follow instructions. You can be killed or seriously injured if you don't follow instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. **IMPORTANT SAFETY INSTRUCTIONS WARNING:** To reduce the risk of fire, electrical shock or injury when using your air conditioner, follow these basic precautions: plug into a grounded 3 prong outlet. Do not remove ground prong.

Use two or more people to move and install air conditioner. Read and follow the instructions provided with any tools listed here. Check that all parts are included in parts package. Make sure you have everything necessary for correct installation. The location should provide: Grounded electrical outlet within 6 ft (183 cm) of where the power cord exits the air conditioner.

nOTE: Do not use an extension cord. Free movement of air in room to be cooled. Adequate wall support for weight of air conditioner. Air must be able to pass freely through the cabinet louvers. The electrical ratings for your air conditioner are listed on the model and serial number label.

@@ specific electrical requirements are listed in the chart below. @@This air conditioner must be grounded. @@@@If a mating outlet is not available, it is the customer's responsibility to have a properly grounded 3 prong outlet installed by a qualified electrical installer. NOTE: Your air conditioner's device may differ from the one shown. This room air conditioner is equipped with a power supply cord required by UL. @@Plug power supply cord into a grounded 3 prong outlet. 2. Press RESET (on some devices, a green light will turn on). 3. @@ 4.

@@The power supply cord is ready for operation. NOTES: The Reset button must be pushed in for proper operation. The power supply cord must be replaced if it fails to trip when the test button is pressed or fails to reset. Do not use the power supply cord as an off/on switch. A damaged power supply cord must be replaced with a new power supply cord obtained from the product manufacturer and must not be repaired. Remove tape and glue residue from surfaces before turning on the air conditioner. Rub a small amount of liquid dish soap over the adhesive with your fingers. These products can damage the surface of your air conditioner. NOTE: Your model may differ from the one shown. Slide the side curtain frame as close to the air conditioner as necessary to lock the side curtain to the frame.

Mark the center line on the inside windowsill. Slide the side curtain down the track until the curtain is aligned with the top and bottom of the air conditioner cabinet. Install the Window lock bracket behind the inner windowsill, With the short side of Window lock bracket as shown. Use the 2 wood screws 31/32" provided. The Window lock bracket helps to hold unit securely in place.

Be sure to place Window lock bracket edge flush against back of inner sill. 3. Slide the side curtain frame into the top channel on the top of the air conditioner and the track on the bottom of the air conditioner. Pull the left-hand curtain out until it fits into the window channel. 2.

Use a 1/8" drill bit to drill a starter hole through the top hole in the side curtain and into the window sash. Be sure your air conditioner does not fall out of the opening during installation or removal. @@Do not block the louvers in the front panel. Do not block the louvers on the outside of the air conditioner. center the air conditioner in the window. @@@@Window sash behind top channel C. @@@@ 3. @@Operating your air conditioner properly helps you to obtain the best possible results. This section explains proper air conditioner operation. **IMPORTANT:** If you turn off the air conditioner, wait at least 3 minutes before turning it back on.

This keeps the air conditioner from blowing a fuse or tripping a circuit breaker. Do not try to operate your air conditioner in the Cool mode when outside temperature is below 61°F (16°C). The inside evaporator coil will freeze up, and the air conditioner will not operate properly. Press MODE until you see the indicator light glow for the desired setting. The display shows the current room temperature. Remove the clear plastic film from the control panel. The Power indicator light will turn on. Press FAN SPEED until you see the indicator light glow for the desired setting. After the air conditioner is turned on for the first time, the display will show the current room temperature and the fan is set to Low speed. After the unit is plugged in, but before the unit is turned on, press and hold the POWER button for 5 seconds to switch the temperature display between Fahrenheit (F)and Celsius(C) degrees.

@@ 6. @@ 7. Timer On indicator light will remain on. @@@@NOTE: Air conditioner can be either on or off. Press the TEMP/TIME down arrow button to lower the temperature.

@@@@@@ 3. @@@@After 5 seconds, Timer OFF indicator light will remain on. @@@@Timer On indicator light will remain on. @@Press the TEMP/TIME down arrow button to lower the temperature. @@@@ Timer To set the Timer for a 1-hour to 24-hour delay before the air conditioner is turned off (the air conditioner must be On): @@ 3.

@@ To set Timer to turn on the air conditioner, keeping previous settings: @@ 4. @@@@Timer On indicator light on the air conditioner control panel will remain on. NOTE: Air conditioner can be either on or off. @@When your air conditioner is operating normally, you may hear sounds such as: @@ 3.

@@@@@Vibrations or noise due to poor wall or window construction. Your new air conditioner is designed to give you many years of dependable service. This section tells you how to clean and care for your air conditioner properly. 3. Use a vacuum cleaner to clean air filter. If the air filter is very dirty, wash it in warm water with a mild detergent.

@@@@Close the front panel. the air filter is removable for easy cleaning. @@Check the filter every 2 weeks to see whether it needs cleaning. NOTE: Do not operate the air conditioner without the filter in place. @@Clean the front panel with a soft, damp cloth. 3. Air dry the front panel completely.

@@@@@@If the problem continues, call an electrician. see "Electrical Requirements. @@Wait for power to be restored.

@@Newer air conditioneore Address _____ Store Phone _____ Keep this book and the sales slip together for future reference. If you need replacement parts If you need to order replacement parts, we recommend that you use only factory-specified replacement parts.



[You're reading an excerpt. Click here to read official HAIER](http://yourpdfguides.com/dref/3624591)

[HWR05XCK-L user guide](http://yourpdfguides.com/dref/3624591)

<http://yourpdfguides.com/dref/3624591>

Factory-specified replacement parts will fit right and work right because they are made with the same precision used to build every new appliance. To locate factory-specified replacement parts in your area, call your nearest designated service center. Whenever you call to request service on your appliance, you need to know your complete model number and serial number.

If you need further assistance, you can write with any questions or concerns to: Haier America 1356 Broadway New York, NY 10018 Please include a daytime phone number in your correspondence. Manufacturer-authorized service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. If you need further assistance, you can write with any questions or concerns to: Haier America 1356 Broadway New York, NY 10018 Please include a daytime phone number in your correspondence. Manufacturer-authorized service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the Canada. This warranty covers all defects in workmanship or material for the mechanical and electrical parts (including labor costs) contained in this product for a period of 12 months from the date of purchase. for commercial or rental application , the warranty is 90 days. @@@@Haier America will repair or replace any mechanical, electrical part or the compressor, which proves defective in normal household use for a period of 12 months. Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance or incorrect current or voltage. Damage from other than household use. @@ decorative trims or replaceable light bulbs. @@ 9. @@ 10. @@The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages. Some states do not allow the exclusion of incidental or consequential damages, so this limitation may not apply to you.

Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty covers units within the continental United States, Canada and Puerto Rico. .



[You're reading an excerpt. Click here to read official HAIER HWR05XCK-L user guide](http://yourpdfguides.com/dref/3624591)
<http://yourpdfguides.com/dref/3624591>