



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER HWR08XC3. You'll find the answers to all your questions on the HAIER HWR08XC3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER HWR08XC3  
User guide HAIER HWR08XC3  
Operating instructions HAIER HWR08XC3  
Instructions for use HAIER HWR08XC3  
Instruction manual HAIER HWR08XC3

## Haier

What The World Comes Home To™

Room Air Conditioner  
**Electronic Control**  
Climatisation de Pièce  
**à Commande Electronique**  
Acondicionador De Aire  
**Control Electrónico**



**User Manual**  
**Manuel d'utilisation**  
**Manual del Usuario**

Read instructions before installing.  
Call 1-877-337-3639 for questions on parts and services.  
Lire les instructions avant de procéder à l'installation.  
Pour toutes questions concernant les pièces et l'entretien, composez le 1-877-337-3639.  
Lee las instrucciones antes de instalar el aparato.  
Llámenos al 1-877-337-3639 si tiene preguntas sobre repuestos o servicios.

0010552275



[You're reading an excerpt. Click here to read official HAIER HWR08XC3 user guide](http://yourpdfguides.com/dref/3178879)  
<http://yourpdfguides.com/dref/3178879>

**Manual abstract:**

2 . Press itest ibutton, unit should trip. 3. Press ireseti button again for use . Do not use if above test fail. @@4 English 5 English 4-way airflow 6 English 7 English 8 English 9 English t I 10 English 11 English 12 English 13 English 14 English 15 English Parts Part Supplied s window seal gasket curtain sash screws 31/32" Remote control i0 be C2 ar R5 ty 2i basepan angle curtain attachment screws 13/32" 1f and right et side curtains 16 English Installing Unit into A Window Window Opening Requirements The air conditioner is designed to fit into double or single hung sash type windows. Each of the units comes with an installation kit that provides adjustable mounting louvers, to fill the gaps between the sides of the unit, and the window frame. The chart below reflects the dimensions of the units with, and without installation kits. Measure your window opening width and compare it to the chart below to ensure that it meets the minimum and maximum window width requirements. B C A D Model Dimension A(inch) B(inch) C(inch) D(inch) Max D(inch) Min Case High Case Width Case Depth HWR08XC5-T 13 16 20 1 4 5 8 Unpack unit on floor next to installation location. Slide left-hand curtain assembly into left ends of top and bottom rails. Repeat for right-hand curtain assembly. Fasten curtain retainer strips to sides of outer case with six 13/32" screws. 1 ASSEMBLE CURTAINS Caution: Never expose plastic front or grille to extreme temperatures. 17 English 2 PREPARE WINDOW FOR INSTALLATION Inspect window track, sash, and sill for its ability to support the weight of air conditioner. Measure width between window moldings to ensure Instant Mount will fit window frame. @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ Lower sash until it rests behind front flange of top rail. Bottom rail must rest behind window sill. Back front attachment screw out several turns and slip Basepan Angle over screw head. Snug screw with angle resting on window ledge. Install Two 31/32" screws through angle into window ledge. Repeat for opposite side. About 5 Bottom rail Curtain assembly cut away for clarity. 31/32" screws Basepan angle 18 English 6 19 English Always unplug your air conditioner before cleaning. The air filter behind the front grille should be checked and cleaned at least once every 2 weeks or more often if necessary. To remove: 1. Open the inlet grille downward by pulling out the top of the inlet g 2. Remove the air filter from the front grille assembly by pulling the up slightly. o o 3. Clean the filter with warm, soapy water below 40 C(104 F). 4. @@DO NOT use your air conditioner without the air filter in place. .



[You're reading an excerpt. Click here to read official HAIER HWR08XC3 user guide](#)  
<http://yourpdfguides.com/dref/3178879>