



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER LET22C430. You'll find the answers to all your questions on the HAIER LET22C430 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER LET22C430
User guide HAIER LET22C430
Operating instructions HAIER LET22C430
Instructions for use HAIER LET22C430
Instruction manual HAIER LET22C430

Haier

LCD TV RECEIVER

USER MANUAL

Please read this manual carefully before using your television and keep this manual in a good place for future reference.

MODEL:
LET19C430
LET22C430
LET24C430



[You're reading an excerpt. Click here to read official HAIER LET22C430 user guide](http://yourpdfguides.com/dref/5130452)
<http://yourpdfguides.com/dref/5130452>

Manual abstract:

MODEL: LET19C430 LET22C430 LET24C430 Thanks for buying this 19"/22"/24" LED LCD TV. This guide will help you set up and begin using your TV. 19" HD Ready LED LCD TV. Remote control AAA battery x2 Instruction Manual Quick start guide 22" Full HD 1080P Digital LED LCD TV Remote control AAA battery x2 Instruction Manual Quick start guide 24" Full HD 1080P Digital LED LCD TV Remote control AAA battery x2 Instruction Manual Quick start guide P.02 P.03 WARNINGS AND CAUTIONS Warning High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel. Caution Do not trap the power supply cord under the television receiver. Warning To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.

Caution Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it should fall. Warning Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver. Caution Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it should fall. Caution When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet. Caution Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.

Dim:515*320mm(□□□□□□ Caution If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous. P.04 01 Safety and warnings 02 Introduction CAUTION Never tamper with any components inside the TV, or any other adjustment controls not mentioned in this manual. All LED-TVs are high voltage instruments. When you clean up dust or water drops on the LED PANEL or CABINET, the power cord should be pulled out from the receptacle, then wipe the TV with a dry soft cloth.

@@@Soft and indirect lighting is recommended for comfortable viewing. @*Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure. *Do not cover the ventilation openings when using the TV. Main features □ Used as Television, display terminal, PC display□ □ High luminance, wide viewing Angle□ 3 HDMI interface and SCART Interface□ 4 NICAM□ Main parameter Panel Power supply Audio Output Power (THD 7%) Terminals: 19" / 22" / 24" DC 12V, 3A (Power adaptor supplied) 2x3W Analog RGB(PC)x1 High-Definition Multimedia Interface (HDMI) x 2 Video Input x1 Audio Input x2 USB Input x1 YPbPr x1 Mini SCART x 1 Composite Video input >=350 YPbPr >=400 Horizontal definition (TV line) P.

05 PC PRESET MODE RESOLUTION 1 2 3 4 800*600 640*480 1024*768 1280*1024 V.Freq.(Hz) 60 60 60 60 H.Freq.(KHz) 37.88 31.47 48.36 63.98 P.06 02 Introduction Base Stand Assembly Instruction 1.

Place the TV with the display side down on a flat surface. Use a cloth to protect. Locate the bottom at the stand. 2. Fix the bottom with turning the screw tightly on the stand.

INSTALLATION NOTES Locate the TV in a room where light does not strike the screen directly. Total darkness or a reflection on the screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing. Allow enough space between the TV and the wall to permit ventilation. Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure.

P.07 WALL MOUNTING INSTALLATION GUIDELINES This television can be wall mounted as follows: 1. Place the LED LCD Television onto a solid surface. Please place some soft material over the front of the screen to protect it from any damage. 2. Remove the screws from the lower part of the television, where the base joins to the TV, and take away the stand (put the stand somewhere safe for future use). 100mm P.08 02 Introduction 3. Use the four screws provided to fix the TV onto a wall mounting bracket (not included) via the four VESA standard holes on the back of the television. 100mm Remote Control Front control panel SOURCE MENU CH+ CH- 3 1 2 VOL+ VOLSTANDBY 1 2 3 Remote control sensor.

Indicator LED: BLUE: POWER ON. RED: STAND BY. Key board. 1 2 3 SOURCE MENU CH+/CH- 4 5 VOL+/VOL- Display the input source menu. Display main MENU. In TV mode, press CH+ or CH- to change the channel up and down. In MENU, press CH+ or CH- to select items. In standby mode, it can Turn on the TV. Adjust sound level. In MENU, adjust the item that you Selected.

STANDBY Rear/Side Sockets AV L R Y Pb Pr HDMI2 1 2 3 4 5 COMMON INTERFACE (CI) HDMI1 USB PC AUDIO SCART VGA ANT 6 1 2 3 4 5 6 AV L/R AUDIO DC Power Source YPbPr HDMI2 HDMI1 7 input input input input input input 8 9 10 11 12 7 8 9 10 11 12 USB PC AUDIO COMMON IN INTERFACE(CI) SCART VGAINPUT ANT input input Input Input Input input P.09 P.10 02 Introduction COMMON INTERFACE The common interface (CI) slot is designed to accept the conditional Access (CA) Module and Smart card in order to view the pay TV programmes and additional services. Contact your Common Interface service provider to get more information about the modules and subscription. Please noted that CA modules and smart cards are neither supplied nor optional accessories from us.

Auto Tuning DTV Manual Tuning ATV Manual Tuning Programme Edit Signal Information > CI Information Software Update(OAD)Off Software Update(USB) < CHANNEL P.11 03 Remote control POWER MUTE 1 AUDIO 13 1 2 5 8 3 RECALL 14 15 0 SOURCE 2 4 7 TV MENU 6 9 3 16 17 4 OK 5 CH . LIST SOUND EXIT 18 19 20 + + PIC 6 7 8 VOL CH _ SLEEP ASPECT _ 21 FREEZE TV/RADIO TEXT 22 23 9 EPG FAV INFO 10 11 24 12 REVEAL HOLD LIST INDEX SUBPAGE SIZE MIX SUBTITLE 25 30 31 32 33 REC/REP 26 27 28 29 1:POWER:To set the TV to standby or power on. 2:NUMERIC KEY: For direct access to channels. 3:TV MENU:To display TV menu.

4:CURSOR:To move within the menu. 5:CH.LIST:To display the channels list. 6:VOL+/- :To adjust sound level. 7:PIC:To switch picture mode. 8:SLEEP:S et timer to turn off the TV. 9:FREEZE : To freeze the picture. 10:EPG:To display information about the program being viewed and what's on next in DTV mode. 11:FAV:To access your favourite channels list in TV or DTV mode. 12:TELETEXT KEYS: Please refer to next page.

13:MUTE:To disable or enable the sound output. 14: AUDIO:To select the available audio /language of TV programs . 15: RECALL: To access the previously viewed channel. 16: SOURCE: To select input source. 17: OK:To confirm selection. 18: EXIT:To return to the previous menu or exit menu. 19: SOUND:To switch sound mode. 20: CH+/CH-:To access the next or previous channels. 21: ASPECT: To change picture aspect ratio.



[You're reading an excerpt. Click here to read official HAIER](#)

[LET22C430 user guide](#)

<http://yourpdfguides.com/dref/5130452>

22:TV/RADIO:In DVB mode, it is used to switch between digital TV channels and radio stations.

Display/remove the programme information. 23: TEXT:To enter or exit TELETEXT. 24: INFO:To display information about the channel being viewed or further information about the program when in small EPG screen in DTV mode. 25: SUBTITLE:To switch between different subtitles in DTV mode. 26. To skip to the next file in USB mode. 27. To skip to the previous file in USB mode. 28. REC/REP:Press to record the TV program you are watching in DTV Mode or press to repeat play in USB Mode.

29. Stop the media player in USB mode. 30. To scan in reverse, during USB, USB playback. 31. To scan in forward, during USB, USB playback. 32. Play the media player in USB mode. 33. Pause the media player in USB mode,time shift in DTV mode.

P.12 03 Remote Control REMOTE CONTROL TELETEXT Teletext is an information system broadcast by certain channels which can be consulted like a newspaper. It also offers access to subtitles for viewers with hearing problems or who are not familiar with the transmission language(cable networks, satellite channels, etc.) Press: You will obtain: This is used to call or exit teletext modes. The summary appears with a list of items that can be accessed. Each item has a corresponding 3 digit page number. If the channel selected does not broadcast teletext, the indication 100 will be displayed and the screen will remain blank (in this case, exit teletext and select another channel). E TEXT Enter the number of the page required using the 0 to 9 up/down. SELECTING A PAGE Example: page 120, enter 120. The number is displayed top left, the counter turns and then the page is displayed.

Repeat this operation to view another page. If the counter continues to search, this means that the page is not transmitted. Select another number. Coloured are as are displayed at the bottom of the screen. @@@@This returns to the contents page (usually page 100).

@@This key is used to stop or resume subpage acquisition. The indication appears top left. To freeze the page. To display or hide the concealed information (games solutions). @@@@This returns to the contents page (usually page 100).

@@Move the cursor to the program, press teletext green butt disk selection menu. Select the media file by pressing or , then the preview frame will pop up.Press the button to play the media file in full screen.When the media file (photo,music, Movie, or text type) is playing, press the OK or Info button can display the control bar. 00:00:33/00:04:22 INFO 1. @@Schedule 2. @@Press or EXIT button to exit the control bar. @@@@Note: please check the term "speed". @@If not, please format the device, to make sure the device available. @@If the space is not big enough, the record time should be shorter, depends on the room on the device.

During the "check PVR File System" checking, please do not take any other operation until it finished. Select Disk Check PVR File System USB Disk Format Time Shift Size Speed Free Record Limit 6 Hr. MENU C: Start OK Select Disk:select which disc to save the record file. Select Disk USB 0 C: The recordings have to be done with TV PVR system. It can only be played in the same TV, not in other kind of devices (computer, DVD, etc...) which doesn't be compatible with .TS. Format.

See that in order to carry out any kind of recording, the TV will oblige you to format the connected device to store the recording. WARNING. WHEN YOU FORMAT, THE EXTERNAL DEVICE WILL LOSE ALL THE FILES AND INFORMATION YOU STORAGE IN THE DEVICE. From OPTION MENU enter into PVR File System as below: OSD Language English Audio Languages Subtitle Language Country UK PVR File System > Restore Factory Default Disk Check PVR File System: check if the PVR File System set up in the USB device or not. Format: File System Size PVR File System Type Hi Speed FS PVR File System Size SD 104 Mins HD 29 Mins All < OPTION MENU File System Size PVR File System Type PVR File System Size SD 104 Mins HD 29 Mins FAT32 All OK P.

18 04 Operation (Suggest to format the format the device by "High Speed Fs...", which can speed up the record.) Format disk Format disk Warning! All data will be lost.

2.Record the program As playing the DTV source, choose the channel and click "record", the record frame will pop up. Click "record" again, the record frame will disappear and the "REC" icon still on the left top. It will disappear until you click "stop". 3.Play the record Start Exit Format disk In "USB", the record program will be saved in the folder "_MSTPVR" on the device. 1. The USB storage size needs to be the size between 4GB to 500GB. 2. Video may become pixelated when Video bit rate is too low.

Do not unplug USB device. Formatting,please wait below menu appear after Format finish: Select Disk Check PVR File System USB Disk Format Time Shift Size Speed Free Record Limit MENU C: Checking Pass Pass All Checking 6 Hr. 3. Not all USB devices are compatible. Below is a list of recommended USB drvies.Models that are not listed may be compatible, but it is not guaranteed to work. The USB support list are the same as Timeshift function ,see page 21 Select Disk Check PVR File System USB Disk Format Time Shift Size Speed Free Record Limit MENU C: SUCCESS Pass Pass All 6 Hr. HD support 2048 KB/s If you select the "Hi Speed FS "format mode, then you can change the time shift size: Time Shift Size Time Shift Disk Size SB 14 Mins HD 4 Mins 512 MB P.19 9.Timeshift function I.

Prepare to record the program This TV allows you to pause and record the currently watched digital program to a USB storage device, and to resume to the point where it was paused. 00:00:33/00:04:22 Play FB FF Prev. Next Pause Stop NOTE: Formatting a USB 2.0 storage device will be needed. Save your original data before formatting.

All the data stored in the USB device will be erased after formatting. Sleep timer will be suspended if it had been set before activating the Time Shift function.

NOTE: Please do not unplug the USB storage device when the Time Shift function is activated. Approximately 4GB of memory buffers about offer 140 minutes. USB Drive Storage Format Select to format the USB device and allocate the amount of space for the Time Shift function.

NOTE: The format process will take at least 2 minutes. Please do not turn off the power or remove the USB device during formatting. Record a paused DTV program to USB storage device 1. While in the DTV input source, insert USB storage device to the USB port on the side of your TV. 2. Press PAUSE 33 to start Time Shift function. The TV program paused. The Time Shift OSD appears, and starts recording. 3. Press STOP 29 to stop Time Shift function and stop recording program.

SUBPAGE SIZE MIX SUBTITLE REC/REP 33 29 P.20 04 Operation During formatting, a speed test will be done on the USB device. If it fails, it means the USB device may not support the Time Shift function. Time Shift limitations: 1.



[You're reading an excerpt. Click here to read official HAIER LET22C430 user guide](http://yourpdfguides.com/dref/5130452)

<http://yourpdfguides.com/dref/5130452>

@@2. @@3. @@It will abort once the signal is lost. 4. Do Not remove the signal source during Time Shift operations. 5.

@@6. Sleep timer will be terminated if it had been set before Time Shift. 7. Video may become pixelated when Video bit rate is too low. 8.

Not all USB devices are compatible, The USB hard disk drive electricty should be < 500MA. Below is a list of recommended USB drvies. Models that are not listed may be compatible, but it is not guaranteed to work. 9. This feature is not available for all digital TV, such as scrambled or audio only channels.

P.21 05 Trouble shooting Trouble phenomenon Symptom Inspection Check Picture Audio antenna position, direction or connection Snow Noise Ghost Normal audio antenna position, direction or connection Interference Noise electronic equipment, car/ motorcycle, fluorescent light Normal Picture Mute Volume (check if mute is activated or if the audio system connections are not correct) No picture Mute Power cord is not inserted Power switch is not opened Contrast and brightness/volume setup Press standby key on the remote control for inspecting No colour Normal audio Colour control Picture breaking up Normal audio or weak retune channel No colour Noise TVsystem P.22 05 Trouble shooting Specification Colour system PAL-B/G ΠIΠD/K SECAM- B/GΠ D/KΠLΠL' BG, DK,

I, L, L' SCART, YP b Pr, AV, VGA, HDMI, USB. 480i/p, 576i/p, 720p, 1080i, 1080p 480i/p, 576i/p, 720p, 1080i, 1080p DC 12V, 3A (Power adaptor supplied) 3W+3W Sound system Video input Y/Pb/Pr HDMI Power supply Audio output Environment conditions Working temperature: +5 C - +35 C Working humidity: 20% - 80% Storage temperature: -15 C - +45 C Storage humidity: 5% - 90% User manual Remote control Battery (x2) Quick start guide Accessory

* The part specifications of this TV set provided here are for reference only. Difierences may occur as product technology is updated. Design and specifications are subject to change without notice. Scart input/output description TV Source ATV DTV Other Source SCART Out ATV DTV ATV P.23 .

* The part specifications of this TV set provided here are for reference only. Difierences may occur as product technology is updated. Design and specifications are subject to change without notice. Scart input/output description TV Source ATV DTV Other Source SCART Out ATV DTV ATV P.23 .



[You're reading an excerpt. Click here to read official HAIER](#)

[LET22C430 user guide](#)

<http://yourpdfguides.com/dref/5130452>