



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER LT22R3CW. You'll find the answers to all your questions on the HAIER LT22R3CW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HAIER LT22R3CW
User guide HAIER LT22R3CW
Operating instructions HAIER LT22R3CW
Instructions for use HAIER LT22R3CW
Instruction manual HAIER LT22R3CW

Haier

DIGITAL LCD/LED LCD TELEVISION
TELEVISION NUMERIQUE ECRAN LCD/
LED LCD
DIGITAL LCD/LED LCD-TV
TELEVISORE LCD/LED LCD DIGITALE
DIGITALE LCD/LED LCD-TELEVISIE

INSTRUCTION MANUAL
MANUELD'UTILISATION
BEDIENUNGSANLEITUNG
MANUALE DI ISTRUZIONI
GEBRUIKSAANWIJZING

Please read this manual carefully before operating the unit, and keep it for future reference.

Lire attentivement ce manuel avant d'utiliser la télévision. Le conserver en vue d'une utilisation ultérieure.

Lesen Sie diese Bedienungsanleitung vor der ersten Verwendung dieses Gerätes bitte sorgfältig durch und bewahren Sie sie für zukünftiges Nachschlagen auf.

Leggere attentamente questo manuale prima di mettere in funzione l'apparecchio e conservarlo per farvi riferimento in futuro.

Neem de gebruiksaanwijzing zorgvuldig door voordat u het televisietoestel in gebruik neemt en bewaar deze voor toekomstige referentie.



[You're reading an excerpt. Click here to read official HAIER LT22R3CW user guide](http://yourpdfguides.com/dref/3244352)
<http://yourpdfguides.com/dref/3244352>

Manual abstract:

@@@ *If necessary, please contact authorized after-sales services. Could result in serious injury by high voltage. @@ WARNING: To avoid fire or electric hazards, never place your television receiver in an area with heavy moisture. Attention should be paid to avoid accidental scratches or impacts onto the screen. CAUTION: Please read this manual carefully before using your television and keep this manual in a good place for future reference. To achieve the best performance of your television, read this User's Manual carefully and properly store it for future reference. TruSurround XT® creates a truly immersive surround sound experience with rich bass and clear dialog from only two speakers. WARNING To prevent the spread of fire, keep candles or other open flames away from this product at all times. The product should be tightly fixed to avoid drop damages and even fire. To avoid fire hazards, do not use this product under direct sunlight or closely to heat sources.

Do not locate the product close to water or oil, which may cause fire hazards. Unplug the power supply and antenna of the product when there is a rainstorm, especially Thunderstorm. Do not use damaged or worn electric plugs and keep electric cord away from heat sources to avoid electric shocks or fire hazards. Do not connect excessive sockets in parallel or share the same socket by multiple plugs to avoid fire hazards. Keep the product away from a transformer or heat source to avoid fire hazards.

Disconnect the product from power supply and contact authorized after-sales service if abnormal sound is heard in the product. Don't use or store inflammable materials near the product to avoid explosion or fire hazards. Don't place the product in a humid area to avoid fire hazards. The antenna of the product should be away from electric cable to avoid electric shocks. Never touch the plug when your hand is wet as this might cause electric shocks. Always make sure that the television is well plugged as poor electric connection might cause fire. When antenna is used, measures should be taken to prevent water from flowing down along the cable into the television. Unplug the television, use soft fabric, never chemicals, if you are going to make cleaning of the product. The plug and electric cable must be kept clean to avoid electric shocks or fire hazards. Disconnect the television from power supply and antenna when there is a rainstorm or thunderstorm to avoid electric shocks or fire hazards. Carefully place the TV screen face down on a table. We suggest that you place the wrapping material from the TV package on the table top to protect the screen from damage. Position the stand with the bottom of the TV as shown below. Push the stand onto the TV. Attach the screws from the bottom of the stand to the TV. (Just take the TV with DVD for example, please see the real.

Call the input Source menu/Confirm button when operating menu. Toggles between all the available input sources. Press to see an on-screen menu of your TV's features. When using the remote control, aim it towards the remote sensor on the TV. Connect your aerial to the back of the TV into the ANTENNA IN socket. Turn on the DVD player and insert a DVD. To improve picture quality in a poor signal area, use a signal amplifier (not supplied). There are two ways in which you can connect a DVD player or VCR to your TV. Make sure that both the TV and DVD player or VCR are switched off before you connect them.

You can use your TV as a monitor for your personal computer by connecting it with a VGA cable (not supplied). Turn the power off on your TV and PC.

Turn on the power of the TV firstly and then the PC. Press the button on the TV or TV remote control to set the video input mode to VGA. Once the image shows, if there is noise present, change the VGA mode to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. Turn on the power of the TV first, then the VCR. Connect the scart lead from the external device (DVD player, Set-top box or games console) to the TV scart socket.

About your LCD LED LCD TV About your LCD //LED LCD TV / Getting Started Close the cover of the battery compartment. Confirm there is no object between the remote control and the remote sensor of the TV set. Sunshine or other strong light will interfere with the signal sent by the remote control. In this situation turn the TV set to avoid the direct light source. Do not put the remote control in direct heat or in a damp place as you may damage the remote. If your TV is to be stored for a period of time, remove the batteries from the remote control. You can mount your TV onto the wall by using a wall bracket (not supplied). Use M4/M6 machine screws (4 pcs) to screw the TV onto the bracket (not supplied). Place the remote control face down, then open the cover of the battery compartment. (The + and - symbol of the battery must match with the marks on the remote). You will need to place your TV near your plug socket (so the power cable can comfortably reach) and within reach of your aerial socket or extension lead. Insert your TV aerial lead into the Antenna input at the side of the TV. Insert the batteries into the remote control. Make sure they are inserted the right way around, matching the polarity as indicated inside the battery compartment. A red flashing light will appear in the corner of the screen.

press POWER on the remote control. The TV will turn on and the red light will turn blue. This may take a few moments. Select your chosen language when prompted from the list that will appear on screen. Use the button to scroll to the language you want and press to confirm. Press the MENU button, you can choose to skip the TV /DTV Search or not. If you have attached a DVD player or similar external device to the TV, you will need to tell the TV to display the content from it. Simply press SOURCE which will bring up the source menu in the left corner of the screen, use the and button to highlight the required source and press OK select. For details of how to plug in other equipment see GET TO KNOW YOUR TV on page 5. Note It may take a few moments to complete the Auto Search.

Once a channel is located, you can press OK button to save it. Press button to select Search item, press button is used to select the higher frequency channel.

Press button is used to select the lower frequency channel. And then select Storage To, press button to select the position number you want the channel on.

Once a channel is located, you can press red button to save it.

Follow the below steps when you need to have a manual search. Button to select "Sound System", then button to select the correct sound system. If the picture and/or sound are poor, try using the FINE TUNE feature. Do not use this feature unless reception is poor. Repeat above steps A-C, then press select the Fine Tune item.

Press button repeatedly to carry out fine tune, till the best picture and sound are obtained, then loosen the button.



[You're reading an excerpt. Click here to read official HAIER LT22R3CW user guide](http://yourpdfguides.com/dref/3244352)
<http://yourpdfguides.com/dref/3244352>

If you want to pause the picture which is being played, press the PLAY/PAUSE button again. Press "ZOOM" to magnify the picture. When the picture is enlarged, press "/" and "/" to move the picture.

Note The menu display varies with the photo name and pixel in your equipment. Press "STOP" to stop playing, or return to the previous menu, and press "BACK" repeatedly to return to the main menu. Note You can choose the photos or music in different files to play together. Press "OK" to confirm the selection and enter the music file list. Press "OK" to confirm the selection and enter the picture file list.

Press "/" and "OK" button to select the music you want to play, then press "PLAY/PAUSE" button to play the music. Press "STOP" to stop the music being played, when the current interface is the music being played. to return to the main menu, just press "BACK" repeatedly. Note You can enjoy the music and the picture at the same time. Press "/" to select the picture you want to play, press "OK" to confirm, and then press "PLAY/PAUSE" button to play the pictures.

Note You can enjoy the music and the text at the same time. Press "OK" to confirm the selection and enter the movie file list. Insert the USB device with FAT32 format into the USB1 connector. Press "/" and "OK" button to select the movie you want to play, and then press "PLAY/PAUSE" button to play the movie. Press button to select disk if your device has several disks. Press "/" and "OK" button to select the text you want to play, and then press "PLAY/PAUSE" button to play the text. Using the features Note The system will format the whole device and if your device size is bigger than 1GB, you can set the size which is used for time shift. IMPORTANT USB device should be format as FAT32 format by your PC before insert to the USB connector. Format may take several minutes and the time is depending on the memory size. You can stop the time shift program being played by pressing the STOP button.

Note If you select all the size format for time shift, you can not do any recording. And you can see the speed data after the success checking. Note Only have to format when you use the device for record for the first time. The minimum device size for record is 1GB. 5MB/s REC is safe at SD stream Device bit-rate < 600KB/s REC is bad for REC The system can not work normally if the USB device have the listing problem below: The device has bug. MENU button to record the program being played, and press D. Using the features Press button to select the content you recorded. Place the DVD in the disc slot with the DVD label facing away from you and the screen. Use the , , and buttons to navigate around the DVD menu to highlight the play option and then press PLAY/PAUSE. When the recorded program is being played, you can not delete it.

Some discs will remember the moment at which the DVD was stopped, so press PLAY/PAUSE to recall the moment and continue playback. Press the button twice to stop completely and clear the memory. To move forward through a disc more quickly, press the button. to rewind through the disc, press the button. Press the or button repeatedly to cycle through the available speeds, which appear in the top left corner of the screen: 2X, 4X, 8X, 16X, 32X and normal playback speed.

During playback press the button to skip to the next scene on the disc, or press to skip to the previous one. If you forget the password, you can always input 1369 to regain control. Press SEARCH and use the numerical keys to enter the chapter number you wish to go to and press PLAY/PAUSE. You can press it repeatedly to further enlarge the picture. In zoom mode use the , , and buttons to display a different section of the enlarged picture on the screen.

During playback press PROGRAM to move directly to a section or programme on the DVD. Press the digit buttons to select the programme number that you want. When finished, move the cursor to select START. the DVD will jump directly to that section and begin to play. @@ Press repeatedly until your desired subtitle language is shown. @@@@ (Valid for discs possessing this function. Using a disc recorded in multi-angle you can view the scene from different angles, for example, front, side, whole view and exterior scene. Some DVD have multiple camera angles for some or all scenes. press the ANGLE button to change the camera angle. Different camera angles may include: front, side, whole view or exterior.

CALL button repeatedly different OSD indicator will be displayed for different types of disc DVD, CD etc. Press this button to return to the previous menu item. Insert a JPEG CD in the same way as you would a DVD or Audio CD, with the label facing away from you. the CD will load and a menu of the disc's contents will appear on screen. Use the and buttons to highlight the folder and picture you wish to view and press PLAY/PAUSE. Press the or button to skip to the next image or return to the previous one. Wait three seconds before pressing the button again, to cycle through the options. Press this button to return to the title menu on some DVD. Use the , , and buttons to navigate around the menu. Insert a CD in the same way as you would a DVD, with the label facing away from you.

the CD will load and a menu of the disc's contents will appear on screen. Use the and buttons to highlight the track you wish to play and press PLAY/PAUSE, or just press PLAY/PAUSE to listen to the whole CD from the beginning. You can stop, pause, fast forward or fast rewind a CD in the same way as a DVD. You can also use the REPEAT button to repeat a track, folder album or the contents of the whole disc. press repeatedly to select what you would like to repeat.

You can also use the A-B function to repeat a certain section of a track or CD. No picture in some channel Check out of picture and sound systems.

Disconnect the television from power supply and 10 seconds later, connect the television to the power supply. Spots with some or all pictures To assist in location of possible faults use the help guide below: Verify if the television is properly plugged in. Verify if the television has a proper supplied power source. verify if electricity is available. Verify if correct signals are input. operate the remote to change signal input to correct input. Restart the television if power supply is interrupted. Note If the fault can not be repaired using the above guide consult with your local authorized service centre. the TV set must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV set has dangerous voltages in side that may cause a fatally or fire. No picture, no sound 100% Press EXIT to cancel download Up dating in progress - Do not turn off the TV 13% VIEW / Swap Channel V+/V- : Lautstärke P+/P-: Programm Stummschaltung Menü GUIDE-Taste (EPG - nur bei Digital-TV) Favoritenliste ok Cursor-Bewegungstaste Zurück (nur für USB) OSD verlassen WIEDERHOLEN (nur für DVD, USB, REC & Timeshift) / ABBRECHEN-Taste Zoom (nur für DVD & USB) / Videotext-Index (nur für TV) / REC-Index Abspielen / Pause (nur für DVD & USB) / Timeshift Stop (nur für DVD, USB, REC & Timeshift) Press to jump back and forth between two channels Zurückspulen (nur für DVD, USB, REC & Timeshift) Vorspulen (nur für DVD, USB, REC & Timeshift) Vorherige (nur für DVD, USB, REC & Timeshift) Nächste (nur für DVD, USB, REC & Timeshift) DVD Setup / Text DVD Titel / Videotext-Mix DVD Suche / Videotext-Subcode DVD 10+ / Videotext halten DVD Programm / Videotext zeigen DVD A-B Wiederholen / Videotextgröße DVD Aufrufen / Videotextmodus DVD Winkel / Videotextzeit (Just take one TV with DVD for example, please see the real) 100% Press EXIT to cancel download Up dating in progress - Do not turn off the TV 13% 100% Press EXIT to cancel download Updating in progress - Do not turn off the TV 15% .



[You're reading an excerpt. Click here to read official HAIER](http://yourpdfguides.com/dref/3244352)

[LT22R3CW user guide](http://yourpdfguides.com/dref/3244352)

<http://yourpdfguides.com/dref/3244352>