



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER RDE 350 AW. You'll find the answers to all your questions on the HAIER RDE 350 AW in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER RDE 350 AW**  
**User guide HAIER RDE 350 AW**  
**Operating instructions HAIER RDE 350 AW**  
**Instructions for use HAIER RDE 350 AW**  
**Instruction manual HAIER RDE 350 AW**

**User Manual and Installation Instructions  
Gas & Electric Dryer**

**User Manual and Installation Instructions  
Sèche-linge Genesis**

**Manual para el usuario e instrucciones  
de instalación. Secadora a gas y eléctrica**

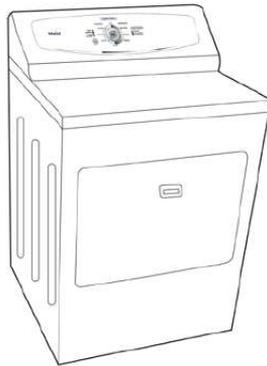

(Picture for illustration purposes only. Actual model may vary per model purchased.)

**Model #/ Modèle #/ Para Modelo de #  
RDE/RDG 350AW**

**Haier**

Quality • Innovation • Style



[You're reading an excerpt. Click here to read official HAIER RDE 350 AW user guide](http://yourpdfguides.com/dref/3981525)  
<http://yourpdfguides.com/dref/3981525>

**Manual abstract:**

Before beginning installation, carefully read these instructions. @@@@ 1 Canadian Electrical Code Part 1. @@@@For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life. Combustible materials, gasoline, and other flammable vapors and liquids must not be stored near the dryer. WHAT TO DO IF YOU SMELL GAS 1. Do not try to light any appliance 2. Do not touch any electrical switch. Do not use any phone in your building. 3. Clear the room, building, or area of all occupants.

4. Immediately call your gas supplier from a neighbor's phone. If you cannot reach your gas supplier, call the Fire Department. Installations must be performed by a qualified or licensed contractor, plumber, or gasfitter qualified or licensed by the state, province, or region where this appliance is being installed. WARNING - To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow the basic precautions, including the following: Read all of the instructions before using this appliance.

Don't dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry clean solvents or other flammable explosive substances as they give off vapors which could ignite or explode. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children. Before the appliance is removed from service or discarded, remove the door to the drying compartment. Do not reach into the appliance if the drum is moving.

Do not install or store this appliance where it will be exposed to water and/or to the weather. Do not tamper with controls. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-repair instructions that you understand and have skills to carry out. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturers of the fabric softener or product. Do not use heat to dry articles or products to eliminate static unless recommended by the manufacturers of the fabric softener or product. 11. Clean lint screen before or after each load. 12. Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust and dirt. 13.

Keep the dryer area clear and free from items that would obstruct the flow of combustion and ventilation air through the louvered panel located on the rear of the dryer. Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oil may contribute to a chemical reaction that could cause a load to catch fire. 16. @ @ 17. @ @ @ @ @ 19. Use the dryer only for its intended purpose: drying clothes. 20. Always disconnect dryer from electrical supply before attempting any service. Disconnect power cord by grasping the plug, not the cord.

21. Replace worn power cord and/or loose plugs. 22. To reduce the risk of electric shock or fire, do not use extension cords or adapters to connect dryer electrical power source. Risk of child entrapment.

Before you throw away your old dryer, take off the door so that children may not get trapped inside. Thank you for using our Haier product. This easy-to-use manual will guide you in getting the best use of your dryer. Remember to record the model and serial number. They are on a label in back of the dryer.

Model number Serial number Date of purchase Staple your receipt to your manual. You will need it to obtain warranty service. Clothes dryer installation must be performed by a qualified installer. 2. Install the clothes dryer according to the manufacturer's instructions and local codes. 3. To reduce the risk of severe injury or death, follow all installation instructions. Before starting installation, make sure that the gas shut off valve is in the off position. 2. All old gas connectors and gas piping should be discarded.

Power Supply 3 or 4 wire, 240 Volt, 1 Phase, 60Hz, AC (Canada - 240 Volt, 1 Phase, 60 Hz, AC) Power Supply Cord Kit (Not supplied when sold in US. Must be purchased to meet local electrical codes. ) The dryer MUST employ a 3-conductor power supply cord NEMA 10-30 Type SRDT rated at 240 Volt AC minimum, 30 Amp, with 3 open end Spade lug connectors with upturned ends or closed loop connectors and marked for use with clothes dryers. (When sold in Canada - 4-wire power supply cord provided and attached on dryer) Dryers being installed in a manufactured (mobile) home MUST employ a 4-wire power supply cord NEMA 14-30 type SRDT or ST (as required) rated to 240 Volt AC minimum, 30 Amp, with 4 open-end spade lug connectors with upturned ends or closed loop connectors and marked for use with clothes dryers. see Electrical Connections for more information on a 4-wire system. Outlet Receptacle NEMA 10-30R receptacle should be located so the power supply cord is accessible when the dryer is in the installed position. Power Supply 3 wire, 120 Volt, 1 Phase, 60Hz, AC Power Supply Cord The dryer is equipped with a 120 Volt 3-wire power supply cord. @ @ @ @ @ 2. @ @ @ @ @ @ @ @ restricted air flow will increase drying time. @ @ @ @ 2.

@ @ the dryer exhaust system MUST be exhausted to the outdoors. If the dryer is not exhausted outdoors, some fine lint will be expelled into the laundry area. An accumulation of lint in any area of the home can create a health and fire hazard. 3. Exceeding the length of duct pipe or number of elbows allowed in the "Maximum Length" chart can cause an accumulation of lint in the exhaust system.

Plugging the system could create a fire hazard, as well as increase drying times. 4. Do not screen the exhaust ends of the vent system. Lint can become caught in the screen, increasing drying time. Use an approved vent hood to terminate the duct outdoors, and seal all joints with duct tape.

5. All male duct pipe fittings must be installed downstream with the flow of air. 6. Exhaust duct must not be connected or secured with screws or other fastening devices which extend into the interior of the duct. 7. Do not allow combustible material (clothing, draperies/curtains, paper, etc. ) to come in contact with exhaust system. Explosion hazard: Do not install the dryer where gasoline or other flammables are kept or stored. Failure to do so can result in death, explosion, fire or burns. 2cm diameter (minimum) rigid of flexible metal duct and approved vent hood which has a swing-out damper hat open when the dryer is in operation.

When the dryer stops, the dampers automatically close to prevent drafts and the entrance of insects and rodents. 5cm clearance between the vent hood and the ground or any other obstruction. The vent flap should be able to move freely, although vertical orientation of the exhaust system is acceptable. certain extenuating circumstances could affect the performance of the dryer: 1. Only rigid metal duct work should be used. 2. Venting vertically through a roof may expose the exhaust system to down drafts causing an increase in vent restriction.



[You're reading an excerpt. Click here to read official HAIER RDE](http://yourpdfguides.com/dref/3981525)

[350 AW user guide](http://yourpdfguides.com/dref/3981525)

<http://yourpdfguides.com/dref/3981525>

3. Running the exhaust system through an uninsulated area may cause condensation and faster accumulation of lint. The exhaust system should be inspected and cleaned a minimum of every 12 months with normal usage.

The more the dryer is used the more often you should check the exhaust system and vent hood for proper operation. In an area exposed to dripping water or outside weather conditions. 2. On carpet, floor must be solid with a maximum slope of 1 inch (2.54 cm).

Installation in Alcove or Closet: 1. DO NOT install your dryer in a closet with a solid door. 2. Follow the instructions supplied with the kit. This appliance must be properly grounded. Electrical shock can result if the dryer is not properly grounded. Follow the instructions in this manual for proper grounding. 2. Do not use an extension cord with this dryer. 3.

A UL approved strain relief must be installed onto power cord. If the strain relief is removed after servicing. Children should not be allowed to use them to play with. Make all packing materials inaccessible to children. Normal drying Drying small quantity clothes and delicate fabric. Push once to pause. Push again to start after pushing. Dark and light colored clothes should be separately dried. Make sure buttons and ornaments on the clothes are high temperature resistant and won't damage drum surface. Before loading, the clothes should have their zippers zipped up, buttons and hooks done up and belts tied so as to avoid entanglement or other obstacles.

If possible, turn out the clothes pockets for uniform drying. If so, wash them again, otherwise soils may be permanently set. Small articles should be collected in a mesh bag before loading and drying, so as to avoid entanglement and ensure easy removal. Make sure the power socket is reliably grounded. Make sure lint filter is clean and properly installed.

If lint filter is not in place, tumbling items could enter the exhaust system and cause damage to the dryer. Avoid too much load, as space is needed to allow clothes free rotation for uniform and wrinkle-proof drying. When drying big articles, only 2-3 pieces should be loaded at a time and supplemented with small and medium-sized articles. For delicate clothes or less load, two towels may be added to get better drying and wrinkle-proof effects. Do not excessively dry clothes to avoid wrinkles, shrinkage, roughness, electro-static charge accumulation, and/or more lint.

Turn the knob to any program except "OFF" to power on. The control panel will beep once and the dryer will change from "OFF" to the operating status. When starting the machine, close the door first, then press this button. If a pause is needed during drying, press this button. Turn the knob to any program except "OFF" to power on. The control panel will beep once and the dryer will change from "OFF" to the operating status. If Start/Pause button is not pressed five minutes after powering on, the dryer will automatically return to OFF status. There are 4 preprogrammed times to choose from 30,60,90 and 120 minutes. 4. When starting the machine close the door.

puerto Rico and Canada. A product whose original serial number has been removed or altered. damage from incorrect electrical current, voltage or supply. Damage from other than normal household use. any transportation and shipping charges. THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE The remedy provided in this warranty is exclusive and is granted in lieu of all other remedies. This warranty does not cover incidental or consequential damages so the above limitations may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary, from state to state. Longueurs maximum recommandée RECOMMENDED MAXIMUM Type de Hood Types Exhaust hôte Recommandé Recommended Usage only for short Use à court terme seulement run installations No use conducto de plástico flexible para escape de la secadora.

Explosion hazard: Do not install the dryer where gasoline or other flammables are kept or stored. Failure to do so can result in death, explosion, fire or burns. Compresión de rizos en el sistema de escape causará mas restricción en el sistema de ventilación, El sistema de escape se debe inspeccionar y limpiar por lo menos cada 12 meses con uso normal. al usarla más, debería revisar el sistema de escape y la cubierta de la rejilla de ventilación para ver que esté funcionando de manera apropiada. Máximo Recomendado RECOMMENDED MAXIMUM Tipo de Cubiertas de rejilla de ventilación Exhaust Hood Types Recomendado Recommended Use solo para instalaciones a Use only for short corto plazo run installations If you have a problem with this product, please contact the "Haier Customer Satisfaction Center" at 1-877-337-3639.



[You're reading an excerpt. Click here to read official HAIER RDE 350 AW user guide](http://yourpdfguides.com/dref/3981525)  
<http://yourpdfguides.com/dref/3981525>