



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HARMAN KARDON AVR 161S. You'll find the answers to all your questions on the HARMAN KARDON AVR 161S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HARMAN KARDON AVR 161S
User guide HARMAN KARDON AVR 161S
Operating instructions HARMAN KARDON AVR 161S
Instructions for use HARMAN KARDON AVR 161S
Instruction manual HARMAN KARDON AVR 161S



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

Manual abstract:

To obtain the maximum enjoyment from your new AVR, please read this manual and refer back to it as you become more familiar with its features and their operation. If you have any questions about this product, its installation or its operation, please contact your Harman Kardon retailer or custom installer, or visit the Web site at www. Introduction, Supplied Accessories, Important Safety Information and Place the AVR IMPORTANT SAFETY INFORMATION The AVR 1710S and AVR 1610S have been designed for use with 120-volt alternating current (AC). The AVR 171S and AVR 161S have been designed for use with 220 – 240-volt AC. Connection to a line voltage other than that for which your receiver is intended can create a safety and fire hazard and may damage the unit. If you have any questions about the voltage requirements for your specific model, or about the line voltage in your area, contact your selling dealer before plugging the unit into a wall outlet. Do Not Use Extension Cords To avoid safety hazards, use only the power cord supplied with your unit. We do not recommend that extension cords be used with this product. As with all electrical devices, do not run power cords under rugs or carpets, or place heavy objects on them. Damaged power cords should be replaced immediately by an authorized service center with a cord meeting factory specifications.

Handle the AC Power Cord Gently When disconnecting the power cord from an AC outlet, always pull the plug; never pull the cord. If you do not intend to use your AVR for any considerable length of time, disconnect the plug from the AC outlet. Do Not Open the Cabinet There are no user-serviceable components inside this product. Opening the cabinet may present a shock hazard, and any modification to the product will void your warranty. If water or any metal object such as a paper clip, wire or staple accidentally falls inside the unit, disconnect it from the AC power source immediately, and consult an authorized service center.

CATV or Antenna Grounding (AVR 1710S/AVR 1610S) If an outside antenna or cable system is connected to this product, be certain that it is grounded so as to provide some protection against voltage surges and static charges. section 810 of the United States National Electrical Code , ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements of the grounding electrode. NOTE TO CATV SYSTEM INSTALLER: This reminder is provided to call the CATV (cable TV) system installer's attention to article 820-40 of the NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible. ENGLISH Verify Line Voltage Before Use Supplied Accessories The following accessory items are supplied with your AVR.

If any of these items are missing, please contact your Harman Kardon dealer or Harman Kardon customer service at www. □ System remote control • EzSet/EQ™ microphone • AM loop antenna • FM wire antenna • Two AAA batteries • AC power cord (AVR 171S/AVR 161S only) Place the AVR • Place the AVR on a firm and level surface. Be certain that the surface and any mounting hardware can support the AVR's weight. □ Provide proper space above and below the AVR for ventilation. Recommended clearance distances are 30cm above the unit, 30cm behind the unit and 30cm on each side of the unit. □ If you install the AVR in a cabinet or other enclosed area, provide cooling air within the cabinet. Under some circumstances, a fan may be required. □ Do not obstruct the ventilation slots on the top of the AVR or place objects directly over them. □ Do not place the AVR directly on a carpeted surface. □ Do not place the AVR in moist or humid locations, in extremely hot or cold locations, in areas near heaters or heat registers, or in direct sunlight.

Indb 4 26/05/15 2:29 pm AVR Front-Panel Controls, continued Power indicator/Power button: The AVR has three different power modes: • Off (Power indicator glows solid amber): The Off mode minimizes energy consumption when you're not using the AVR. When the AVR is off, it will not automatically turn on or play audio in response to an AirPlay stream from a networked device (AVR 1710S/ AVR 171S only). When the AVR is off, pressing the Power button turns it on. To turn the AVR off when it is on, press the Power button for more than three seconds. The Front-Panel Display will indicate "Your device is switched off" for two seconds, then will switch off. NOTE: You can use the System Setup menu to set the AVR to automatically enter the off mode after it has been in the Sleep mode for a certain period of time. see System Settings , on page 34. □ Sleep (Power indicator glows solid amber and front-panel display indicates "Device sleep"): The Sleep mode powers-down some of the AVR's circuitry, but allows the AVR to automatically turn on and play audio in response to an AirPlay or DLNA DMR stream from a networked device (AVR 1710S/AVR 171S only). When the AVR is in Sleep, pressing the Power button turns it on.

To put the AVR into Sleep when it is on, press the Power button for less than three seconds.

The front-panel display will indicate "Device sleep" while the AVR is in the Sleep mode. NOTE: The AVR will automatically enter the Sleep mode after 30 minutes of no audio signal or user control input , unless USB, iPod, Home Network, vTuner, AirPlay, or DLNA DMR is active. In these cases, the AVR will automatically enter the Sleep mode after the number of hours set in the Auto Power Off system setting. Headphone jack/EzSet/EQ Mic input: Connect a 1/4" stereo headphone plug to this jack for private listening. This jack is also used to connect the supplied microphone for the EzSet/EQ setup procedure described in Configure the AVR For Your Speakers, on page 22.

Tuning Mode button (AVR 1710S/AVR 1610S only): Press this button to toggle the radio between the manual (one frequency step at a time) and automatic (seeks frequencies with acceptable signal strength) FM tuning mode. The button also toggles the radio between stereo and mono modes when an FM station is tuned in. **RDS button (AVR 171S/AVR 161S only):** When listening to an FM radio station that broadcasts RDS information, this button activates the various RDS functions. **USB port:** The USB port can be used to play audio files from an Apple iOS® device connected to the port, and can also be used to play MP3 and WMA audio files from a USB device inserted into the port. Insert the connector or device into the USB port oriented so it fits all the way into the port.

You may insert or remove the connector or device at any time – there is no installation or ejection procedure.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

You can also use the USB port to perform firmware upgrades. If an upgrade for the AVR's operating system is released in the future, you will be able to download it to the AVR using this port. Complete instructions will be provided at that time. **IMPORTANT:** Do not connect a PC or other USB host/controller to this port, or you may damage both the AVR and the other device. Channel Volume Adjust button: Press this button to activate the individual channel level adjustment. After pressing this button, use the Up/Down buttons/Tuning buttons to select the channel for adjustment and use the Left/Right buttons to adjust the channel's level. Audio Input button: Press this button to change the audio input connection for the current source. Use the Left/Right buttons to cycle through the available input connections, and press the Set button to assign the currently-displayed connection to the source. iR sensor: This sensor receives infrared (IR) commands from the remote control.

Make sure that the sensor is not blocked. Set button: Press this button to select the currently highlighted menu item. Left/Right buttons: Use these buttons to navigate the AVR's menus. Front-Panel Controls Up/Down buttons/Tuning buttons: Use these buttons to navigate the AVR's menus. When the radio is the active source, use these buttons to tune stations according to the setting of the Tuning Mode button (see above). Surround Mode Category button: Press this button to select a surround-sound category. Each press changes the surround-mode category: Auto Select, Stereo, HARMAN NSP, Movie, Music and Video Game. To change the specific surround-sound mode within the category, use the Surround Mode Select buttons. See Audio Processing and Surround Sound, on page 29, for more information about surround modes. Surround Mode Select buttons: After you have selected the desired surround-mode category, press these buttons to select a specific mode within the category, such as to change from Dolby® Pro Logic® II Movie mode to DTS® NEO:6 Cinema mode.

Surround mode availability depends on the nature of the source input signal, i. e. , digital versus analog, and the number of channels encoded within the signal. Source Select buttons: Press these buttons to select the active source. Volume knob: Turn this knob to raise or lower the volume.

5 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 5 26/05/15 2:29 pm ENGLISH Front-panel display: Various messages appear on this two-line display in response to commands and changes in the incoming signal. In normal operation, the current source name appears on the upper line, while the active surround mode is displayed on the lower line. When the on-screen display menu system (OSD) is in use, the current menu settings appear. aVR Rear-Panel Connectors AVR 1710S/AVR 171S Digital Audio Connectors Radio Antenna Connectors Network Connector HDMI Output Connectors HDMI/MHL Input Connector HDMI Input Connectors Rear-Panel Connectors Fan Vents Power Cord (AVR 1710S) Analog Audio Connectors Subwoofer Pre-Out Connectors Speaker Connectors Analog Video Connectors IR and Trigger Connectors AC Input Connector (AVR 171S) AVR 1610S/AVR 161S Digital Audio Connectors Network Connector HDMI Output Connector HDMI/MHL Input Connector HDMI Input Connectors Radio Antenna Connectors Subwoofer Pre-Out Connector IR and Trigger Connectors Speaker Connectors Analog Video Connectors AC Input Connector (AVR 161S) Power Cord (AVR 1610S) Analog Audio Connectors 6 TR00306_AVR_OM_161S and 171S_EMEA_B.

Indb 6 26/05/15 2:29 pm AVR Rear-Panel Connectors, continued Digital Audio connectors: If your non-HDMI source devices have digital outputs, connect them to the AVR's digital audio connectors. NOTE: Make only one type of digital connection (HDMI, optical or coaxial) from each device. See Connect Your

Audio and Video Source Devices, on page 16, for more information. Radio Antenna connectors: Connect the supplied AM and FM antennas to their

respective terminals for radio reception. Analog Audio connectors: The following analog audio connectors are provided: • Analog Audio Input connectors:

Use the AVR's Analog Audio Input connectors for source devices that don't have HDMI or digital audio connectors. See Connect Your Audio and Video Source Devices, on page 16, for more information. □ Zone 2 Out connectors (AVR 1710S/AVR 171S only): Connect these jacks to an external amplifier to

power the speakers in the remote zone of a multizone system. Network connector: If your home network is wired, use a Cat. 5 or Cat. 5E Ethernet cable (not supplied) to connect the AVR's Network connector to your home network to enjoy Internet radio and content from DLNA-compatible devices that are connected to the network.

See Connect to Your Home Network, on page 18, for more information. Subwoofer Pre-Out connector: Connect this jack to a powered subwoofer with a linelevel input. See Connect Your Subwoofer, on page 15, for more information. nOTE: The AVR 1710S and AVR 171S have two subwoofer connectors.

HDMI Output connectors: I will provide the best possible video and audio performance quality. Since the HDMI cable carries both digital video and digital audio signals, you do not have to make any additional audio connections for devices you connect via the HDMI connection. See Connect Your Audio and Video Source Devices, on page 16, for more information. aVR System Remote Control Functions System Remote Control Functions IR Transmitter Zone 2

Button (AVR 1710S/AVR 171S only) Power Off Button Power On Button Mute Button Source Selector Buttons AVR Button Surround Modes Button OK Button

Up/Down/Left/Right Buttons OSD/Menu Button Back/Exit Button Home Button Number Buttons Clear Button Delay Button Volume Up/Down Buttons

Info/Option Button Preset Scan Button Direct Button Transport Control Buttons Test Tone Button Sleep Button Channel/Tuner Buttons Display Dimmer

Button RDS Button Memory Button Previous Channel Button 8 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 8 26/05/15 2:29 pm AVR System Remote

Control Functions, continued In addition to controlling the AVR, the AVR remote is capable of controlling eight other devices, including an iPod/iPhone device connected to the AVR's front-panel USB port. During the installation process, you may program the codes for each of your source components into the remote.

(See Program the Remote to Control Your Source Devices and TV, on page 21, for programming information.) To operate a component, press its Source Selector button to change the remote's control mode. A button's function depends on which component is being controlled. See Table A13 in the Appendix for listings of the functions for each type of component. Most of the buttons on the remote have dedicated functions, although the precise codes transmitted vary depending on the specific device being controlled.

Due to the wide variety of functions for various source devices, we have included only a few of the most-often used functions on the remote: number buttons, transport controls, television-channel control, menu access and power on and off.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

Buttons dedicated to the AVR – AVR Power On/Off, Surround Modes, Volume, Mute, Delay and Sleep Settings – are available at any time, even when the remote is controlling another device. Power On/Power Off buttons: Press these buttons to turn the AVR on and put it into Sleep or turn it off. See Power Indicator/Power Button, on page 4, for more information. IR Transmitter: As buttons are pressed on the remote, infrared codes are emitted through this lens. Zone 2 button (AVR 1710S/AVR 171S only): Use this button to select whether the AVR commands will affect the main listening area (Zone 1) or the remote zone of a multizone system (Zone 2). When the remote is in the Zone 2 control mode, the Zone 2 button will illuminate whenever you press a button. Mute button: Press this button to mute the AVR's speaker-output connectors and headphone jack. To restore the sound, press this button or adjust the volume. This action will also turn on the AVR and switch the remote's control mode to operate the selected source device. □ The first press of the Radio button switches the AVR to the last-used tuner band (AM or FM). Each successive press changes the band. □ The first press of the USB button switches the AVR to the last-used source (USB or iPod). Each successive press cycles between the two sources. □ The first press of the Network button switches the AVR to the last-used source (Network or vTuner).

Each successive press cycles between the two sources. AVR button: Press to put the remote into the AVR control mode. Surround Modes button: Press this button to access the Surround Modes submenu. select a surround-mode category: Auto Select, Virtual Surround, Stereo, HARMAN NSP, Movie, Music or Game. When you select the category, it is highlighted and the surround mode changes. To change the surround mode for the selected category navigate to the Surround Mode menu in the AVR's on-screen display menu, select the desired category, and use the Left/Right buttons to select one of the available surround modes. See the Advanced Functions section, on page 29, for more information. OSD/Menu button: When the remote is controlling the AVR, press this button to display the AVR's on-screen display (OSD) menu. This button is also used within the tuner menus and an iPod connected to the AVR's front-panel USB port, and is also used to display the main menu on some source devices. Up/Down/Left/Right buttons: These buttons are used to navigate the menu system and to operate the tuner.

OK button: This button is used to select items from the menu system. Back/Exit button: Press this button to return to the previous menu or to exit the menu system. Home button: Press this button to display the Home menu for a Roku Streaming Stick™ that is connected to the AVR's MHL/HDMI connector. Number buttons: Use these buttons to enter numbers for radio-station frequencies or to select station presets. System Remote Control Functions Clear button: Press this button to clear a radio station frequency you have started to enter.

Test Tone button: Press this button to activate test noise that will circulate through each speaker, allowing you to adjust the individual speaker levels. Use the Up/Down buttons to switch the noise to a different speaker and use the Left/Right buttons to change the volume of the speaker the noise is playing through. Delay Adjust button: Pressing this button lets you adjust two different types of delay settings (use the Up/Down buttons to cycle through the settings): • Lip Sync: This setting lets you resynchronize the audio and video signals from a source to eliminate a "lip sync" problem. Lip-sync issues can occur when the video portion of a signal undergoes additional processing in either the source device or the video display. Use the Left/Right buttons to delay the audio by up to 180ms.

□ Distance: These settings let you set the delay for each speaker to compensate for the different distances they may be from the listening position. Use the Up/Down buttons to cycle through each of the system's speakers, and use the Left/Right buttons to set the distance each speaker is from the listening position. See Manual Speaker Setup, on page 30, for more information. Sleep button: Press this button to activate the sleep timer, which turns off the receiver after a programmed period of time. Each press increases the time by 10 minutes, up to 90 minutes – ending with the "Sleep Off" message. Volume Up/Down buttons: Press these buttons to raise or lower the volume. channel/Tuner buttons: When radio has been selected, press these buttons to select a preset radio station. While operating a cable, satellite or HDTV set-top box or a television, press these buttons to change channels. Info/Option button: Press to display the available option settings for the current source. Display Dimmer button: Press this button to dim the AVR's front-panel Message Display partially or fully.

Preset Scan button: When Radio is the selected source, press this button to play each of your preset radio stations in order for five seconds. Pressing the button again to remain tuned to the current station. RDS button (AVR 171S/AVR 161S only): When listening to an FM radio station that broadcasts RDS information, this button activates the various RDS functions. Direct button: Press this button to directly tune to a radio station by using the Number buttons to enter its frequency. Memory button: Press this button to save the current radio or vTuner station as a preset. transport Control buttons: These buttons are used to control source devices. Previous Channel button: When TV is the selected source, press this button to switch to the previously-tuned channel. eNGLISH 9 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 9 26/05/15 2:29 pm AVR Introduction to Home Theater This introductory section will help you to familiarize yourself with some basic concepts unique to multichannel surround-sound receivers, which will make it easier for you to set up and operate your AVR. Introduction to Home Theater Surround Modes There are different theories as to the best way to present surround sound and to distribute each audio channel's sounds to the surround-sound system's speakers.

A variety of algorithms have been developed in an effort to recreate the way we hear sounds in the real world, providing you with a rich variety of options. Several companies have developed different surround-sound technologies, all of which can be accurately reproduced by your AVR: • Dolby Laboratories: Dolby TrueHD, Dolby Digital Plus, Dolby Digital, Dolby Digital EX (AVR 170S/AVR 171S only), Dolby Pro Logic® II, Dolby Pro Logic® IIx and IIz (AVR 170S/AVR 171S only). □ Stereo Modes: Generic modes that expand upon conventional two-channel stereo, including 5CH Stereo and 7CH Stereo (AVR 1710S/AVR 171S only). Appendix Table A10, on page 41, contains detailed explanations of the different surround-sound options available on your AVR.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

Digital surround-sound modes, such as the Dolby Digital and DTS modes, are available only on specially encoded programs, such as those available via HDTV, DVD and Blu-ray Disc media and digital cable or satellite television.

Other surround modes may be used with digital and analog signals to create a different surround presentation or to use a different number of speakers. Surround-mode selection depends upon the number of speakers in your system, the program you are watching or listening to, and your personal tastes.

Typical Home Theater System A home theater typically includes an audio/video receiver, which controls the system and supplies amplification for the loudspeakers; a disc player; a source component for television broadcasts (cable box, satellite dish receiver, HDTV tuner or antenna connected to the TV); a TV or video display; and multiple loudspeakers. **Multichannel Audio** The main benefit of a home theater system is its ability to produce "surround sound." Surround sound uses multiple speakers and amplifier channels to immerse you in the audio/video presentation for a dramatically increased sense of realism. Your AVR may have up to seven main speakers connected directly to it, plus a subwoofer. Each main speaker is powered by its own amplifier channel inside the AVR. A system with more than two speakers is called a multichannel system. The different main speaker types in a home theater system are: **Front Left and Right:** The front left and right speakers are used as in a two-channel system. In many surround-sound modes, these speakers are secondary, while the main action, especially dialogue, is reproduced by the center speaker. **Center:** When you are watching movies and television programs, the center speaker reproduces most of the dialogue and other soundtrack information, anchoring it with the picture. When you are listening to a musical program, the center speaker helps to create a seamless front soundstage, creating a realistic "you-are-there" listening experience. **Surround Left and Right:** The surround left and right speakers produce ambient sounds that help create a realistic and immersive surround-sound environment. They also help recreate directional sound effects such as aircraft flyovers. Many people expect the surround speakers to play as loudly as the front speakers.

Although you will calibrate all of the speakers in your system to sound equally loud at the listening position, most artists use the surround speakers for ambient effects only, and they create their programs to steer relatively little sound to these speakers. **Subwoofer:** A subwoofer is designed to play only the lowest frequencies (the deep bass). It augments smaller, limited-range main speakers that are usually used for the other channels. Many digital-format programs, such as movies recorded in Dolby Digital, contain a low-frequency effects (LFE) channel that is directed to the subwoofer. The LFE channel packs the punch of a rumbling train or airplane, or the power of an explosion, adding realism and excitement to your home theater. Some people use two subwoofers for additional power and for even distribution of the sound. **Surround Back Left and Right (AVR 1710S/AVR 171S only):** Surround back channel speakers are used with surround modes such as the Dolby Digital EX, Dolby Digital Plus, Dolby TrueHD, DTS-ES® (Discrete and Matrix), DTS-HD™ High Resolution Audio, DTS-HD Master Audio™ and Logic 7® 7.1 modes that are designed for 7.1-channel systems. **Front Height Left and Right (AVR 1710S/AVR 171S only):** Your AVR includes Dolby Pro Logic IIz decoding, which uses the AVR's Assigned Amp channels as front height channels.

The addition of front height channels – an additional pair of speakers positioned above the front left and right speakers – produces a surround-sound experience with added depth and dimension by creating lifelike sound that comes at you from varying heights. **NOTE:** You can set up your system to use either surround back speakers or front height speakers; you cannot use both. The surround back and front height channel speakers are optional. If your system does not include surround back or front height speakers, you can set up your AVR with a 5.1-channel surround-sound system in the main listening area, and you can reassign the surround back channel amplifiers to power loudspeakers located in another room in a multizone system.

10 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 10 26/05/15 2:29 pm AVR Place Your Speakers Determine the locations for your system's speakers according to their manufacturer's directions and the layout of your listening room. Use the illustrations below as a guide for 7. To create the most realistic surround-sound environment possible, you should place your speakers in a circle with the listening position at its center. You should angle each speaker so it directly faces the listening position.

Use the diagrams below as a guide. **tV FL C SUB FR Place Your Speakers** **NOTE:** In a 7.1-channel system, you must choose to use either surround back speakers or front height speakers – you cannot use both simultaneously. **ENGLISH** Placing the Left, Center and Right Speakers Place the center speaker either on top of, below or mounted on the wall above or below the TV or video display screen. Place the front left and right speakers along the circle, about 30 degrees from the center speaker and angled toward the listener. Place the front left, front right and center speakers at the same height, preferably at about the same height as the listener's ears. The center speaker should be no more than 2 feet (0.6m) above or below the left/right speakers. If you're using only two speakers with your AVR, place them in the front left and right positions. placing the Surround Speakers in a 5.

1-Channel System You should place the left and right surround speakers approximately 110 degrees from the center speaker, slightly behind and angled toward the listener. Alternatively, place them behind the listener, with each surround speaker facing the opposite-side front speaker. You should place the surround speakers 2 feet – 6 feet (0.6m – 1.8m) higher than the listener's ears. 1-channel system, place the side surround speakers 90 degrees from the center speaker, directly to either side of the listening position. Place the surround back left and right speakers 150 degrees from the center speaker, directly facing the opposite-side front speaker. You should place all the surround speakers 2 feet – 6 feet (0.6m – 1.8m) higher than the listener's ears.

1 Channel System Your AVR includes Dolby Pro Logic IIz decoding, which uses the AVR's Assigned Amp channels as front height channels. The addition of front height channels – an additional pair of speakers positioned above the front left and right speakers – produces a surroundsound experience with added depth and dimension by creating lifelike sound that comes at you from varying heights.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

SR We recommend placing front height speakers at least 3 feet (0.9m) higher than the front left and front right speakers, and directly above or farther apart than the front left and right speakers. The higher and further apart you place the front height speakers, the more you should angle them down and in toward the listening position.

NOTE: Your receiver will sound its best when the same model or brand of loudspeaker is used for all positions. SL SBL SBR Placing the Subwoofer Because a room's shape and volume can have a dramatic effect on a subwoofer's performance, it is best to experiment with placement so that you will find the location that produces the best results in your particular listening room. With that in mind, these rules will help you get started: FHR • Placing the subwoofer next to a wall generally will increase the amount of bass in the room. □ Placing the subwoofer in a corner generally will maximize the amount of bass in the room. □ In many rooms, placing the subwoofer along the same plane as the left and right speakers can produce the best integration between the sound of the subwoofer and that of the left and right speakers.*

TV FHL FL C SUB FR SL SR • In some rooms, the best performance could even result from placing the subwoofer behind the listening position. A good way to determine the best location for the subwoofer is by temporarily placing it in the listening position and playing music with strong bass content. Move around to various locations in the room while the system is playing (putting your ears where the subwoofer would be placed), and listen until you find the location where the bass performance is best. Place the subwoofer in that location. * FHL and FHR speakers should be at least 3 ft (0.9m) apart. 1-Channel Systems (AVR 1710S/AVR 171S only) (Middle: with Surround Back Speakers; Bottom: with Front Height Speakers) 11 TR00306_AVR_OM_161S and 171S_EMEA_B. Inbd 11 26/05/15 2:29 pm AVR Types of Home Theater System Connections There are different types of audio and video connections used to connect the AVR to your speakers, your TV or video display, and your source devices. The Consumer Electronics Association has established the CEA® color-coding standard. Analog Audio Connection Front Left/Right Center Surround Left/Right Surround Back/Front Height Left/Right Subwoofer Digital Audio Connection Coaxial (input or output) Optical Input Analog Video Connection Composite Video Color White/Red Green Blue/Gray Brown/Tan Purple Color Orange Black Color Yellow Types of Home Theater System Connections Subwoofer Connections The subwoofer is a speaker dedicated to reproducing only the low (bass) frequencies, which require more power. To obtain the best results, most speaker manufacturers offer powered subwoofers that contain their own amplifiers.*

Use a single RCA audio cable to make a line-level (non-amplified) connection from the AVR's Subwoofer connector to a corresponding input jack on the subwoofer. (The AVR 1710S and AVR 171S have two subwoofer output connections.) Although the AVR's purple subwoofer output looks similar to a full-range analog audio jack, it is filtered so that only the low frequencies pass through it. Don't connect this output to any device other than a subwoofer. Source Device Connections Audio and video signals originate in source devices (components where a playback signal originates) such as your Blu-ray Disc or DVD player, CD player, DVR (digital video recorder) or other recorder, tape deck, game console, cable or satellite television tuner, an iPod or iPhone (connected to the AVR's USB port) or an MP3 player. The AVR's FM/AM tuner also counts as a source, even though no external connections are needed other than the FM and AM antennas. Separate connections are required for the audio and video portions of the source device's signal, except for digital HDMI connections. The types of connections you use will depend upon the capabilities of the source device and of your TV or video display. digital Audio Connections – HDMI There are two types of audio connections – digital and analog. Digital audio signals are required for listening to sources encoded with digital surround modes, such as Dolby Digital and DTS, or for uncompressed PCM digital audio.

Your AVR has three types of digital audio connections: HDMI, coaxial and optical. Do not use more than one type of digital audio connection for each source device. However, it's okay to make both analog and digital audio connections to the same source. Your AVR is equipped with rear-panel HDMI input and output connectors. HDMI technology enables high-definition digital audio and video information to be carried using a single cable, delivering the highest quality picture and sound.

If your TV or video display device has an HDMI input connector, make a single HDMI connection from each HDMI-enabled source device to the AVR. Usually, a separate digital audio connection is not required. The AVR's HDMI output connection contains an Audio Return Channel (ARC) that carries a digital audio signal from your TV or video display back to the AVR. It allows you to listen to HDMI devices that are connected directly to your TV (such as an Internet connection) without making an additional connection from the device to the AVR. The ARC signal is active when the TV source is selected. See System Settings, on page 34, for more information.) The HDMI connector is shaped for easy plug-in (see illustration, below), and HDMI cable runs are limited to about 10 feet (3m). If your video display has a DVI input and is HDCP-compliant, use an HDMI-to-DVI adapter (not included), and make a separate audio connection. Speaker Connections Speaker cables carry an amplified signal from the AVR's speaker terminals to each loudspeaker. They contain two wire conductors, or leads, that are differentiated in some way, such as with colors or stripes. The differentiation helps you maintain proper polarity, without which your system's low-frequency performance can suffer. Each speaker is connected to the AVR's speakeroutput terminals using two wires, one positive (+) and one negative (-). Always connect the positive terminal on the speaker, which is usually colored red, to the positive terminal on the receiver, which is colored as indicated in the Connection Color Guide Table, above. The negative terminals on the speakers and the AVR are black. Your AVR uses binding-post speaker terminals that can accept bare-wire cables or banana plugs.

Tighten Cap Banana plugs are inserted into the hole in the middle of the terminal cap, as shown below: A. tighten Cap B. □ Insert Banana Connector into Hole in Cap I Always connect the colored (+) terminal on the AVR to the (+) terminal on the speaker (usually red), and the black (-) terminal on the AVR to the (-) terminal on the speaker (usually black). IMPORTANT: Make sure the (+) and (-) bare wires do not touch each other or the other terminal.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

Touching wires can cause a short circuit that can damage your receiver or amplifier. Although they look like standard RCA-type analog jacks, you should not connect coaxial digital audio outputs to analog inputs or vice versa. , Blu-ray Disc, DVD player, cable television box, HDTV tuner, satellite box, VCR, DVR). In addition to an audio connection as described above, make a video connection for each of these source devices. Make only one type of video connection for each device. Digital Video Connections If you have already connected a source device to one of the AVR's HDMI input connectors, you have automatically made a video connection for that device, since the HDMI cable carries both digital audio and digital video signals.

Analog Video Connections – Composite Video Digital Audio Connections – Optical Optical digital audio connectors are normally covered by a shutter to protect them from dust. The shutter opens as the cable is inserted. Optical input connectors are color-coded using a black shutter. composite video is the most commonly available analog video connection. Both the chrominance (color) and luminance (intensity) components of the video signal are transmitted using a single cable.

The jack is usually color-coded yellow and looks like an analog audio jack. do not connect a composite video jack to an analog audio or coaxial digital audio jack , or vice versa. Analog Audio Connections Two-channel analog connections require a stereo audio cable, with one connector for the left channel (white) and one for the right channel (red). These two connectors are attached to each other. For source devices that have both digital and analog audio outputs, you may make both connections.

If you are going to be setting up a multizone system (AVR 1710S/AVR 171S only), remember that Zone 2 is an audio-only zone (the AVR does not have a Zone 2 video output). Therefore, make analog connections for any audio source devices (such as a CD changer) that you will want available for listening in Zone 2 at all times. the AM antenna connector uses spring-clip terminals. After assembling the antenna as shown below, press the levers to open the connectors, insert the bare wires into the openings, and release the levers to secure the wires. The antenna wires are not polarized, so you can insert either wire into either connector. 13 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 13 26/05/15 2:29 pm AVR Network Connector The AVR's Network connector allows you to enjoy Internet radio or content from other DLNA or Airplay-compatible devices that are connected to the same network. 5E Ethernet cable to connect the AVR's RJ-45 connector to your home network. Types of Home Theater System Connections and Making Connections Making Connections CAUTION: Before making any connections to the audio/video receiver, ensure that the AVR's AC cord is unplugged from the AC outlet. Making connections with the receiver plugged in and turned on could damage the speakers.

Connect Your Speakers After you have placed your loudspeakers in the room as explained in Place Your Speakers, on page 11, connect each speaker to its color-coded terminal on the AVR as explained in Speaker Connections, on page 12. Connect the speakers as shown in the illustration. AVR 1710S/AVR 171S only: Connect Surround Back L/R Speakers -OR- Front Height L/R Speakers Here USB Port The AVR can play audio files from an Apple iOS® device connected to the USB port, and allows you to control the iOS device via the AVR remote control. The AVR can also play MP3 and WMA audio files from a USB device inserted into the USB port. Insert the connector or device into the USB port oriented so it fits all the way into the port. You may insert or remove the connector or device at any time – there is no installation or ejection procedure. The USB port on your AVR is also used to perform firmware upgrades. If an upgrade for the AVR's operating system is released in the future, you will be able to download it to the AVR using this port. Complete instructions will be provided at that time. IMPORTANT: Do not connect a PC or other USB host/controller to the AVR's USB port, or you may damage both the AVR and the other device.

(AVR 1710S/ AVR 171S only) FHL C FL FR (AVR 1710S/ AVR 171S only) FHR SL SR (AVR 1710S/ AVR 171S only) SBL (AVR 1710S/ AVR 171S only) SBR NOTE: If you installed front height speakers, connect them as shown for the SBL and SBR speakers. 14 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 14 26/05/15 2:29 pm AVR Connect Your Subwoofer Use a single RCA audio cable to connect the AVR's Subwoofer connector to your subwoofer as explained in Subwoofer Connections, on page 12. NOTE: The AVR 1710S and AVR 171S provide connections for two subwoofers. See Manual Speaker Setup: Number of Speakers, on page 31, for information about activating the two subwoofer outputs.

Consult your subwoofer's user manual for specific information about making connections to it. AVR 1710S/ AVR 171S AVR 1610S/ AVR 161S Making Connections Connect Your TV or Video Display If your TV has an HDMI connector and you have HDMI source devices: Use an HDMI cable (not included) to connect it to the AVR's HDMI Monitor Out connector. The AVR 1710S and AVR 171S provide HDMI connections for two TVs (only HDMI Out 1 has ARC and enables you to view the AVR's on-screen menus). This will provide the best possible picture quality. AVR 1710S/AVR 171S AVR 1610S/AVR 161S ENGLISH Use HDMI Out 1 for the primary display Use either connector Powered Subwoofer HDMI Cable (not supplied) TV Single RCA Audio Cable (not supplied) If your TV does not have an HDMI connector or if your TV does have an HDMI connector but you are connecting some source devices with only composite video connectors: Use a composite video cable (not included) to connect the AVR's Composite Monitor Out connector to your TV's composite video connector.

AVR Composite Monitor Out Connector TV Composite Video Cable (not supplied) NOTE: If you use only the composite video connection to your TV, you will not be able to view the AVR's on-screen menus. 15 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 15 26/05/15 2:29 pm AVR Connect Your Audio and Video Source Devices Source devices are components where a playback signal originates, e. Your AVR has several different types of input connectors for your audio and video source devices: HDMI, composite video, optical digital audio, coaxial digital audio and analog audio. The connectors are not labeled for specific types of source devices; they are labeled numerically, so you can connect your devices according to your individual system's makeup. □ Making Connections However, you can connect your source devices as you wish and re-assign any of the input connections to any of the Source Buttons listed in the table according to where you actually connect each of your source devices. As you connect your various source devices, fill out the "Connected Component" column in the table – it will make it easier for you to assign the various source buttons after you have completed making all of the connections.



[You're reading an excerpt. Click here to read official HARMAN](http://yourpdfguides.com/dref/5888629)

[KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)

<http://yourpdfguides.com/dref/5888629>

(You will make any changes to the source-button assignments and fill in the “Assigned Connector(s)” column later in the setup process.) Note: You cannot assign connectors to the Network, Radio, TV and USB source buttons. Your AVR’s various source buttons have default assignments to different input connectors (listed in the “Default Connector(s)” column of the table below).

For ease of setup, you should connect each source device to the connector where the corresponding default source button is assigned (e. g. , connect your Blu-ray Disc player to HDMI 2). source Buttons and Assigned Connectors Source Button MHL Disc Cable-Sat STB Game Audio Aux Default Connector(s) HDMI 1 HDMI 2 HDMI 3 HDMI 4 HDMI 5 None/Analog 2 Composite 1/Analog 1 Assigned Connector(s) Connected Device Monitor Output Connector HDMI Out 1 HDMI Out 2 (AVR 1710S/AVR 171S only) Composite Video Monitor Out Connected Device 16 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 16 26/05/15 2:29 pm AVR Roku Streaming Stick™: If you have a Roku Streaming Stick device, insert it into the AVR’s HDMI/MHL In connector. NOTE: Do not insert the Roku Streaming Stick device into any other HDMI In connector. AVR HDMI/MHL In Connector AVR Composite In Connectors Connect Your Composite Video Devices Making Connections Composite Video Cable (not included) Roku® Streaming Stick Connect Your HDMI Devices If any of your source devices have HDMI connectors, using them will provide the best possible video and audio performance quality. Since the HDMI cable carries both digital video and digital audio signals, you do not have to make any additional audio connections for devices you connect via an HDMI cable. AVR HDMI Connectors To Composite Video Output Composite-Equipped Source Device Connect Your Optical Digital Audio Devices If your non-HDMI source devices have optical digital outputs, connect them to the AVR’s optical digital audio connectors. NOTE: Make only one type of digital connection (HDMI, optical or coaxial) from each device.

AVR Digital Audio Connectors HDMI Cable (not supplied) Optical Digital Audio Cable (not supplied) To Optical Digital Audio Output To HDMI Output HDMI-Equipped Source Device NOTE: If you have HDMI devices (such as an Internet connection) already connected directly to your TV, you can feed their sound to the AVR via the HDMI Out connector’s Audio Return Channel, and they will not require additional connections to the AVR. AVR 1710S/AVR 171S only: Only the HDMI Out 1 connection has the Audio Return Channel. optical-Equipped Source Device 17 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 17 26/05/15 2:29 pm ENGLISH Use composite video connectors for video source devices that don’t have HDMI connectors. You will also need to make an audio connection from the source device to the AVR.

AVR Connect Your Coaxial Digital Audio Devices If your non-HDMI source device has a coaxial digital output, connect it to the AVR’s coaxial digital audio connector. NOTE: Make only one type of digital connection (HDMI, optical or coaxial) from each device. AVR Digital Audio Connectors Making Connections USB and iOS Devices Use the AVR’s front-panel USB port to connect an iPod, iPhone or iPad using an Apple cable (not supplied) or to directly connect a USB memory stick. You can play audio files from the device or memory stick and use the AVR’s remote to control playback. SE cable (not supplied) to connect the AVR’s Network connector to your home network to enjoy Internet radio and content from DLNA-compatible devices that are connected to the network.

AVR Network Connector Coaxial-Equipped Source Device Connect Your Analog Audio Devices Use the AVR’s analog audio connectors for source devices that don’t have HDMI or digital audio connectors. NOTE: If you’re installing a multizone system, make analog audio connections for any source devices you want to be able to listen to in Zone 2. Only analog sources are available in Zone 2. AVR 1710S/AVR 171S Analog Audio Connectors AVR 1610S/AVR 161S Analog Audio Connectors Network Modem Cat. 5/SE Cable (not supplied) To Home Network and Internet Connect the Radio Antennas • Connect the supplied FM antenna to the AVR’s FM 75Ω antenna connector. For the best reception, extend the FM antenna as far as possible. □ Bend and fold the base of the supplied AM antenna as shown and connect the antenna wires to the AVR’s AM and Gnd connectors. (You can connect either wire to either connector.) Rotate the antenna as necessary to minimize background noise. stereo Audio Cable (not supplied) To Stereo Analog Audio Output AVR 1710S/ AVR 1610S/ AVR171S AVR161S Antenna Antenna Connectors Connectors AM Antenna (supplied) Bend and fold base Analog Source Device FM Antenna (supplied) 18 TR00306_AVR_OM_161S and 171S_EMEA_B.

Indb 18 26/05/15 2:29 pm Install a Multizone System ENGLISH ENGLISH AVR AVR 1710S/AVR 171S only: Install a Multizone System IMPORTANT SAFETY NOTE: Installing a multizone system typically requires running cables inside walls. Always comply with the appropriate safety codes when installing concealed wiring, particularly all applicable building codes. Failure to do so may present a safety hazard. If you have any doubt about your ability to work with electrical wiring, hire a licensed electrician or custom installer to install the multizone system. NOTE: Only the following analog audio sources are available to Zone 2: the internal radio, an iPod/iPhone device or a USB memory device inserted in the AVR’s USB port and up to two source devices connected to the rear-panel Analog Audio In 1 and 2 connectors. Your AVR offers two different methods of distributing audio to other areas in your home. Each requires different connections: A. Connect the Zone 2 speakers directly to the Assigned Amp Speaker Output connectors. Assign the Assigned Amp channels to power the Zone 2 speakers (see Manual Speaker Setup, on page 30). This method allows you to power a single pair of speakers for Zone 2. This method offers the benefit of reduced cost and complexity, but your home theater system will be limited to 5. 1 channels – the AVR will automatically downmix the playback of programs recorded in 6. This method offers the benefit of retaining a 7. 1-channel home theater in the main room simultaneously with multizone operation, although it does require an additional amplifier for Zone 2. We recommend that you place the Zone 2 amplifier in the same room as the AVR so that you can use a short length of stereo audio cable along with a long run of speaker wire to the remote room.

A long run of stereo audio cable would increase the chance of signal degradation. Depending on your Zone 2 amplifier you can distribute the audio signal to a single pair of speakers or to several pairs placed in different rooms. Indb 19 26/05/15 2:29 pm AVR Connect IR Equipment The AVR is equipped with a Remote IR Input connector that lets you remotely control the AVR in a variety of situations: • When you place the AVR inside a cabinet or facing away from the listener, connect an external IR receiver, such as the optional Harman Kardon HE 1000, to the AVR’s IR In jack.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

External IR Receiver AVR IR In Jack Making Connections Connect the Trigger Output If your system has equipment that can be controlled by a DC trigger signal, connect it to the AVR's Trigger Out connector with a mono 1/8-inch (3.5mm) mini-plug interconnect cable.

The AVR will supply a 12V DC (100mA) trigger signal at this connection whenever it is powered on. **AVR Mono 1/8-inch (3.5mm) Mini-Plug Interconnect (not supplied)** Device with Trigger In Connector AVR and Source Devices Installed Inside of Cabinet Connect to AC Power AVR 171S/AVR 161S: • If you install a multizone system (AVR 1710S/AVR 171S only), connect an IR control device to the Zone 2 IR In connector for remote-room control of the multizone system, source devices and volume in the remote zone. **External IR Receiver Zone 2 Speakers** Connect the supplied AC power cord to the AVR's AC Input connector and then to a working, non-switched AC power outlet. **AVR AC Input Connector AC Power Outlet Zone 2 Main Room AVR 1710S/AVR 1610S:**

Power Cord (supplied) Connect the AVR's power cord to a working, non-switched AC power outlet. **AC Power Outlet AVR Power Cord AVR** If a source device is shared with the main listening area, any control commands issued to that source will also affect the main room. **20 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 20 26/05/15 2:29 pm AVR Set Up the Remote Control** Install the Batteries in the Remote Control Remove the remote control's battery cover, insert the two supplied AAA batteries as shown in the illustration, and replace the battery cover. Look up the code numbers for the device in Tables A10 – A20 in the Appendix. Write all the applicable code numbers in a convenient place.

ENGLISH 3. Press the Source Selector button for the device and hold it as it glows red, goes dark and glows red again. then release it. The remote is now in the Programming mode. **NOTE:** The remote will remain in the Programming mode for 20 seconds. If you do not complete Step 4 within 20 seconds, the remote will exit the Programming mode, and you will need to repeat Step 3. 4. Aim the remote at the source device and use the remote's Number buttons to enter a code number from Step 1, above. A) If the device turns off, press the Source Selector button again to save the code. The Source Selector button will flash, and the remote will exit the Programming mode.

B) If the device does not turn off, enter another code number. C) If you run out of code numbers for a device, you can search through all of the codes in the remote's library for devices of its type by pressing the remote's Up button repeatedly until the device turns off. When it does, press the Source Selector button to save the code. 5. Check that other functions control the device correctly.

Sometimes manufacturers use the same Power code for several models, while other function codes vary. Repeat this process until you've programmed a satisfactory code set that operates most of the device's functions. 6. If you searched through the remote's code library to find the code, you can find out which code number you have programmed by pressing and holding the Source Selector button to re-enter the Programming Mode. Then press the remote's OK Button, and the Source Selector button will flash in the code sequence.

One flash represents "1," two flashes for "2," and so forth. a series of quick flashes represents "0." Record the code number programmed for each device in Table A7 in the Appendix. Repeat Steps 3 – 6 for each source device you want to control with the AVR remote. **Reassigning a Source Selector Button for a Different Device Type** Program the Remote to Control Your Source Devices and TV You can program your AVR remote to control many brands and models of audio/video source devices and TVs. The remote is also ready to operate your iPod or iPhone when it is connected to the AVR's front-panel USB port. Each of the remote's Source Selector buttons has been preprogrammed to control certain types of source devices: **Cable/Sat:** Controls cable TV and satellite TV tuner boxes **Disc:** Controls Blu-ray Disc and DVD players **Radio:** Controls the AVR's built-in FM/AM tuner **TV:** Controls TVs and video displays **USB:** Browses compatible media on an Apple iOS device that is connected to, or a USB device that is inserted in the AVR's USB port **Note:** Does not require programming.

Although the Source Selector buttons are preprogrammed for the device types listed above, you can reassign a Source Selector button to a different device type. See **Reassigning a Source Selector Button for a Different Device Type**, on page 21. Once you have programmed the remote, you can switch the remote's control mode to access the functions for a particular device by pressing the remote's Source Selector button for that device.

Follow these steps to program the Source Selector buttons for your source devices: 1. Turn on the source device you want to program the remote to control. 2. You can reassign a Source Button to control a different device type (for example, you can program the Media Server button to control a DVD player). 1. Turn on the source device you want the remote to control. 2. Look up the code numbers for the device in Tables A12 – A22 in the Appendix. Write all the applicable code numbers in a convenient place. 3. Press the Source Selector button you want to override and hold it for three seconds as it glows red, goes dark and glows red again.

then release it. The remote is now in the Programming mode. 4. Press the Source Selector button that corresponds to the source device's type (i.e., P for a DVD player, press the Blu-ray button). The Source Selector button you pressed in Step 3 will flash once. 5. Aim the remote at the source device and use the remote's Number buttons to enter a code number from Step 2, above. A) If the device turns off, press the Source Selector button from Step 3 again to save the code.

The Source Selector button will flash, and the remote will exit the Programming mode. B) If the device does not turn off, enter another code number. C) If you run out of code numbers for a device, you can search through all of the codes in the remote's library for devices of its type by pressing the remote's Up button repeatedly until the device turns off. When it does, press the Source Selector button from Step 3 to save the code. Most of the button labels on the AVR remote describe each button's function when the remote is used to control the AVR. However, the button may perform a different function when used to control another device. Refer to the **Remote Control Function List**, Table A13 in the Appendix. **21 TR00306_AVR_OM_161S and 171S_EMEA_B. Indb 21 26/05/15 2:29 pm AVR Set Up the AVR** In this section, you will configure the AVR to match your actual system's makeup. Although it's possible to configure the AVR using only the remote and the messages on the AVR's front-panel display, it is easier if you use the on-screen menu system.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>

Set Up the AVR Before beginning the following setup steps, all loudspeakers, a video display and all source devices should be connected. You should be able to turn on the AVR and view the main menu when you press the AVR button. If necessary, reread the Making Connections and Set Up the Remote sections before continuing. Turn On the AVR Press the front-panel Power button. Configure the AVR for Your Speakers 1. Plug the supplied EzSet/EQ microphone into the AVR's Headphone connector. p 2. Place the microphone at ear height in your listening position. p 3. Set the volume control on your subwoofer to approximately the halfway point.

4. Turn on your TV and select the TV input where you connected the AVR in Connect Your TV or Video Display, on page 15. Using the On-Screen Menu System To access the menu system, press the OSD/Menu button on the remote. The OSD/Menu Menu will appear, and if a video source is playing, the menu will automatically re-size so the picture will be visible behind the menu. The AVR's on-screen display (OSD) Main Menu P screen will appear on the TV. U NOTE: The actual on-screen menus may differ slightly from the illustrations in this manual. Use the Up/Down/Left/Right buttons on the remote or the front panel to navigate the menu system, and press the OK button to select a menu or setting line, or to enter a new setting. The current menu, setting line or new setting will appear in the front-panel Message Display, as well as on screen. To return to the previous menu or exit the menu system, press the Back/Exit button. Be certain all settings are correct, as any changes you have made will be retained.

Most users should follow the instructions in this Set Up the AVR section to configure a basic home theater system. You may return to these menus at any time to make additional adjustments, such as those described in the Advanced Functions section, on page 29. If you have a subwoofer connected, select "Yes with Sub. Make sure that the room is quiet while the test noise is playing T through the speakers. W NOTES: • If there are fewer than five main speakers in your system, do not use the EzSet/ EQ process. instead , proceed as described in Manual Speaker Setup , on page 30. If you are using an AVR 1710S/AVR 171S in 6. 0- or 6. 1-channel configuration with a single surround back speaker, do not use the EzSet/EQ process. instead , proceed as described in Manual Speaker Setup , on page 30.

Set Up the AVR Set Up Your Sources The Source Setup menu lets you assign the correct physical audio and video connections to each source and lets you set many audio and video playback features for each source. IMPORTANT: The "Video In" and "Audio In" settings are not optional and must be adjusted before you use your AVR to enable playback of each source. You can adjust the other settings later. See System Settings, on page 34, for complete information about adjusting all of the Settings menu options. 1. Preview the input connections you listed on the Source Buttons and Assigned R Connectors table, on page 16.

Note what changes (if any) you want to make from the default connector assignments that appear on the list. 2. Turn on your TV and select the TV input where you connected the AVR in Connect Your T TV or Video Display, on page 15. The AVR's OSD setup menu will appear P on the TV.

(Note: If you have used a composite video connection to your TV, the OSD menus will not appear on your TV. Follow the steps below using the AVR's front-panel display.) 6. If you have not selected an HDMI connector for Video In, select "Audio In" and select I the audio input connector you want to assign to the source button. press the OK button.

You cannot use a different video input connector with an HDMI audio input connector. 7. Press the remote's Back/Exit button and repeat steps 3 – 6 for the remaining source P buttons with connectors you want to re-assign. Title: This selection lets you change the display name for the source, which is useful if your source's device type is different from the source's preprogrammed name. Use the Up/Down buttons to scroll forward or backward through the alphanumeric characters until the desired character appears, then use the Left/Right buttons to move the cursor to the next or previous position.

Move the cursor again to leave a blank space. (Your name can have a maximum of 10 characters.) When you have finished, press the OK Button. The new name will appear on the AVR's front panel and throughout the on-screen menu system. Tone: This setting determines whether the treble and bass controls are active for the source. When it's set to Off, the tone controls are out of the circuit, with no changes to the sound. When it's set to On, the bass and treble controls are in the circuit. treble/Bass: These settings boost or cut the treble or bass frequencies by up to 10dB , in 2dB increments. Use the Left/Right buttons to change the setting. the default setting is 0dB.

Night Mode: This setting activates Night mode for the source, which works with specially encoded Dolby Digital discs or broadcasts. Night mode compresses the audio so that louder passages are reduced in volume to avoid disturbing others, while dialogue remains intelligible. The following settings are available: • Off: No compression is applied. Loud passages in the program remain as they were recorded. Mid: Loud passages in the program are reduced moderately in volume. dolby True HD stream is compressed automatically as set by the incoming stream. Max: Loud passages in the program are reduced more in volume. 4. Press the remote's arrow and OK buttons to select "Source Setup," and use the left/right U arrow buttons to select a source button with connectors that you want to re-assign. Select "Video In" and select the video input connector you want to assign to the source S button.

press the OK button. NOTE: If you select an HDMI connector as the video input connector, the audio input connector will automatically change to the same HDMI connector. AVR Lip Sync: This setting lets you resynchronize the audio and video signals from the source to eliminate a "lip sync" problem. Lip-sync issues can occur when the video portion of a signal undergoes additional processing in either the source device or the video display. Use the Left/Right buttons to delay the audio by up to 180ms.

(The active source's video will be visible behind the OSD menu, allowing you to synchronize the audio with the picture.) You can also make lip sync adjustments without activating the AVR's OSD menus. Pressing the remote's Delay button will display the Lip Sync menu bar on the TV, superimposed at the bottom of the video. Use the Left/Right buttons to delay the audio until it is synchronized with the picture. Pair the AVR with Your Bluetooth Device 1.

Press the OSD/Menu button and select "Source Select."



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 161S user guide](http://yourpdfguides.com/dref/5888629)
<http://yourpdfguides.com/dref/5888629>