



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HARMAN KARDON AVR 1650. You'll find the answers to all your questions on the HARMAN KARDON AVR 1650 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HARMAN KARDON AVR 1650
User guide HARMAN KARDON AVR 1650
Operating instructions HARMAN KARDON AVR 1650
Instructions for use HARMAN KARDON AVR 1650
Instruction manual HARMAN KARDON AVR 1650

AVR 1650, AVR 165

Audio/video receiver

Quick Start Guide



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 1650 user guide](http://yourpdfguides.com/dref/3988207)
<http://yourpdfguides.com/dref/3988207>

Manual abstract:

Be certain that the surface and any mounting hardware can support the AVR's weight. · Provide proper space above and below the AVR for ventilation. If you install the AVR in a cabinet or other enclosed area, provide cooling air within the cabinet. Under some circumstances, a fan may be required. · Do not obstruct the ventilation slots on the top of the AVR or place objects directly over them. · Do not place the AVR directly on a carpeted surface. Unscrew Cap 2. Insert Bare Wire 3. Touching wires can cause a short circuit that can damage your AVR. Connect the speakers as shown in the illustration.

Connect Your TV or Video Display HDMI Monitor Out Connector If your TV has an HDMI connector and you have HDMI or component video source devices, use an HDMI cable (not included) to connect your TV to the AVR's HDMI Monitor Out connector. It will provide the best possible picture quality. AVR HDMI Monitor Out Connector TV HDMI Cable (not supplied) Composite Video Monitor Out Connector If your TV does not have an HDMI connector, or if your TV does have an HDMI connector but you are connecting some source devices with only composite video connectors, use a composite video cable (not included) to connect the AVR's Composite Monitor Out connector to your TV's composite video connector. AVR Composite Monitor Out Connector TV

Composite Video Cable (not supplied) 3 AVR 1650, AVR 165 Connect Your Audio and Video Source Devices Source devices are components where a playback signal originates, e.g., a Blu-ray Disc™ or DVD player; a cable, satellite or HDTV tuner; etc. Your AVR has several different types of input connectors for your audio and video source devices: HDMI, component video, composite video, optical digital audio, coaxial digital audio and analog audio. The connectors are labeled for the types of source devices you are most likely to connect. You can record any analog audio input signal. Video Recorders Connections Connect an analog video recorder's video input connector to the AVR's Video 2 Out composite video connector and its audio input connectors to the AVR's Video 2 Out analog audio connectors.

You can record any composite video signal. AVR Analog Audio Recorder Connectors AVR Analog Audio Connectors AVR Analog Video Connectors Analog Audio/Video Cable (not supplied) To Analog Audio/Video Record Inputs Stereo Audio Cable (not supplied) Analog Video Recording Device To Stereo Analog Record Inputs Analog Recording Device Connect The Bridge IIP Connect an optional The Bridge IIP to the AVR's The Bridge IIP connector. Insert the plug all the way until it snaps into place in the connector. IMPORTANT: Connect The Bridge IIP only with the AVR's power turned OFF. For the best reception, extend the FM antenna as far as possible. Press the front-panel Power button. Power Cord (supplied) Main Power Switch Power Button 7 AVR 1650, AVR 165 Configure Your Speakers 1. Plug the supplied EzSet/EQ™ microphone into the AVR's Headphone connector. 5. Use the remote's arrow and OK buttons to select "EzSet/EQ."

"Connections * AVR Headphone Connector EzSet/EQ * Place Microphone at listening position and plug into Headphone Jack Do you want to start EzSet/EQ? YES NO EzSet Microphone (supplied) 6. Select "YES." 7. Select "Continue." 2. Place the microphone at ear height in your listening position. 3. 4. Press the remote control's OSD button. 8.

Note which source devices you connected to the digital audio connectors. (If you did not connect any source devices to the digital audio connectors, you can skip th.



[You're reading an excerpt. Click here to read official HARMAN KARDON AVR 1650 user guide](http://yourpdfguides.com/dref/3988207)
<http://yourpdfguides.com/dref/3988207>