



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HARMAN KARDON GO PLAY MICRO. You'll find the answers to all your questions on the HARMAN KARDON GO PLAY MICRO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HARMAN KARDON GO PLAY MICRO
User guide HARMAN KARDON GO PLAY MICRO
Operating instructions HARMAN KARDON GO PLAY MICRO
Instructions for use HARMAN KARDON GO PLAY MICRO
Instruction manual HARMAN KARDON GO PLAY MICRO



[You're reading an excerpt. Click here to read official HARMAN KARDON GO PLAY MICRO user guide](http://yourpdfguides.com/dref/3931402)
<http://yourpdfguides.com/dref/3931402>

Manual abstract:

Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 13. Unplug this apparatus during lightning storms or when unused for long periods of time. 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15. @ @16. @ @17.

The mains plug of the power supply cord shall remain readily operable. 18. Do not expose batteries to excessive heat such as sunshine, fire or the like. 1. Read these instructions.

2. Keep these instructions. 3. Heed all warnings. 4.

Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with a dry cloth. 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.

9. @ @A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. @ @10. @ @11. Only use attachments/accessories specified by the manufacturer. FCC Statement and Warning This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. @ @ Increase the separation between the equipment and receiver. @ @ @ @ @ @ @ @ @ @ Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada SEE MARKING ON BACK OF PRODUCT. 2 Harman Kardon Go + Play™ Micro Introduction The Harman Kardon Go + Play Micro portable loudspeaker is the latest innovation from Harman Kardon, a longtime leader in the manufacturing of high-end component audio systems. Harman Kardon audio heritage and continual research have resulted in the unique technologies found in this product.

The Harman Kardon Go + Play Micro portable, high-fidelity docking system for iPhone/iPod performs like a home theater system. With a groundbreaking design that's built for comfort, performance and freedom, the Harman Kardon Go + Play Micro will cradle your iPhone/iPod and surround it with luxurious Harman Kardon® sound. Carry the unit by its stainless-steel arch handle to enjoy the ultimate portable soundstage. Connected to your iPhone/iPod (not included), MP3 player or other music source, the system will provide clean, powerful sound while also charging your iPhone/iPod.

@ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ Plug the adapter into the 24V DC IN port 2.

Turn on the power button on the top of the unit. The white indicator light will turn on. 3. @ @ @ @2. Place eight (8) fresh C-cell batteries as shown. 3. Replace the battery compartment cover. @ @ DO NOT MIX CHARGED AND PARTIALLY CHARGED BATTERIES. @ @ @ @ @ @ All batteries must be disposed of in an environmentally sound manner. Contact your local waste management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

4 Listening to Music from an iPhone/iPod 1. Press the power button on the top of the Harman Kardon Go + Play Micro system to turn the unit on. 2. Dock the iPhone/iPod 3. Select and play music using the controls on the iPhone/iPod or send commands to the iPhone/iPod with the remote control. Adjust the volume using the "+" and "-" buttons located on the top of the Harman Kardon Go + Play Micro loudspeaker. Remote Functionality Listening to Music from an Auxiliary Device The Harman Kardon Go + Play Micro system includes a 3.5mm mini jack cable for connection to any analog music player with either a 3.5mm or headphone output. 1.

@ @2. @ @A white light will indicate that the unit is on. 3. Control music playback through the auxiliary device. 4.

@ @ @ @1. @ @2. Dock an iPhone/iPod into the Harman Kardon Go + Play Micro. 3. @ @ This feature allows viewing of videos or still images with a compatible iPhone or iPod 1.

Connect the Harman Kardon Go + Play Micro video output port a video cable (not included). 2. Dock an iPhone/iPod into the Harman Kardon Go + Play Micro. 3. Play either iPhone/iPod video or photo content. to a TV or video display using 5 English Troubleshooting Symptom Possible Problem Solution Note Symptom Possible Problem Solution Note Sound Quality There is no sound coming from the Harman Kardon Go + Play Micro unit. No power to unit. Make sure that the wall outlet or power strip has power. Make sure that all switches for outlet/power strip are on and that all switches for the unit are on. Make sure that the iPhone/iPod is properly docked or that the auxiliary cable is properly connected.

Turn up the volume. Check the unit with a known good source. Connect the Aux In cable to the headphone jack of your iPhone/iPod. Sound comes from only one side/channel. iPhone/iPod or auxiliary cable is not seated properly. @ @ Make sure the auxiliary cable is seated all the way into the jack. Try resetting the iPhone/iPod. @ @ @ @ @ @ @ @ Is the LED on? If the LED is not on, power is not getting to your Harman Kardon Go + Play Micro unit. Try the solutions shown. Sound Quality Distortion (static, crackling or hissing sounds).

Audio source or source material may be the problem. Test the Harman Kardon Go + Play Micro unit with another source. Does the distortion occur with specific songs? If so, check the recording or record the source again. Some devices will distort the output signal if the volume is set to maximum. It is recommended that the source device EQ be set to "Flat" or "Off."

" In.



[You're reading an excerpt. Click here to read official HARMAN KARDON GO PLAY MICRO user guide](http://yourpdfguides.com/dref/3931402)
<http://yourpdfguides.com/dref/3931402>