

You can read the recommendations in the user guide, the technical guide or the installation guide for HARMAN KARDON SOUNDSTICKS II. You'll find the answers to all your questions on the HARMAN KARDON SOUNDSTICKS II in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HARMAN KARDON SOUNDSTICKS II
User guide HARMAN KARDON SOUNDSTICKS II
Operating instructions HARMAN KARDON SOUNDSTICKS II
Instructions for use HARMAN KARDON SOUNDSTICKS II
Instruction manual HARMAN KARDON SOUNDSTICKS II

## harman/kardon\*



## SoundSticks II Setup Guide

English

Easy Setup Guide



You're reading an excerpt. Click here to read official HARMAN KARDON SOUNDSTICKS II user guide http://yourpdfguides.com/dref/3931498

## Manual abstract:

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. @@@@@@@ft this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures: Increase the separation between the equipment and receiver. Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits. Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by Harman Consumer Group, Inc., could void the user's authority to operate the equipment. Please Read the Following Operation Precautions Before Use Read instructions all the safety and operating instructions should be read thoroughly before attempting to operate this audio system. Retain instructions for future reference. @@@@@THERE ARE NO USERSERVICEABLE PARTS INSIDE THIS UNIT. @@ Do not expose the speakers to liquid or solvent.

@@The speaker system does not contain any user serviceable parts. Refer all servicing to the Harman Consumer Group, Inc., Support Group. · · · · · · Do not expose the speaker system to temperature or humidity extremes, direct sunlight, excessive dust, or vibrations. Place the speaker system on a stable, level surface.

Do not drop, apply excessive force to the controls, or put heavy objects on top of the speaker. If cleaning is required, use a soft dry cloth. If necessary, use a damp cloth without any solvents. In order to protect the speaker system, avoid microphone feedback, continuous output from electronic musical instruments, or distorted output from any signal source. Do not place the speakers close to fluorescent light sources, or neon light fixtures.

Although the speakers are magnetically shielded, keep magnetic storage media (disks and tapes) at least four inches from the speaker system in order to avoid data loss. @@@@.Guarde las instrucciones para su futura referencia. @@@@@@@@@@@@@@@@@@@@@@@@@@@@@.No lo deje caer ni aplique fuerza excesiva a los controles, como tampoco ponga objetos pesados sobre ningún altavoz. Si requiere limpieza, use un paño suave y seco. Si es necesario, humedézcalo con agua, pero no use ningún solvente. Para proteger el sistema de altavoces, evite la retroalimentación del micrófono, la salida continua de instrumentos musicales electrónicos, o la salida distorsionada de cualquier fuente de señales. @@@@@@@@@@@@Connect satellites to subwoofer. Step 4.

Insert SoundSticks II input cable into the computer or other audio device. Step 5.

Plug power cord into power adapter. Step 6. Plug power adapter into subwoofer. Step 7. Plug power cord into wall receptacle. Step 8. Push power ON/OFF button. Unit is on when LED is lit. Step 9. Adjust volume level by touching + or button.

Touching both the + and buttons mutes the audio. When muted, touching either button unmutes the audio. Troubleshooting Symptom No sound from SoundSticks II speaker system. www.harmankardon.

com Possible problem No power to subwoofer. Solution Ensure power supply is connected to live power source and is properly connected to subwoofer.

Please note: When subwoofer is powered, a power LED should light. Place plug with arrow symbol facing UP into the subwoofer. Touch the volume "Up" (+)

pad on the volume control satellite to unmute and/or increase the system volume level.

@@@@No sound from satellites, only subwoofer. @@Satellites not connected to subwoofer. @@Check connection of satellites to subwoofer. Position and tilt (angle) loudspeakers toward listener. The sound from the satellites is very directional due to the 4-element linear array design. Power adapter plug not inserted correctly. No volume or low volume. \*These specifications are subject to change without notice. This product is intended to be supplied by a listed direct plug-in power unit marked "Class 2" and output rated 16V DC minimum 1.5 A.

Harman Kardon and SoundSticks are trademarks of Harman International Industries, Incorporated, registered in the United States and/or other countries.
Harman Kardon et SoundSticks sont des marques commerciales de Harman International Industries, Incorporated, déposées aux ÉtatsUnis et/ou dans d'autres pays. 250 Crossways Park Drive, Woodbury, New York 11797 USA www.harmankardon.com © 2008 Harman International Industries, Incorporated.
All rights reserved. Tous droits réservés. Part No. 950-0245-001 Rev. B.



You're reading an excerpt. Click here to read official HARMAN KARDON SOUNDSTICKS II user guide

http://yourpdfguides.com/dref/3931498