



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697. You'll find the answers to all your questions on the HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697
User guide HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697
Operating instructions HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697
Instructions for use HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697
Instruction manual HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697

Baking Basics

1. Place the baking pan in the baking slot as shown.
2. Use pan pusher to push pan into baking chamber. Stop when the baking line on the handle lines up with the bottom edge of baking slot as shown. Do not use your hands to push pan in. Do not leave pan tool in oven.
Look inside the oven to make sure the metal doors are closed on both sides. If one door is slightly open, use the pan tool to push it shut. If the pan is sticking out on the other side, you'll need to push the pan all the way through (Step 3), take it out (Step 4) and start again (Step 1).
3. When baking time is done, use pan pusher to push pan all the way through to cooling chamber. Be careful - pan is hot! Allow pan to cool in the cooling chamber for 5 minutes.
4. When cooling time is done, use the spatula to remove the pan from the oven.
5. Turn off oven and unplug when finished baking. Wait for oven to cool, then wipe clean with a damp cloth.

easybake.com
For great recipes, events and more!

33697/32344 Assr
PN 7159/80900
Cooking times may vary. Product and colors may vary.
© 2011 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
FOOD ITEMS MANUFACTURED FOR HASBRO, INC.

Questions?
Call 1-800-327-8264

AGES 8+
ADULT SUPERVISION REQUIRED.

Easy-Bake Ultimate OVEN

These mixes can be used with your EASY-BAKE Checker Cakes Kit! (sold separately)

DEVIL'S FOOD CAKE & STRAWBERRY CAKE MIXES

THIS SET INCLUDES:
2 devil's food cake mixes
1 strawberry cake mix
1 chocolate frosting mix
1 vanilla frosting mix

YOU WILL ALSO NEED:
EASY-BAKE Ultimate Oven, pan tool, baking pan and cupcake pan • measuring spoons • mixing bowls and spoons • cooking spray • wax paper or plastic mat

Note To Parents:
• Please read the EASY-BAKE Ultimate Oven instructions thoroughly before making these mixes.
• Make sure children wash their hands before using the mixes.

STAIN ADVISORY: Food mixes may cause staining. Cover your workspace with wax paper or a plastic mat, and avoid spilling food on clothing. If dry mix is spilled, use a broom or vacuum to clean it up. If wet mix is spilled, wash immediately with soap and water.



[You're reading an excerpt. Click here to read official HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697 user guide](http://yourpdfguides.com/dref/4250271)
<http://yourpdfguides.com/dref/4250271>

Manual abstract:

2. Use pan pusher to push pan into baking chamber. Stop when the baking line on the handle lines up with the bottom edge of baking slot as shown. Do not use your hands to push pan in. Do not leave pan tool in oven. @@if one door is slightly open, use the pan tool to push it shut. if the pan is sticking out on the other side, you'll need to push the pan all the way through (Step 3), take it out (Step 4) and start again (Step 1). 3. When baking time is done, use pan pusher to push pan all the way through to cooling chamber. Be careful - pan is hot! Allow pan to cool in the cooling chamber for 5 minutes.

4. When cooling time is done, use the spatula to remove the pan from the oven. 5. Turn off oven and unplug when finished baking. @@Product and colors may vary.

© 2011 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks.

Food iTeMS MAnUFACTURed FoR HASbRo, inC. Questions? @@· Make sure children wash their hands before using the mixes. STAIN ADVISORY: Food mixes may cause staining. @@If dry mix is spilled, use a broom or vacuum to clean it up. If wet mix is spilled, wash immediately with soap and water.

1 devil's food cake mix + 1 strawberry cake mix = 1 cake Devil's Food Cake & Strawberry Cake 3. Make three layers--each layer with three cake strips across, alternating flavors. (You'll have one strip of cake left over--yum!) 4. Spread frosting on the top and sides of the cake. @@@@· Spray baking pan with cooking spray.

1. @@@@Stir both mixtures with spoons until smooth. 2. @@Spread each flavor evenly so that the flavors meet in the middle. 3. Time to Bake! @@4. @@Turn the pan upside down and tap gently until the cake falls out. 5. Make the frosting: Pour 1 chocolate frosting mix and 1¼ teaspoons water into a bowl. Stir until smooth.

6. Frost the cake: Spread the chocolate frosting over the top and sides of the cake. Whoopie Pies Makes 6 whoopie pies First Steps · Preheat EASY-BAKE Ultimate Oven for 20 minutes. · Spray cupcake pan with cooking spray. 1.

@@Stir until smooth. Split the batter in half. 2. @@@@3. Place the cupcake pan on the baking pan.

4. Time to Bake! (Turn to Baking Basics for cooking instructions.) baking Time: 10 minutes. 5. Repeat the steps to bake the rest of the batter. 6. Pour 1 vanilla frosting mix and 1¼ teaspoons water into a bowl. Stir until smooth. 7. @@Cut your cake down the middle, separating the strawberry cake side and the devil's food cake side.

2. .



[You're reading an excerpt. Click here to read official HASBRO EASY BAKE ULTIMATE OVEN DEVILS FOOD CAKE STRAWBERRY CAKE 33697 user guide](http://yourpdfguides.com/dref/4250271)

<http://yourpdfguides.com/dref/4250271>