



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO FURBY BABY 59961. You'll find the answers to all your questions on the HASBRO FURBY BABY 59961 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO FURBY BABY 59961
User guide HASBRO FURBY BABY 59961
Operating instructions HASBRO FURBY BABY 59961
Instructions for use HASBRO FURBY BABY 59961
Instruction manual HASBRO FURBY BABY 59961



[You're reading an excerpt. Click here to read official HASBRO FURBY BABY 59961 user guide](http://yourpdfguides.com/dref/1193522)
<http://yourpdfguides.com/dref/1193522>

Manual abstract:

CARE GUIDE Thank you for purchasing FURBY BABY™! For maximum play value, please read and follow instructions carefully. Requires 3 x 1.5V "AA" or LR6 size alkaline batteries (not included). @@Remove door and insert 3 x 1.5V "AA" or LR6 size alkaline batteries. @@@@Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries; 3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION Please retain this information for future reference. Batteries should be replaced by an adult. **CAUTION:** 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and polarity markings. 2. Do not mix old and new batteries or standard (carbon-zinc) with alkaline batteries. 3.

Remove exhausted or dead batteries from the product. 4. Remove batteries if product is not to be played with for a long time. 5. Do not short-circuit the supply terminals.

6. @@@@7. @@Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.** 1 Hey! @@I'll then open my eyes and make noises or say, "Feed me!" FURBY BABY has 2 sensors: Tummy Sensor: Activate by touching lightly with the pads of your fingers Mouth Sensor: Activate by inserting the bottle (or your finger) **WAKING AND FEEDING BABY** When I say, "Feed me", insert the bottle into my mouth. You may even hear me "chewing" on the bottle. After feeding and stretching, I may make uncomfortable sounds or say, "Me no feel good", meaning I need to be burped. Touch my tummy once and I'll "relieve" myself. If my mouth is open, I probably need to be fed more.

If I'm asleep, wake me up by feeding me. If you don't feed me when I ask you to, or burp me when needed, I'll go back to sleep. 2 **PLAYING WITH BABY** When I'm stretched out, fed and comfortable, I'm ready to play with you. Touch my tummy and I'll say random phrases including some in FURBISH®! I might even sing. Don't forget to feed and/or burp me when I need it. @@If I say, "Tickle me", touch my tummy and I'll laugh. @@Press FURBY's tummy for a few seconds until he blinks. Then touch my tummy for a few seconds until I blink. Then quickly hold FURBY and me close together so our tummies touch.

@@@@@@@@Slide the ON/OFF switch to OFF, then back to ON, or 3.

@@@@Do not submerge in water. Do not use detergent or stain removers on fur. @@To prevent staining fur, wipe off dirt immediately. @@Avoid spilling food or beverages on the toy. @@@@Keep this handy dictionary nearby so that you can understand what we're saying when we speak FURBISH!

FURBISH® ENGLISH Ay-ay bay-bee kah doo-loo .

.....

.....

.....

.....

Look baby, me funny Bay-bee boo noo-loo

.....

.....

.....

.....

..... Baby not happy Bay-bee mee-mee ay-tay ..

.....

.....

.....

.....

... @@Baby very sleepy Dada doo?

.....

.....

.....

.....

.....

.....

.....

..... Where's Daddy? Hey, doo-moh ah-tah bay-bee ...

.....

.....

.....

.. @@Hey, me see baby Kah may-may oo-nye bay-bee

.....

.....

..... @@Me sing baby Mama doo?

.....

.....

.....

.....

.....
.....
.....

..... @@Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

@@@- Increase the separation between the equipment and receiver. @@© 2005 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. U.S. Patent Nos. 6149490, 6514117 & 6537128; AU722816; DE29904916.7 and Patent Pending. 59961 Asst. PN 6553450000 Questions? Call 1-800-844-3733.



[You're reading an excerpt. Click here to read official HASBRO
FURBY BABY 59961 user guide
http://yourpdfguides.com/dref/1193522](http://yourpdfguides.com/dref/1193522)