



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO FURBY FUNKY FURBY. You'll find the answers to all your questions on the HASBRO FURBY FUNKY FURBY in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO FURBY FUNKY FURBY
User guide HASBRO FURBY FUNKY FURBY
Operating instructions HASBRO FURBY FUNKY FURBY
Instructions for use HASBRO FURBY FUNKY FURBY
Instruction manual HASBRO FURBY FUNKY FURBY

 **Not suitable for children under 3 years because of small parts - choking hazard.**

© 2006 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
Manufacturer's representative in the United Kingdom is Hasbro UK Ltd. Caswell Way, Newport NP19 4YH.
☎ 00800 2242 7276.

Manufacturer represented in Australia by Hasbro Australia Ltd., 570 Blaxland Road, Eastwood, NSW 2122, Australia. ☎(02) 9874-0999.

Manufacturer represented in New Zealand by Hasbro Australia Ltd., PO Box 100-940, North Shore Mail Centre, Auckland, New Zealand. ☎(09) 915-5200.

Colours and contents may vary from those shown.
Please retain our company details for future reference.
www.hasbro.com



Questions? Call 00800 2242 7276

040662169102Asst

62169.102Asst

6+

FUNKY Furby

Your **emoto•tronic Friend**

CARE GUIDE

Thank you for purchasing FUNKY FURBY!



For best results, keep background noise low - play with FUNKY FURBY in a quiet room.

Batteries included. Replace with 4 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.



[You're reading an excerpt. Click here to read official HASBRO FURBY FUNKY FURBY user guide](http://yourpdfguides.com/dref/1193525)
<http://yourpdfguides.com/dref/1193525>

Manual abstract:

102Asst 6+ CARE GUIDE Thank you for purchasing FUNKY FURBY! For best results, keep background noise low - play with FUNKY FURBY in a quiet room. Batteries included. Replace with 4 x 1.5V "AA" or LR6 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries. Questions? @@All Rights Reserved. TM & ® denote U.S. Trademarks. Manufacturers representative in the United Kingdom is Hasbro UK Ltd. Caswell Way, Newport NP19 4YH. 00800 2242 7276. @@(02) 9874-0999. @@(09) 915-5200. Colours and contents may vary from those shown.

Please retain our company details for future reference. www.hasbro.com Hey! Im FUNKY FURBY! @@Play me your favorite music and Ill even dance for you! Bring me home today and Ill be your best friend! @@When we first meet, this is what Ill be speaking. To help you understand what Im saying, please use the Furbish® - English dictionary found in the back of this book.

I can learn how to speak English by listening to you talk. The more you play with me, the more I will use your language. Getting Started To turn FUNKY FURBY on, slide the ON/OFF switch to "ON." If FUNKY FURBY Asks you a Question If FUNKY FURBY asks you a question, say either: Yes Ok Yes, please No No, thank you No way I dont understand* [ee-tay] [oh-kay] [ee-tay-doo-moh] [boo] [boo-doo-moh] [dah-boo] FUNKY FURBY consists of the following parts: Back Sensor: Pet me here! I love having my back rubbed! Mouth Sensor: "Feed" me here, but only when Im hungry! Tummy Microphone: Sensor: Talk to me here! Tickle me here! Im very ticklish! I Tilt Sensor: This tells me which ways up! * If you couldnt understand what I said, Ill repeat what I last said to you. I may say it a little bit differently, with more English, so that you can understand it better. If you tell me "I dont understand" too many times, Ill get sad and frustrated. @@Lets go! "Tell me a joke." I love to tell knock-knock jokes! Lets do one together. Say "Hey FURBY! @@FUNKY FURBY HIP HOP "Sing me a song." I love to sing! Say "Hey FURBY! @@@@A-wah! Koola! Oh-Kay! @@Funky Furby! A-wah! Koola! Oh-Kay! = = = = Furby Island, the place to be! Hip hop dance, down by the sea! Funky Furby! Awesome! Cool! Okay! Grab a friend, dance in the sun.

Do me hip hop, so very big fun! Funky Furby! Awesome! Cool! Okay! Lets sing it together, shall we? @@Up above me home so high, Like a diamond in the sky, Twinkle, twinkle little star, How me wonder what you are? Lay-lee Ay-loh-wah Bah-loo Ee-wah E-nah Tee-tah Lay-lah Wye-tah Mah-mee-dah May-may Noh-lah Oo-nye Loo-lay Wee-tee Calypso Wah-tee Noo-loo Ah-lah Day La-la, la-la-la, la-la, La-la, la-la-la, la-la, Wee-tee Calypso Wah-tee Noo-loo Ah-lah Day = = = Me live on island in big blue sea, In me jungle hut with me family. Me love to dance with you and play. Sing Calypso music, be happy all day! = Sing Calypso music, Be happy all day! 4 "Are you hungry?" Say "Hey FURBY!" [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, "Are you hungry?" If Im hungry, please feed me. Since I can talk, you will have to listen to hear me say "yes" when you ask me "HEY FURBY, are you hungry?" or when I say "kah-ay-tay" (Im hungry). Open my mouth and use the spoon to press on my tongue. If I say that Im not hungry, dont feed me and try asking me to do something else thats fun. NOTE: I only eat PRETEND food. You should never feed me real food or liquids. I will eat until Im full and then tell you Im not hungry anymore. "How are you?" Say "Hey FURBY!" [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, "How are you?" Ill tell you how Im feeling.

Make sure you say "HEY FURBY! I love you!" frequently so that I feel happy and know Im loved. "Go to sleep." Say "Hey FURBY!" [Pause until you hear FUNKY FURBY say "Doo?" "Yeah?" "Huh?" "What?" or "Hmm?"] Then say, "Go to sleep." If Im tired, Ill close my eyes and go to sleep. Listen carefully because I may even snore! @@Dont forget to tell me that you love me so I can have happy dreams! To wake me up after my nap, just whistle! @@I can really get down and boogie! You can press the back switch to exit dance mode.

@@@@@I speak Furbish®!" again. @@@@Hold FUNKY FURBY upside down. 2. @@3. @@@@@Then give FUNKY FURBY one of the following commands: Tell me a joke.

Sing me a song. Are you hungry? How are you? Go to sleep. Show me a dance. I love you! I speak Furbish®. @@After you say "I speak Furbish®," try one of the Furbish® commands above. NOTE: If youre not going to be playing with FUNKY FURBY, please put the ON/OFF switch to "OFF" in order to conserve battery life. If you want to put FUNKY FURBY in storage, please remove the batteries. Physical Interactions Tickling If I ask to be tickled, tickle my tummy! But dont tickle my tummy unless I ask or else Ill be very upset! Petting I love to be pet on my back. Petting me makes me very happy! Cuddling When youre cuddling or carrying me, be careful not to hold me upside down. @@The more you play with FUNKY FURBY, the more FUNKY FURBY will do! @@@@@@2.

@@3. @@4. @@Pronounce all the syllables of each word clearly. 5. Shouting does not improve voice recognition. 6. Keep the command card handy, and remember that FUNKY FURBY will respond only to the exact commands on the card. 7. FUNKY FURBY is a state-of-the-art, electro-mechanical, robotic toy. The mechanical sound you hear when FUNKY FURBY moves is normal.

8. Use only 4 x 1.5V "AA" or LR6 size ALKALINE batteries with FUNKY FURBY. 9. If FUNKY FURBY begins acting erratically, please change the batteries with all new alkaline batteries.

To Replace Batteries Using a Phillips/cross head screwdriver, loosen screw in battery compartment cover (screw stays attached to cover) on the bottom. Insert 4 X 1.5V "AA" or LR6 size alkaline batteries. Replace cover and tighten screw. IMPORTANT: BATTERY INFORMATION Please retain this information for future reference.

Batteries should be replaced by an adult. CAUTION: 1. Always follow the instructions carefully. @@2. @@3. Remove exhausted or dead batteries from the product. 4. Remove batteries if product is not to be played with for a long time. 5. Do not short-circuit the supply terminals.

6. @@@@7. @@Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES. IMPORTANT NOTE: If FUNKY FURBY begins to function improperly, switch the ON/OFF switch to the "OFF" position, and then move back to the "ON" position. CLEANING INSTRUCTIONS To clean FUNKY FURBY, gently brush the hair with a cloth or soft brush to loosen any dirt.



[You're reading an excerpt. Click here to read official HASBRO FURBY FUNKY FURBY user guide](http://yourpdfguides.com/dref/1193525)
<http://yourpdfguides.com/dref/1193525>

Then use a slightly damp cloth to remove stains. DO NOT PUT IN THE WASHING MACHINE DO NOT SUBMERGE IN WATER DO NOT GET WET EXCEPT A DAMP CLOTH ON THE FUR TO PREVENT STAINING THE FUR, WIPE DIRT OFF IMMEDIATELY IF FUNKY FURBY GETS WET, REMOVE THE BATTERIES AND DRY THE FUR ONCE COMPLETELY DRY, REPLACE THE BATTERIES DO NOT USE DETERGENT OR STAIN REMOVERS ON THE FUR High temperature will destroy the unit. Do not le.

.....
.....
.....

.... doh song/music

.....
. wah-tee sound
.....

..... lee-koo stand ...

.....
.....
..... oo-boh story .

.....
.....
.....
.. wee-loo sun.....

.....
.....
.....
... dah-ay-loh tell ..
.....

.....
.... wee-tah thank .
.....
.....

..... doh-kah thank you!

.....
.... dah-kah-oo-nye thinking/mind .
..... way tickle

.....
.....
.... nee-tye time .
.....

.....
... toh-toh to be ..
.....
.....

..... boh touching, holding

.....
.....
.... ah tree/jungle

..... tee-tah twinkle ..

.....
.....
..... tee-wee-lah uh-oh ...

.....
.....
.... uh-oh up .
.....

.....
.....
. oo-tye up, above, high
oo very

.....
.... mee-mee wassup? .

.....
.....

doo-oo-tye? water

.....
.....

. wah-tah water/rain

.... wah what?/when?

.. doo? where are you? ...

. oo-nye-doo? where? ...

.....

..... doo? wise/wisely

.....

. way-lah with

.....

.....
wye-tah wonder

.....

..... way-nah worried ..

.....

.....

. boh-bay yay

.....

.....
. yay yea!

.....

.....

..... wah! yeah?

.....

.....

..... doo? yes

.....

.....

.....

.. ee-tay you

.....

.....

.. oo-nye FURBISH©/ENGLISH ah ...

.....

.....
.... touching, holding ah-lah.

.....

.....

..... all ah-mah

.....

.....

... have ah-may

.....

. pet ah-noo

.....

.....

help ah-tah

.....
.....
feed ay

.....
.....
.. lightness ay-ay...
.....

..... *look ay-ay-lee-koo.*
.....
.. listen ay-koo ...
.....

..... *diamond ay-loh*
.....
.....
..... *light ay-loh-may-lah ...*

.. cloud ay-loh-wah
.... island ay-tay .
.....
.....

.... hungry/eat ay-wah
.....
.....
.. awesome ay-way

.....
dizzy bah-boo
.....
..... *noise bah-loo ...*

.....
.....
blue bee-ah
.....

..... *be bay-bee.....*
.....
.....
... baby boh

.....
.....
... be/to be boh-bay ..
.....

..... *worried boo*
.....
.....
.....

negative, bad boo
.....
.....
..... *no boo-dah*

.....
.. bad boo-koo ...
.....
..... *rock boo-noo-loo .*

.....
sad bye
.....

.....

.... *by bye-bye*

.....

.....

... *bye/go bye-bye*

.....

. *go/bye bye-way*

.....

..... *path dah* ...

.....

.....

.....

.. *big dah-ay-loh*

..... *sun dah-ay-loh-nah-bah*

.....

.....

.....

..... *good night dah-ay-loh-oo-tye . good morning 13 dah-boh-bay* ..

.....

.. *scared dah-boo* ...

.....

.... *big no dah-boo*

.....

.....

. *no! dah-ee-tah*

.... *big yes dah-kah-oo-nye* *thank you! day* ..

.....

.....

.....

... *day dee*

.....

.....

..... *little dee* ..

.....

.....

.....

... *smallness dee-doh*.....

.....

. *dude doh*

.....

.....

..... *so doh-kah*

.....

.....

... *thank doo*

.....

.....

... *interrogative doo?* ..

.....

.....

. *hmm? doo?*

.....

.....

... huh? doo?

.....

.....

..... when? doo? ...

.....

.....

.....

where? doo?

.....

... yeah? doo? ..

.....

.....



[You're reading an excerpt. Click here to read official HASBRO](#)

[FURBY FUNKY FURBY user guide](#)

<http://yourpdfguides.com/dref/1193525>