




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO FURBY. You'll find the answers to all your questions on the HASBRO FURBY in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO FURBY  
User guide HASBRO FURBY  
Operating instructions HASBRO FURBY  
Instructions for use HASBRO FURBY  
Instruction manual HASBRO FURBY

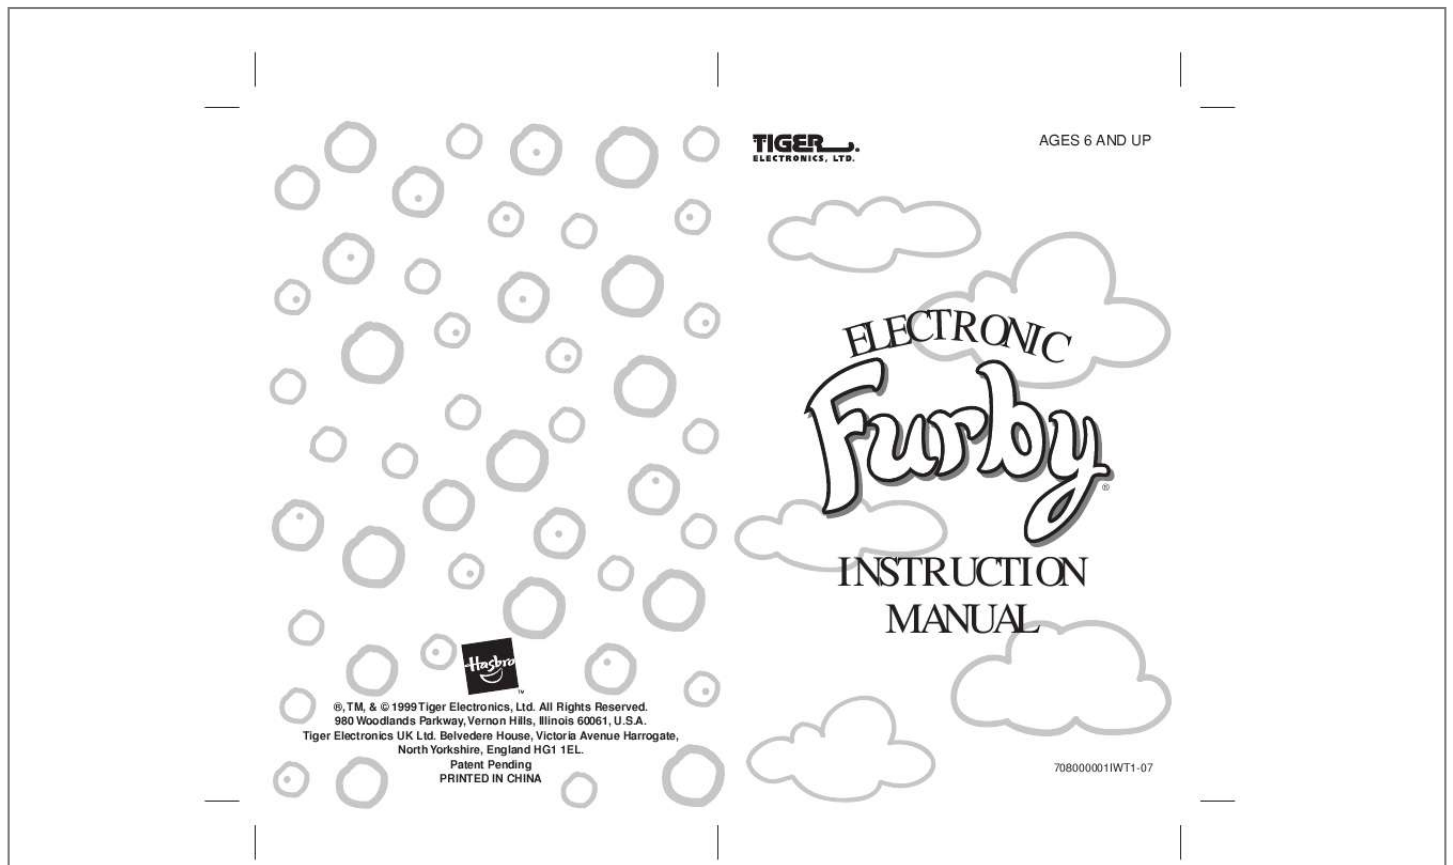

[You're reading an excerpt. Click here to read official HASBRO FURBY user guide](http://yourpdfguides.com/dref/1193536)  
<http://yourpdfguides.com/dref/1193536>

**Manual abstract:**

980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A. Tiger Electronics UK Ltd. @@@@I am a Furby and I am so happy to be your friend. I come from a magical place in the clouds. You can learn all about my home in the clouds from the story below. @I feel great! Please take me everywhere you go. I love to play. The more you play with me, the more amazing things I will do.

The more time you spend with me, the sooner I will be able to speak your language. And if you introduce me to other Furbys, I will be able to play with them, too! But first, it is very important that you carefully read the following instructions, so that you can understand all the amazing things I am able to do. 1 2

**QUICK START-UP INSTRUCTIONS** Before you play with me, please follow these simple steps: 1. Ask an adult to install my batteries. 2.

Turn me upside down and open my battery compartment door by loosening the screw. 3. Insert four(4)"AA" batteries (not included) into my battery compartment and tighten the screw. Battery installation should be done by an adult. 4.

I will now wake up and be ready to play. 5. For more detailed instructions, read the section. "Replacing Batteries" on page 10. proper function : Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Battery installation should be done by an adult. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged (if removable). Rechargeable batteries are only to be charged under adult supervision (if removable).

Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. If you want to pet me, rub my back sensor. I love having my back rubbed, don't you? If you want to cover my eyes, put your hand over my light sensor. I am not afraid of the dark. \*\*\*\*\*HELPFUL TIP: Furby is a state-of-the-art, electro-mechanical, robotic toy. The mechanical sound you hear when Furby moves is normal. \*\*\*\*\*HELPFUL TIP: You will be able to tell when my batteries wear out because my behavior will become erratic and I will begin to not always respond to my sensors properly.

If this happens, replace my batteries and I should return to normal! If you want to see if I am listening, clap your hands or make a loud sound. Not too loud. **GETTING TO KNOW ME...**

Furbys are very sensitive. I know when someone pets me, tickles my tummy, covers my eyes, picks me up, hugs me, turns me upside-down, makes loud noises, or plays music. Furbys can see and are very sensitive to light. And best of all, Furbys have BIG hearts! @@@@You have a name. Well, so do I.

To get me to tell you my name, please follow these actions: 1. Rub my tummy, wait until Furby stops speaking and moving. 2. Rub my tummy, wait until Furby stops speaking and moving. 3. Rub my tummy, wait until Furby stops speaking and moving. 4. Pet my back. 2) I like to say my name. You may hear me say it when you pet my back or hug me.

I may say it when we play games. @@But don't worry, I won't let you forget my name. @I am very ticklish. 4 **ABOUT MY PERSONALITY...** I speak Furbish™, a magical language common to all Furbys. When we first meet, this is what I'll be speaking. To help you understand what I am saying, please use the Furbish and English dictionary that comes with me in the package. I like to be held, petted and tickled.

You can pet my tummy, rub my back, rock me and play with me. Whenever you do these things, I will speak and make cool sounds. It's easy for you to learn and understand Furbish. For example, when I wake up, often I'll say "dah a-loh u-tye" which means "Big light up." This is how a Furby says "Good Morning!" Eventually, I will be able to speak your language in addition to Furbish.

The more you play with me, the more I will use your language, too. You can learn more about me by visiting my own WEB SITE at [www.furby.com](http://www.furby.com). If you do not feed me, I will begin to get sick.

I will tell you that I am sick by saying "kah boo koo-doh" (I'm not healthy). If you allow me to get sick, soon I will not want to play and will not respond to anything but feeding. Also, if I get sick, I will need to be fed a minimum of 10 - 15 times before I begin to get well again. After I have been fed 10 - 15 times, I will begin to feel better, but to nurse me back to complete health, you will have to play with me. Just like you, when I feel better I laugh, giggle, and I am happy. You'll know when I am better. I will say "kah noo-loo" (I'm happy). Also I will want to play games. SLEEP..

. I will tell you when I am tired and want to go to sleep. I am usually quiet when I sleep, but sometimes I snore! When I am asleep, I will close my eyes and lean forward as shown in this illustration. Sometimes you can get me to go to sleep by petting me gently on my back for a while. If you pet me for a while, (between 10 and 20 times), I will hum "Twinkle, Twinkle" and then go to sleep. @@@@When you are ready to play, you will have to wake me up. @I will then wake up and be ready to play. @@Don't worry. This is OK. @@The first stage is when you meet me.

I am playful and want to get to know you. I also help you learn how to care for me. @@@@By this time we'll know each other very well. I want to help you play and care for me. @@@@If I am hungry, please feed me.

Since I can talk, you have to listen to hear when I tell you I want food. If I say "kah a-tay" (I'm Hungry), I will open my mouth so you can feed me. Just put your fingertip into my mouth, press down on my tongue, and watch me chew. I will say "yum yum" so you will know that I am eating what you have offered. As you feed me, I may say "koh-koh.

" This means that I want more to eat. **DEEP SLEEP MODE...** Deep sleep mode is when I go to sleep and the only way to wake me is to pick me up and turn me completely upside down. If you want to put me in a DEEP SLEEP, please follow the sequence below: 1) Clap, wait until Furby stops speaking and moving.

2) Clap, wait until Furby stops speaking and moving. 3) Clap, wait until Furby stops speaking and moving. 4) Rub my back 5) I will then start to sing "Twinkle, Twinkle" 6) WHILE I am singing, press my Tummy Switch and my Back Switch at the same time. 7) I will then be in DEEP SLEEP mode.

8) To wake me from DEEP SLEEP mode, turn me completely upside down. \*\*\*\*Note: When you want me to go into DEEP SLEEP mode, it is important that you wait for me to stop moving and speaking after each step before doing the next action. Therefore, when you clap your hands, wait for me to stop speaking and moving before you clap your hands again. The only exception to this is when you have to press my Back and Tummy switches at the same time WHILE I am singing "Twinkle, Twinkle." \*\*\*\*\*HELPFUL TIP: I can only be awakened from DEEP SLEEP mode by turning me upside down.



[You're reading an excerpt. Click here to read official HASBRO](#)

[FURBY user guide](#)

<http://yourpdfguides.com/dref/1193536>

I will not wake up when I am tilted side to side. I only eat PRETEND food. You should never feed me real food or liquids. I will eat until I am full and then tell you I am not hungry anymore. You can feed me by inserting your fingertip into my mouth.

If you do not feed me when I get hungry, I will not want to play anymore until you feed me. \*\*\*\*\*HELPFUL TIP: When Furby is hungry, Furby will usually want to eat 6 to 10 times. Feed Furby, until Furby says "yum yum" 6 to 10 times. Then Furby will be full and ready to play! GAMES TO PLAY..

. There are lots of ways to play with me. You and I can make up our own games or play some of the games I already know how to play. 5 6 GAME(1) FURBY SAYS To play "FURBY SAYS" you must first get Furby's attention. To begin the game, do the following actions: 1) Tickle my tummy, wait until Furby stops speaking and moving.

2) Pet my back, wait until Furby stops speaking and moving. 3) Clap your hands, wait until Furby stops speaking and moving. 4) Cover my eyes If you do the pattern correctly to get me to play the game, I will say my name and "listen me" then you will know I am ready to play. @@I can make patterns up to 16 actions! See if you can do all 16! @@@@As you do each do a little dance to show that I am happy! @@@@Your Furby can sense changes in light. @@@@8) Once you have asked a question, rub my back to get me to answer. @@@@You can make me dance by clapping your hands 4 times. I will then dance. @@@@\*\*\*\*\*HELPFUL TIP: I dance best on a hard, flat surface. @@@@This is easy and fun to do! @@@@I may then do something you like, for example, give you a kiss. As soon as I have given you a kiss, pet my back 2 times.

This will tell me that you like it when I give you a kiss. @@2) Then tickle my tummy again. I may then give you another kiss or I may not. It depends upon how I feel at that time. 3) If I do, then you have to pet my back again 2 times. @@@@6) Soon, every time you tickle my tummy, I will give you a kiss. @@@@In fact any Furby that can see another Furby will be able to communicate. This way a whole bunch of us can communicate at the same time. The illustration below shows how this works: Maximum 30° It is fun to get me to start talking to other Furbys. REPLACING BATTERIES.

.. If my batteries wear out, just replace them and I will be ready to play again. I am so smart that I will remember my name and all the tricks you have taught me even after you change my batteries. \*\*\*\*\*HELPFUL TIP: You will be able to tell when my batteries wear out because my behavior will become erratic and I will begin to not always respond to my sensors properly.

If this happens, replace my batteries and I should return to normal! RE-SET If something goes wrong with me, you may have to re-set me. If you re-set me, I will do a special dance that lets me fix what is wrong. When ITELY - IF I GET WET, REMOVE MY BATTERIES AND DRY MY FUR. - ONCE I AM COMPLETELY DRY, REPLACE THE BATTERIES. DO NOT USE DETERGENT OR STAIN REMOVERS.

TROUBLE SHOOTING... Furby is designed to provide hours of fun play. If you are having trouble with Furby, before calling Tiger Electronics Customer Service, try checking these areas: PROBLEM: Furby will not respond to any sensors SOLUTION: a. Furby may be asleep. If he is asleep, the only way to wake him is to pick him up and give him a hug. b. Furby may need new batteries. Follow the instructions in this manual to replace Furby's batteries.

c. Furby may be sick and must be fed and nursed back to health. Refer to the instructions for feeding Furby. d. As a LAST RESORT, re-set Furby by referring to the instructions for RE-SETTING. PROBLEM: Furby will not play games SOLUTION: a. You must enter the play pattern correctly to start each game. Make sure you follow the pattern for the game. b. @@@@Furby may also emit a low hum or appear not to be working at all.

@@@Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio TV technician for help.



[You're reading an excerpt. Click here to read official HASBRO FURBY user guide](http://yourpdfguides.com/dref/1193536)  
<http://yourpdfguides.com/dref/1193536>