




Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471. You'll find the answers to all your questions on the HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471
User guide HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471
Operating instructions HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471
Instructions for use HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471
Instruction manual HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471


TO REATTACH HALTER

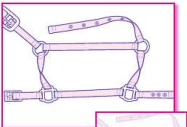


1. The assembled halter looks like this.




1a. Buckle this part of halter.



2. Turn halter over with the buckle underneath.



3. Place halter over pony's muzzle as shown.




4. Buckle behind the pony's ears (using second or third hole).

FCC STATEMENT
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 2006 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.
U.S. Pat. No. 6811461 and Patents Pending
76471 PN 668653000

Questions?
Call 1-800-327-8264



Visit Hasbro.com or FurRealFriends.com



AGES 4+
76471

CAUTION:
Keep small parts necessary for assembly out of children's reach.
ADULT ASSEMBLY REQUIRED.
Tool needed: Phillips/cross head screwdriver (not included).

Butterscotch Pony


PONY CARE GUIDE

Thank you for purchasing this FURREAL FRIENDS® toy! Be sure to read and follow instructions carefully, so you and your pony can have lots of fun together! Remember, BUTTERSCOTCH® is like a real pony in many ways. The more you take care of her and love her, the happier she'll be!


Pony comes with carrot, brush, halter and special adoption certificate.

For indoor use only.

1.5V D or 1.25V size
NOT INCLUDED
Alkaline batteries required (not included)
needed to insert batteries.



MAXIMUM WEIGHT 80lbs/36kg





[You're reading an excerpt. Click here to read official HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471 user guide](http://yourpdfguides.com/dref/1193539)
<http://yourpdfguides.com/dref/1193539>

Manual abstract:

1. The assembled halter looks like this. 1a. Buckle this part of halter. 2. Turn halter over with the buckle underneath. 3. Place halter over pony's muzzle as shown. 4. Be sure to read and follow instructions carefully, so you and your pony can have lots of fun together! Remember, BUTTERSCOTCH® is like a real pony in many ways.

Pony comes with carrot, brush, halter and special adoption certificate. FCC STATEMENT This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Increase the separation between the equipment and receiver. All Rights Reserved. TM & ® denote U.S. Trademarks. U.S. Pat. No. 6811461 and Patents Pending 76471 PN 6686530000 Questions? Call 1-800-327-8264 1.5V D or LR20 size FurRealFriends.com NOT INCLUDED Phillips/cross head screwdriver (not included) needed to insert batteries. MAXIMUM WEIGHT 80lbs/36kg ASSEMBLY "RIDING" YOUR PONY GROOMING YOUR PONY Brush your pony with her special grooming brush to keep her coat healthy. Step 1 Head Body Head Turning Mechanism Head Step 2 Step 1a Your pony can tell when you're sitting on her to have a "ride"! When you sit on your pony, she will move her head up and down, blink her eyes and twitch her ears while making soft sounds.

Body Pullback head plush. Snap head onto body. STEP 1A - VERY IMPORTANT This step helps ensure that your pony's head and neck have adequate support. Fasten screw to left side of head-turning mechanism. Fasten 2 screws onto the top of the head-turning mechanism. When sitting on your pony, tap her hindquarters with your hand and she'll go into "riding mode". Don't get wet; to remove stains use only a slightly damp cloth. Don't use detergent or stain removers. Avoid spilling food or beverages on the pony. FurRealFriends.

Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries; 3. Always remove weak or dead batteries from the product. If it is dark in the room and the lights come on suddenly while your pony is asleep, she'll lift her head and open her eyes. Batteries should be replaced by an adult. OFF/ON CAUTION: 1.

Always follow the instructions carefully. 2. 3. Remove exhausted or dead batteries from the product. 4. Remove batteries if product is not to be played with for a long time. 5. Do not short-circuit the supply terminals. 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and reinserting batteries) if necessary. 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision.

To conserve batteries, move switch to "OFF" position when you're not playing with your pony. 5 ABOUT YOUR PONY BUTTERSCOTCH has 11 sensors that sense either touch, light or sound: right hindquarters (touch) back (weight/pressure) left hindquarters (touch) left neck/shoulder (touch) microphone (sound) PLAYING WITH YOUR PONY To activate, slide OFF/ON switch to the "ON" position, and your pony will wake up and be ready to play with you! BUTTERSCOTCH responds when you pet her! photo sensor (light) A. When you pet your pony on her neck/shoulder, or start to groom her mane, she will move her head and neck toward you, and her head will tilt from side to side (she really likes it when you pet her!).



[You're reading an excerpt. Click here to read official HASBRO FURREAL FRIENDS BUTTERSCOTCH PONY 76471 user guide](http://yourpdfguides.com/dref/1193539)
<http://yourpdfguides.com/dref/1193539>