




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO I-DOG. You'll find the answers to all your questions on the HASBRO I-DOG in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO I-DOG
User guide HASBRO I-DOG
Operating instructions HASBRO I-DOG
Instructions for use HASBRO I-DOG
Instruction manual HASBRO I-DOG

AGES 8+

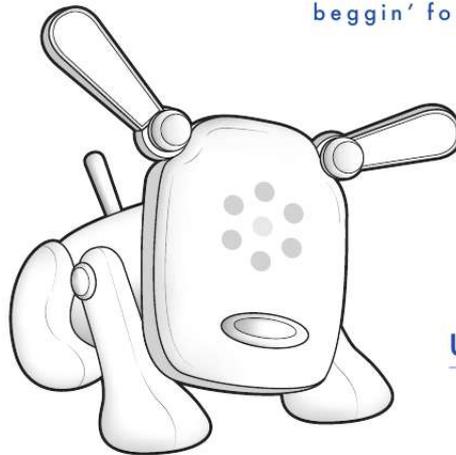

USER'S GUIDE



[You're reading an excerpt. Click here to read official HASBRO I-DOG user guide](http://yourpdfguides.com/dref/1194251)
<http://yourpdfguides.com/dref/1194251>

Manual abstract:

Be sure to read and follow all instructions carefully before using this product. "Feed" this robotic pooch your music - it listens, moves and grooves to all your tunes. Ready to rock, I-DOG gives you the lowdown on your music with expressive lights, movements and sounds! Requires 2 x 1.5V "AA" or LR6 size alkaline batteries (not included). Phillips/cross head screwdriver (not included) needed to insert batteries. 1 Getting To Know I-DOG Light Sensor Moving Ears Tail Switch Speaker Face with 7 Multicolored LED Lights Nose Button Connector Cord Jack (A) Rotating Head Poseable Legs Microphone Reset Button bottom view 2 1 To Install Batteries To begin playing with I-DOG, you must first install the batteries. @@@@Replace cover and tighten screw. 1 3 CAUTION: TO AVOID BATTERY LEAKAGE 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions; 2.

Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries; 3.

@@Batteries should be replaced by an adult. CAUTION: 1. 2. 3. 4.

5. 6. 7. Always follow the instructions carefully. @@@@Remove exhausted or dead batteries from the product.

Remove batteries if product is not to be played with for a long time. Do not short-circuit the supply terminals. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES. 4 1 Getting Started 1. Turn I-DOG ON by pressing the Nose Button.

@@@2. When you first turn I-DOG on, it will be in puppy mode. @@@@3. @@@@You can also press its Nose Button and it will make a scratching sound effect while displaying a spinning LED light pattern. Double-click its Nose Button quickly and repeatedly to hear music that represents what personality I-DOG currently has. If I-DOG doesn't play a musical riff in return, that means it doesn't yet have a personality. If I-DOG needs more love and attention from you, its middle LED light will blink a pinkish/purplish color. Top of Head Middle LED The faster it blinks, the more urgently it needs your attention. When you see the middle LED light blinking purple, "pet" or wave your hand over the top of its head or press its Nose Button right away to show you care! 6 1 Nose Button "Feed" I-DOG Music To keep I-DOG satisfied and healthy, be sure to "feed" (play) it lots of music! (At least 5 minutes every hour.)

If I-DOG is hungry and needs more music from you, its middle LED light will blink blue.

It will blink faster as it gets hungrier. When you see the middle LED light blinking blue, "feed" it some music! Middle LED 1 7 How to Play with I-DOG NOTE: I-DOG does not need to be hooked up to a musical device in order to function. How to "Feed" I-DOG Start playing music on your musical device (CD player, stereo, portable personal music player, computer, video game system etc.). Its ears will perk up to show you that it's listening and its head and ears will periodically dance to the music.

@@@@Plug end A of the Connector Cord into the side of I-DOG. 2. @@@3. @@@@@@@@@@@@@@@@@@The type of music you listen to will influence its personality. @@@@@@@@@@@@@@When you're done "feeding" I-DOG (no music is playing), double-click the Nose Button and pay attention to the light patterns I-DOG displays to determine what mood it's in.

ECSTATIC This means that I-DOG is so excited and happy that it can't contain itself! You're "feeding" (playing) it enough music and giving it too much love and attention (petting its head or nose too frequently). EXCITED This means that you're "feeding" I-DOG enough music and giving it a lot of love and attention. You're petting its head or nose enough to keep it excited. 11 1 HAPPY This means that you're "feeding" I-DOG enough music and giving it the right amount of love and attention. @@@@@@@@@@@@@@It'll start to "cry" and play sad music. @@To quiet I-DOG down, tap its Tail Switch and it will give you 5 minutes of peace and quiet. But beware! I-DOG will get angry when you do this! To wake it up again press its nose. 2. If you will not be playing with I-DOG for a while, please remember to press and hold down the Nose Button for 5 seconds to turn it OFF. This will help conserve battery life.

3. If you do not interact with I-DOG for one hour, it will automatically shut off. 4. If you leave I-DOG ON in a dark and quiet room, it will stop moving and its middle LED will blink blue and purple. It will automatically go to sleep after 5 minutes of being left in the dark (as long as it's quiet). @@5.

@@@@@@@@This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and the receiver.

- Consult the dealer or an experienced radio/ TV technician for help. Product and colors may vary. © 2005 SEGA TOYS CO., LTD. All Rights Reserved.

© 2005 Hasbro. All Rights Reserved. TM & ® denote U.S Trademarks. 75024 PN 6484920000 .



[You're reading an excerpt. Click here to read official HASBRO I-DOG user guide](http://yourpdfguides.com/dref/1194251)

<http://yourpdfguides.com/dref/1194251>