



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO LITTLEST PET SHOP LPSO DANCING DOG. You'll find the answers to all your questions on the HASBRO LITTLEST PET SHOP LPSO DANCING DOG in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO LITTLEST PET SHOP LPSO DANCING DOG

User guide HASBRO LITTLEST PET SHOP LPSO DANCING DOG

Operating instructions HASBRO LITTLEST PET SHOP LPSO DANCING DOG

Instructions for use HASBRO LITTLEST PET SHOP LPSO DANCING DOG

Instruction manual HASBRO LITTLEST PET SHOP LPSO DANCING DOG



[You're reading an excerpt. Click here to read official HASBRO LITTLEST PET SHOP LPSO DANCING DOG user guide](http://yourpdfguides.com/dref/2453256)
<http://yourpdfguides.com/dref/2453256>

Manual abstract:

x3 BATTERIES INCLUDED Before You Begin Your pet comes packaged in "TRY ME" mode. @@The table below explains her reactions. Button Reaction
Nose Unplugged Press Type Plugged Reaction Unplugged 1 press Bark She dances. Press the button again to make her stop. Sneeze She stops and playing
music for 5 minutes. She goes to sleep. Nose Tail dancing Tail 2 presses 1 press Sneeze She stops dancing and playing music for 5 minutes. She goes to sleep.
Press and hold button for a few seconds. Press buttons at the same time and hold for a few seconds.

Nose & Tail She stops dancing, but plays music. Nothing happens. Your pet loves to play music! When you plug in your MP3 player or computer, she will
make a happy sound. When you unplug the music, she will make a sad sound. @@After that, she'll slow down.

@@@Her moods are random. www-w www w w w w -w Helpful Information: If you do not press her buttons for 50 minutes, your pet will shut off.

This will happen even if she's playing music. Troubleshooting If the toy doesn't respond, press the reset button on the back (use a ballpoint pen or a paper
clip) or change the batteries. To Replace Batteries Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw
remains attached to cover).

Remove cover. Remove and discard old batteries. @@Replace cover and tighten screw. 1. @@@@@2. Always follow the instructions carefully. @@3.
@@4. Remove exhausted or dead batteries from the product. 5.

Remove batteries if product is not to be played with for a long time. 6. Do not short-circuit the supply terminals. 7. @@@@8. RECHARGEABLE
BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult
supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES. FCC statement This device complies with part 15 of the FCC Rules.

@@@@@This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may
cause harmful interference to radio communications. @@If this equipment does cause harmful interference to radio or television reception, which can be
determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: ·

Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver. ·

Consult the dealer or an experienced radio/TV technician for help. @@Do not dispose of in your household waste bin.

© 2009 Hasbro. All Rights Reserved. TM and ® denote U.S. Trademarks.

94382/94381 PN 7029810000 Questions? Call: 1-800-327-8264 .



[You're reading an excerpt. Click here to read official HASBRO
LITTLEST PET SHOP LPSO DANCING DOG user guide
http://yourpdfguides.com/dref/2453256](http://yourpdfguides.com/dref/2453256)