



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO MEOOW-CHI. You'll find the answers to all your questions on the HASBRO MEOOW-CHI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual HASBRO MEOOW-CHI User guide HASBRO MEOOW-CHI Operating instructions HASBRO MEOOW-CHI Instructions for use HASBRO MEOOW-CHI Instruction manual HASBRO MEOOW-CHI

**TIGER ELECTRONICS**  
Age 4 and up

**Meow-Chi**  
Interactive Robo-Cat

**INSTRUCTION MANUAL**

Congratulations! With your new Meow-Chi™, you now have a special new friend. Meow-Chi is the first active Cat with eyes to play, sing and dance! Advanced biodynamic technology enables Meow-Chi to have many different moods and feelings, watch his eyes and his motions to see how he is feeling. He is trying to make himself fun to you and change from a kitten into a mature cat. Because Meow-Chi is a biodynamic system, don't see him as a toy, it's very important to play with him often while he is still "developing". This will help make Meow-Chi a happier cat as he grows up.

**CHECKLIST**  
The following items are included in this package:  
1 - Meow-Chi, The Interactive Cat  
1 - Mouse Play Toy  
1 - Instruction Guide

**BATTERY INSTALLATION**  
**IMPORTANT:** Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.  
1. Remove and remove the battery compartment door on Meow-Chi's base.  
2. Insert 4 AA/LEGO batteries as shown inside the battery compartments.  
3. Attach the battery compartment door and fasten the screw.  
4. Press the **RESET** button located on the back of Meow-Chi's head. (see **RESET** section for more details).  
\*Do not dispose of batteries in fire, batteries may explode or leak.  
**NOTE:** Meow-Chi will begin to move as soon as you install the batteries. Please try and catch him to turn on, either remove the batteries or use the section titled "SLEEP".

**HELPFUL TIP:** Meow-Chi is a mechanical robotic toy. The mechanical sound you hear when Meow-Chi moves is normal.

**To ensure proper function:**  
- Do not mix old and new batteries.  
- Do not mix alkaline, standard or rechargeable batteries.  
- Battery installation should be done by an adult.  
- Rechargeable batteries should be fully charged.  
- Rechargeable batteries are to be removed from the toy before being charged or reinserted.  
- Rechargeable batteries are dry to be charged under adult supervision.  
- Only batteries of the same or equivalent types as recommended are to be used.  
- Batteries are to be inserted with the correct polarity.  
- Discharged batteries are to be removed from the toy.  
- The supply terminals are not to be short-circuited.  
- Replace with new batteries at the end of each operation.

**CAUTION:**  
- As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.  
- Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.

**SET UP**  
For best results, play with Meow-Chi on a smooth, flat surface. Make certain the area is clear of obstacles so Meow-Chi can turn and dance freely. Meow-Chi should be played with indoors.

**MEOOW-CHI'S SENSORS**  
Just like a real cat, Meow-Chi is very unpredictable. Activate one of his sensors to see what he will do! Meow-Chi has five sensors: a light sensor, sound sensor, and a touch sensor. He also has a magnetic sensor that allows him to play with his mouse play toy, which will be described in the Mouse Play Toy section, and an infrared sensor that enables Meow-Chi to play with other Robo-Chi™ Pets. This function is described in the Communicating with Other Meow-Chi and Robo-Chi™ Pets section of this guide.

**To activate the Light sensor:**  
- Wait until Meow-Chi stops moving.  
- Slowly pass your hand in front of Meow-Chi's forehead (3 holes above eye level).  
- When you move your hand away, Meow-Chi will respond.

**To activate the Sound sensor:**  
- Wait until Meow-Chi stops moving.  
- Tap your hands or make a loud noise.  
- Meow-Chi will respond.

**To activate the Touch sensor:**  
- Simply press on the sensor on the side of Meow-Chi's head, below his ears. If you press the sensor once, Meow-Chi will respond; press the sensor twice and Meow-Chi will do... You can press the sensor up to 5 times and Meow-Chi will respond in many different ways! Most of Meow-Chi's responses are affected by Meow-Chi's biodynamic level, the more you play with him, the happier he will be.

**MEOOW-CHI'S EYES**  
Meow-Chi's eyes are very expressive; they will help you to know whether Meow-Chi is happy, sad, sleepy or hungry. Watch Meow-Chi's eyes; can you tell what he is feeling?

**MEOOW-CHI'S BIORHYTHM**  
Graphs shown below represent the biodynamic levels of Meow-Chi. Each level lasts about 30 minutes and determines Meow-Chi's mood and behaviors. For example, when Meow-Chi is in level 1 he will be unhappy almost all the time and will have sad eyes. In level 6 Meow-Chi will be happy almost all the time and may even sing you special songs!  
**Remember:** If Meow-Chi is sad, it's easy to make him happy again by playing with him. Don't forget, Meow-Chi has 6 different sensors that need attention (refer to Meow-Chi's Sensors section).

**Level 1:** Meow-Chi is very unhappy and needs much care and affection.  
**Level 2:** Meow-Chi is still sad, maybe playing with his Mouse Play Toy will help!  
**Level 3:** Remember to watch Meow-Chi's eyes, they tell you how he feels.  
**Level 4:** Getting happier, Meow-Chi likes to hear you dance with him.  
**Level 5:** Meow-Chi hears when you talk or sing these Cat songs!  
**Level 6 (Home sweet home!):** Meow-Chi starts at this level when he rest.  
**Level 7:** Meow-Chi is very happy, he might even sing you a special song!  
**Level 8:** Congratulations, you are a Master Meow-Chi owner!



[You're reading an excerpt. Click here to read official HASBRO MEOOW-CHI user guide](http://yourpdfguides.com/dref/1194894)  
<http://yourpdfguides.com/dref/1194894>

**Manual abstract:**

Make certain the area is clear of obstacles so Meow-Chi can turn and dance freely. Meow-Chi should be played with indoors. Meow, Meow! MEOW-CHI'S SENSORS Just like a real cat, Meow-Chi is very unpredictable. Activate one of his sensors to see what he will do! Meow-Chi has five sensors: a light sensor, sound sensor, and a touch sensor. He also has a magnetic sensor that allows him to play with his mouse play toy, which will be described in the Mouse Play Toy section, and an infrared sensor that enables Meow-Chi to play with other Robo-Chi™ Pets. This function is described in the Communicating with Other Meow-Chi's and Robo-Chi Pets section of this guide. To activate the Light sensor: - Wait until Meow-Chi stops moving. @@With your new Meow-Chi™, you now have a special new friend. Meow-Chi is the Interactive Cat that loves to play, sing and dance! @@@@Because Meow-Chi's behavior pattern does start as a kitten, it is very important to play with him often while he is still "developing". @@@@@@You can press the sensor up to 5 times and Meow-Chi will respond in many different ways! Many of Meow-Chi's responses are affected by Meow-Chi's biorhythmic level, the more you play with him, the happier he will be.

**CHECKLIST** The following items are included in this package: 1 Meow-Chi, the Interactive Cat If anything is missing, please contact 1 Mouse Play Toy the Tiger Electronics' Customer 1 Instruction Guide Service department and they will send you any missing item. MEOW-CHI'S EYES Meow-Chi's eyes are very expressive; they will help you to know whether Meow-Chi is happy, sad, sleepy or hungry. Watch Meow-Chi's eyes, can you tell what he is feeling? IR SENSOR TOUCH SENSOR MAGNETIC SENSOR LIGHT SENSOR TOUCH SENSOR SOUND SENSOR MOUSE PLAY TOY Happy Meow-Chi Sad Meow-Chi Male Meow-Chi Female Meow-Chi BATTERY INSTALLATION IMPORTANT: Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries. AAA/LR03 1.

5V AAA/LR03 1.5V AAA/LR03 1.5V MEOW-CHI'S BIORHYTHM Graphs shown below represent the 8 biorhythmic levels of Meow-Chi. Each level lasts about 30 minutes and determines Meow-Chi's mood and behaviors. For example, when Meow-Chi is in level 1 he will be unhappy almost all the time and will have sad eyes.

@@@@@@@@@2. @3. Attach the battery compartment door and fasten the screw. 4. Press the RESET button located on the back of Meow-Chi's head. @@NOTE: Meow-Chi will begin to move as soon as you install the batteries. There is no on/off switch. To turn off, either remove the batteries or see the section titled "SLEEP". HELPFUL TIP: Meow-Chi is a mechanical, robotic toy. The mechanical sound you hear when Meow-Chi moves is normal.

Happy Unhappy Level 3: Remember to watch Meow-Chi's eyes, they tell you how he feels. To ensure proper function: - Happy Unhappy Level 4: Getting happier, Meow-Chi likes it when you dance with him! Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Battery installation should be done by an adult. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged (if removable). Rechargeable batteries are only to be charged under adult supervision. (if removable). Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Replace with new batteries at the first sign of erratic operation. Happy Unhappy Level 5: Meow-Chi hears when you clap or say "Good Cat!" Happy Unhappy Level 6 (Home position): Meow-Chi starts at this level when reset. CAUTION: - As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths.

@@@@@@@He will respond with happy eyes and playful sounds. - Mouse Play Toy does not require batteries. - Do not attempt to open mouse toy. @@@@@Do not leave unit in direct sunlight. @@@@@@Wait until Meow-Chi stops moving.

2. Hold your hand completely over Meow-Chi's eyes. 3. @4. @@You will hear a different song for each number of beeps. 5.

@@@@@@@@@This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship. During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER. Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of US\$17.00.

Payments must be by check or money order payable to Tiger Electronics, Ltd. THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT. @@Butterfield Road, Unit 1023 Vernon Hills, IL 60061, U.S.A. @@@@@@@@@@This warranty gives you specific rights, and you may also have other rights which vary from state to state. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. @@@@- Increase the separation between the equipment and receiver. @@@@When he gets tired, Meow-Chi might make noise to get your attention, or even turn back and forth and make angry eyes. After about 8 minutes, if he does not get anyone to play with him, Meow-Chi will then fall into a deep sleep. To wake up Meow-Chi when he is in a deep sleep, press either Touch sensor.

If Meow-Chi was sad when he fell asleep, it might take slightly longer for him to completely wake up, so you might need to touch his head sensor more than once. If Meow-Chi was happy when he fell asleep, he should wake up quickly. COMMUNICATING WITH OTHER MEOW-CHI'S AND ROBO-CHITM PETS Meow-Chi loves to communicate with other Meow-Chi's and other Robo-Chi Pe.



[You're reading an excerpt. Click here to read official HASBRO MEOW-CHI user guide](http://yourpdfguides.com/dref/1194894)  
<http://yourpdfguides.com/dref/1194894>