

 


# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO N-STRIKE RAIDER RAPID FIRE CS-35. You'll find the answers to all your questions on the HASBRO N-STRIKE RAIDER RAPID FIRE CS-35 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO N-STRIKE RAIDER RAPID FIRE CS-35  
User guide HASBRO N-STRIKE RAIDER RAPID FIRE CS-35  
Operating instructions HASBRO N-STRIKE RAIDER RAPID FIRE CS-35  
Instructions for use HASBRO N-STRIKE RAIDER RAPID FIRE CS-35  
Instruction manual HASBRO N-STRIKE RAIDER RAPID FIRE CS-35


### CLEARING A JAM

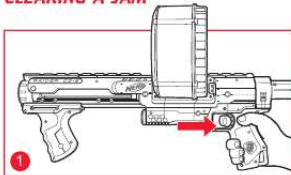

 
1 If the mechanism seems stuck, try pulling the trigger first.

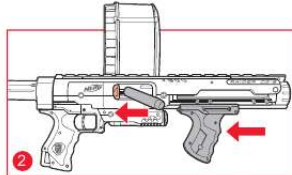

 
2 Pull Slam Fire Handle back and open Jam Clearing Door to remove jammed dart.

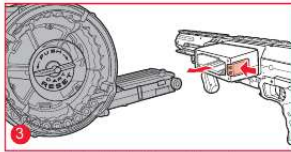


3 If jammed dart is in Drum Magazine, press Clip Release Button to unload Drum Magazine.

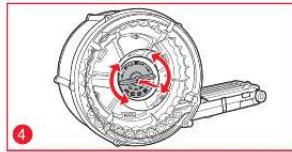

4 Press Jam Release Knob in and turn left and right to reposition dart.

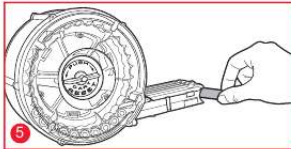

5 If that doesn't work, remove darts from Drum Magazine opening until you've removed the jammed dart.

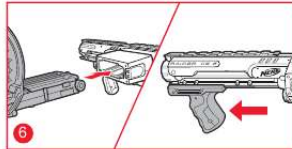

6 Once jam is cleared, replace Drum Magazine and slide Slam Fire Handle forward. This should load another dart.



Product and colors may vary.  
© 2009 Hasbro. All Rights Reserved.  
TM & © denote U.S. Trademarks.  
U.S. Pat. Nos. 5529050, 7287526 and Patent Pending.  
92356/923550900 Asst. P/N 6969760000



NERF.COM  
FOR MORE PRODUCTS AND OFFERS  
Questions? Call: 1-800-327-5264

AGES 6+

N-STRIKE Tactical Rail Accessories and the shoulder stock from the N-STRIKE RECON CS-6™ are compatible with this blaster! You can also use the Drum Magazine with any blaster that uses Quick Reload Clips.

**CAUTION:** Do not aim at eyes or face.  
**TO AVOID INJURY:** Use only darts designed for this product.  
Do not modify darts or dart blaster.

**N-STRIKE RAIDER RAPID FIRE CS-35™ BLASTER**



[You're reading an excerpt. Click here to read official HASBRO N-STRIKE RAIDER RAPID FIRE CS-35 user guide](http://yourpdfguides.com/dref/3607911)  
<http://yourpdfguides.com/dref/3607911>

**Manual abstract:**

3 If jammed dart is in Drum Magazine, press Clip Release Button to unload Drum Magazine. 4 Press Jam Release Knob in and turn left and right to reposition dart. Do not aim at eyes or face. TO AVOID INJURY: Use only darts designed for this product. ©©©©© 2009 Hasbro. All Rights Reserved. TM

& ® denote U.S. Trademarks. U.

S. Pat. Nos. 5529050, 7287526 and Patent Pending. 92356/923550900 Asst.

@@@1. Attach Drum Connector as shown. Be sure Clip Release Button faces rear of blaster. 2. Attach stock.

Press Stock Extender Button to adjust length of stock for your arm length. To remove stock, slide Stock Release Switch down. 3. Matching direction of dart image on Drum, load 1 dart at a time. Drum Magazine can hold up to 35 CLIP-SYSTEM DARTS. @@.



[You're reading an excerpt. Click here to read official HASBRO N-STRIKE RAIDER RAPID FIRE CS-35 user guide](http://yourpdfguides.com/dref/3607911)  
<http://yourpdfguides.com/dref/3607911>