




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HASBRO POO-CHI. You'll find the answers to all your questions on the HASBRO POO-CHI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HASBRO POO-CHI User guide HASBRO POO-CHI Operating instructions HASBRO POO-CHI Instructions for use HASBRO POO-CHI Instruction manual HASBRO POO-CHI



Poo-Chi, the Interactive Puppy, is a new type of friend! Poo-Chi expresses his emotions through his bright expressive eyes, floppy ears and waggy tail. Easy touch of finger will allow him to bark, run, play and wag his tail. Poo-Chi uses advanced technology to create real life emotional responses that adapt and change as you play with him. The more you play with Poo-Chi, the happier he becomes - he may even sing a special song for you!

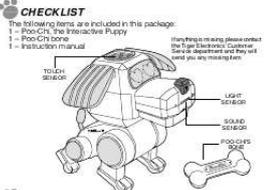

BATTERY INSTALLATION
IMPORTANT: Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.
1. Unscrew and remove the battery compartment door on the back of Poo-Chi's head.
2. Insert 3 AAA/LR03 batteries as shown inside the battery compartment.
3. Attach the battery compartment door and tighten the screw.
4. Press the **RESET** button located inside Poo-Chi's mouth (see **RESET** section for more details).
NOTE: Poo-Chi will begin to move as soon as you install the batteries. There is no on/off switch. To turn off, either remove the batteries or see the section titled "SLEEP".
HELPFUL TIP: Poo-Chi is a mechanical robotic toy. The mechanical sound you hear after Poo-Chi moves is normal.

To ensure proper function:
- Do not mix old and new batteries.
- Do not mix alkaline and/or rechargeable batteries.
- Battery installation should be done by adult.
- Rechargeable batteries are not to be recharged.
- Rechargeable batteries are not to be used after their shelf life.
- Rechargeable batteries are to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be replaced with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Replace with new batteries at the first sign of erratic operation.

CAUTION:
- As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.

SET UP
Poo-Chi will play the best on a smooth, flat surface. Make certain that the area is clear of obstacles so Poo-Chi can stand, sit and dance on his spine! Poo-Chi should be played indoors.

POO-CHI'S SENSORS
Poo-Chi is very expressive. Activate one of Poo-Chi's sensors to see what he will do! Poo-Chi has three sensors: light sensor, sound sensor and a touch sensor.

To activate the **LIGHT** sensor:
WAIT until Poo-Chi stops moving. Simply place your hand in front of Poo-Chi's nose. When you move your hand away from Poo-Chi's nose, Poo-Chi will respond.



To activate the **SOUND** sensor:
WAIT until Poo-Chi stops moving. Simply clap your hands or make a loud sound. Poo-Chi will respond.



To activate the **TOUCH** sensor:
WAIT until Poo-Chi stops moving. Simply press the button on top of Poo-Chi's head. If you press the head button once, Poo-Chi will respond. If you press the head button up to six times quickly to see what Poo-Chi will do, Poo-Chi loves to play and be happy!



POO-CHI'S EYES
Poo-Chi's eyes are very expressive. Poo-Chi's eyes will tell you if he is happy, sad, sleepy and that he loves you! Poo-Chi can even blink!



POO-CHI'S BIORHYTHM
Graphs shown below represent the 8 biorhythm levels of Poo-Chi. Each level lasts about 30 minutes and determines Poo-Chi's feelings and behavior. For example, when Poo-Chi is in level 1 he will be unhappy most of the time, and will probably have sad eyes. In level 8 Poo-Chi will be happy almost all of the time, and will sing you special songs!

Remember: If Poo-Chi is sad, it's very easy to make him happy again by playing with him. Don't forget, Poo-Chi has three different sensors that mood sensor! (Refer to Poo-Chi's Sensors section).



You're reading an excerpt. [Click here to read official HASBRO POO-CHI user guide](http://yourpdfguides.com/dref/1195726)
<http://yourpdfguides.com/dref/1195726>

Manual abstract:

Make certain that the area is clear of obstacles so Poo-Chi can stand, sit and dance on his tiptoes! Poo-Chi should be played indoors. POO-CHI'S SENSORS Poo-Chi is very unpredictable. Activate one of Poo-Chi's sensors to see what he will do! Poo-Chi has three sensors: light sensor, sound sensor and a touch sensor. To activate the LIGHT sensor: - WAIT until Poo-Chi stops moving. - Slowly pass your hand in front of Poo-Chi's nose. - When you move your hand away from Poo-Chi's nose, Poo-Chi will respond. Poo-Chi, the Interactive Puppy, is a new type of friend! @@Enjoy hours of playful singing, fun dancing and real puppy sounds. @@The more you play with Poo-Chi, the happier he becomes he may even sing a special song for you! To activate the SOUND sensor: - WAIT until Poo-Chi stops moving. - Simply clap your hands or make a loud sound. Poo-Chi will respond.

CHECKLIST The following items are included in this package: 1 Poo-Chi, the Interactive Puppy 1 Poo-Chi bone If anything is missing, please contact the Tiger Electronics' Customer 1 Instruction manual Service department and they will send you any missing item. TOUCH SENSOR LIGHT SENSOR SOUND SENSOR POO-CHI'S BONE To activate the TOUCH sensor: - WAIT until Poo-Chi stops moving. - Simply press the button on top of Poo-Chi's head. If you press the head button once, Poo-Chi will respond. If you press the head button twice, Poo-Chi will respond.

Press the head button up to six times quickly to see what Poo-Chi will do. @@@@Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries. 1. Unscrew and remove the battery compartment door on the back of Poo-Chi's head. 2.

Insert 3 "AAA"/LR03 batteries as shown inside the battery compartment. 3. Attach the battery compartment door and fasten the screw. 4. Press the RESET button located inside Poo-Chi's mouth (see RESET section for more details). @@There is no on/off switch. @@HELPFUL TIP: Poo-Chi is a mechanical, robotic toy. @@@@Don't forget, Poo-Chi has three different sensors that need attention! (Refer to Poo-Chi's Sensors section). Level 1: Poo-Chi is most unhappy and needs much care and affection. Happy Unhappy Level 2: Poo-Chi is still sad, maybe feeding Poo-Chi his bone will help! Happy Unhappy Level 3: Remember to watch Poo-Chi's eyes, they tell you how he feels.

To ensure proper function: - Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Battery installation should be done by adult. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged (if removable). - Rechargeable batteries are only to be charged under adult supervision (if removable). - Only batteries of the same or equivalent type as recommended are to be used. - Batteries are to be inserted with the correct polarity. - Exhausted batteries are to be removed from the toy. - The supply terminals are not to be short-circuited.

Replace with new batteries at the first sign of erratic operation. Happy Unhappy Level 4: Getting happier, Poo-Chi loves to be petted! Happy Unhappy Level 5: Poo-Chi hears when you clap or say "Good Dog!" Happy Unhappy CAUTION: Level 6 (Home position): Poo-Chi starts at this level when reset. Happy Unhappy Level 7: Poo-Chi's very happy, he might even sing you a special song! - As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. - Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.

Happy Unhappy Level 8: Congratulations on being a World Class Poo-Chi Owner, watch for his special tricks! Happy Unhappy II I POO-CHI'S BONE Poo-Chi loves to be cared for and the more you take care of Poo-Chi, the happier he will be. @@@@Poo-Chi's bone does NOT require batteries. Do not attempt to open the bone. @@Do not leave unit in direct sunlight. @@@@You can wake up Poo-Chi by pressing the head sensor.

@@@@Wait until Poo-Chi stops moving. 2. Hold your hand completely over Poo-Chi's nose. 3. @@Poo-Chi will then sit down. 4. Wait until you hear 3 short beeps, remove your hand, then quickly press the head button again as follows: press the head button 1 times to hear Wedding March press the head button 2 times to hear Camptown Races press the head button 3 times to hear Bingo press the head button 4 times to hear I've Been Working on the Railroad press the head button 5 times to hear Beethoven No 9 press the head button 6 times to hear When the Saints go Marching In During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER. Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of US\$17.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT. @@Butterfield Road, Unit 1023 Vernon Hills, IL 60061, U.S.A. @@@@This warranty gives you specific rights, and you may also have other rights which vary from state to state. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. @@@@- Increase the separation between the equipment and receiver. @@@@Just like a real puppy, Poo-Chi will fall asleep when it is dark or when no one is playing with him. When Poo-Chi gets tired, he will sit down and his eyes will flash and close. You may even hear a little snore! Sometimes it takes Poo-Chi a long time to fall asleep.

First, he will make noises to try to get your attention.



[You're reading an excerpt. Click here to read official HASBRO POO-CHI user guide](http://yourpdfguides.com/dref/1195726)

<http://yourpdfguides.com/dref/1195726>

His eyes may even start to flash, depending on his mood. If he doesn't get your attention after 3 minutes, he will sit down and snore. Then if he still doesn't get your attention after the snoring, he will fall into a deep sleep. To wake up Poo-Chi when he is in a deep sleep, press his head button.



[You're reading an excerpt. Click here to read official HASBRO POO-CHI user guide](http://yourpdfguides.com/dref/1195726)

<http://yourpdfguides.com/dref/1195726>