

Manual abstract:

Insert 2 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw. **IMPORTANT: BATTERY INFORMATION**
CAUTION: 14 15 CoMPARTMENT door 16 FCC STATEMENT This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. @@@@This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. @@@@ · Increase the separation between the equipment and receiver.

@@@@Always follow the instructions carefully. @@2.

@@3. Remove exhausted or dead batteries from the product. 4. Remove batteries if product is not to be played with for a long time. 5. Do not short-circuit the supply terminals. 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. @@7. @@Always remove from the product before recharging.

Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.** CHANGING TO ROBOT 18 2 3 19 20 1 4 5 TM*
ROBOT MODE 21 22 23 24 A B 6 7 A B 8 9 TM* 1 2 A 10 11 3 4 B 5 12 13 6 7 8 9 A B 14 15 16 17 10 11 12 © 2010 Paramount Pictures Corporation.
Manufactured under license from TOMY Company, Ltd. ®* and/or TM* & © 2010 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. * Product and colors may vary.



[You're reading an excerpt. Click here to read official HASBRO TRANSFORMERS SENTINEL PRIME user guide](http://yourpdfguides.com/dref/3981618)
<http://yourpdfguides.com/dref/3981618>